

COMMERCIAL TRAINING TOOLBOX TIPS

Lifting & Rigging Instructions for Rooftop Units

Applies to all Lennox Rooftop Units

Helpful Resources

1. Installation manual for rooftop unit

Before lifting the unit, be sure that it has been properly rigged and connected to the crane.

1. Refer to unit installation manual for unit weight.
2. Ensure that all panels are in place.
3. A spreader bar, or “H-bar”, must always be used during the lift. See Figure 1 below.
4. The lifting point should be directly above the center of gravity.

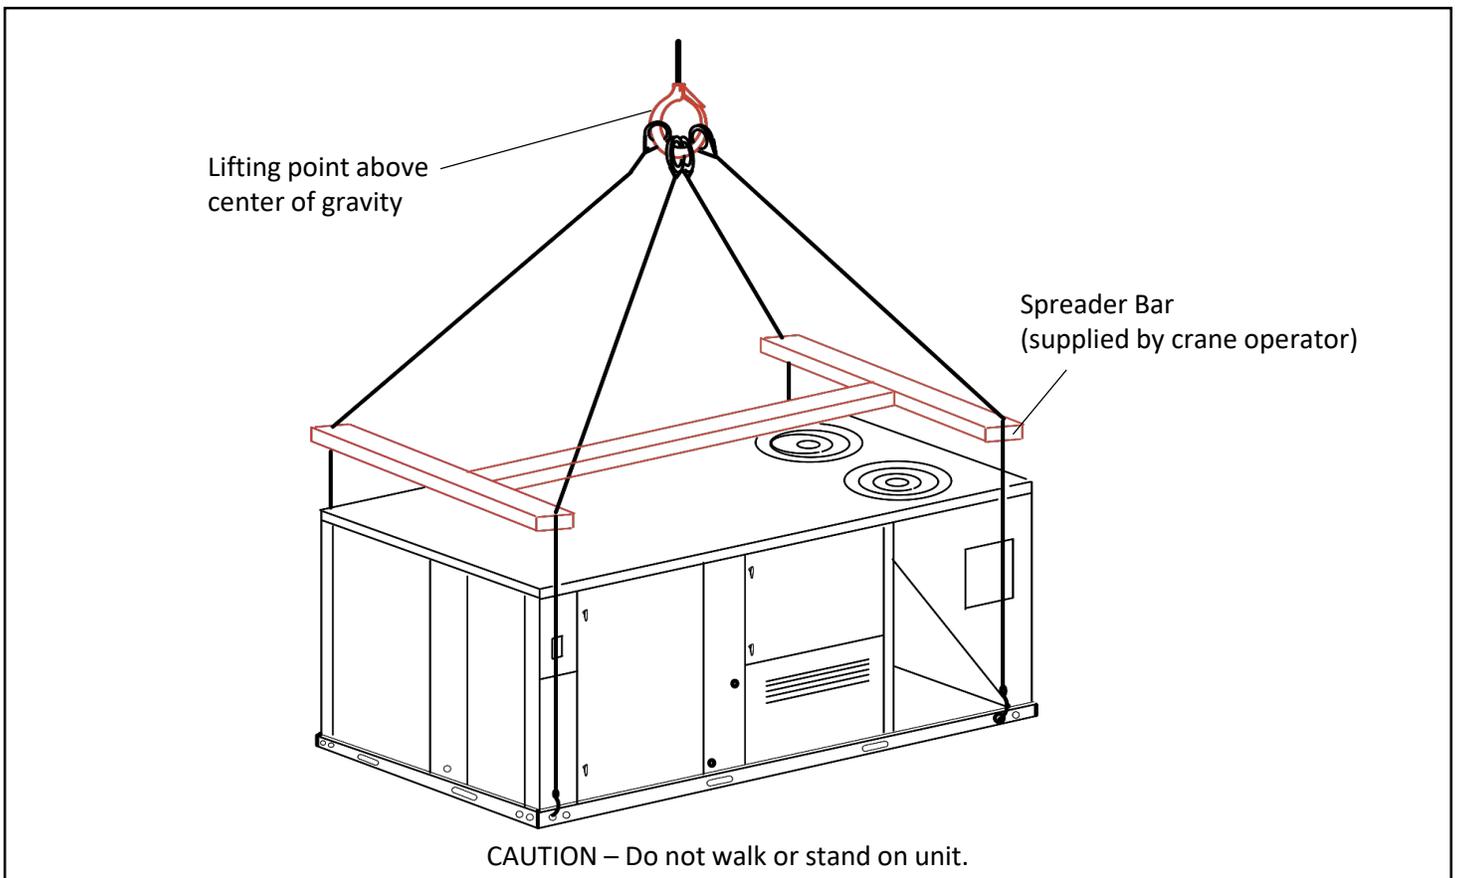


Figure 1. Use a Spreader Bar When Lifting the Rooftop Unit



Failure to use spreader bars when lifting can cause the unit to twist, leading to misaligned doors or damaged coils or other internal components. Lennox will not be responsible for damage caused by improper lifting or rigging of the unit.

MORE Training Toolbox Tips Available!
Click [here](#) to download them all.

Self-Service Technical Support with No Wait Times! Click the black logos to download these apps.

Click [here](#) to register for any of the Lennox Commercial Product Technical Training Webinars.

