

INSTALLATION INSTRUCTIONS FOR COMBINATION AIR HOODS (18D80; 620262-01) USED WITH LG/LC/LH/LD/KG/KC/KH 024-090 UNITS

Shipping and Packing List

Package 1 of 1 contains:

- 1- Hood top
- 2- Hood sides
- 1- Hood divider panel
- 1- Hood top filter bracket
- 1- Filter
- 1- Bag assembly containing:
 - #10- 32 X 1/2 Thread forming screws
 - #10- 16 X 5/8 Sheet metal screws

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier.

⚠ CAUTION

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.

Application

This combination hood replaces both fresh/outdoor air and exhaust air hoods in downflow air discharge applications.

Outdoor Air Hoods - Downflow

- 1 - Assemble hood as shown in FIGURE 1. Slide top of hood into the ends of pivot bracket (reuse existing bracket).
- 2 - Secure hood sides to unit.
- 3 - Position filter in place and install top filter bracket to secure filter in place.
- 4 - Caulk ends of pivot bracket to seal watertight.

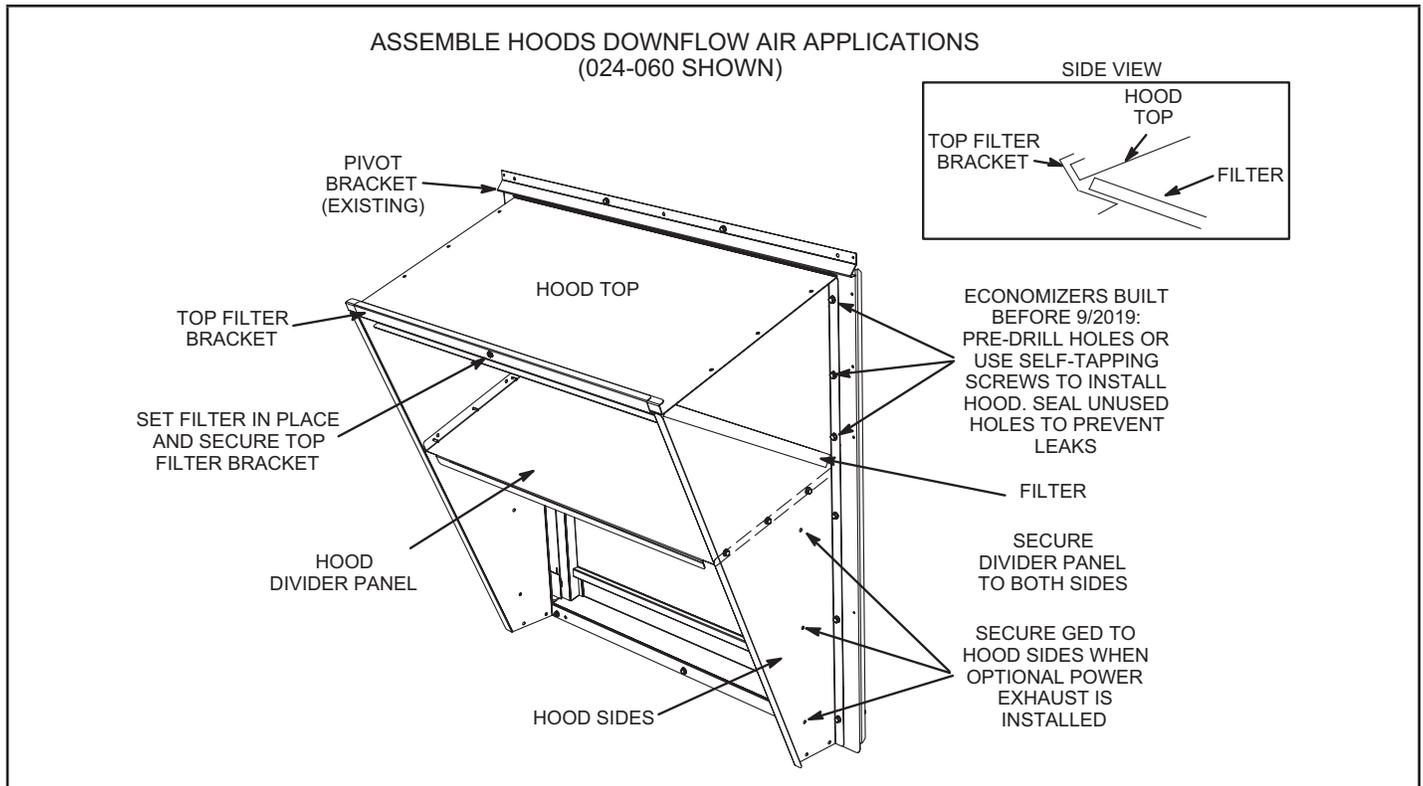


FIGURE 1