


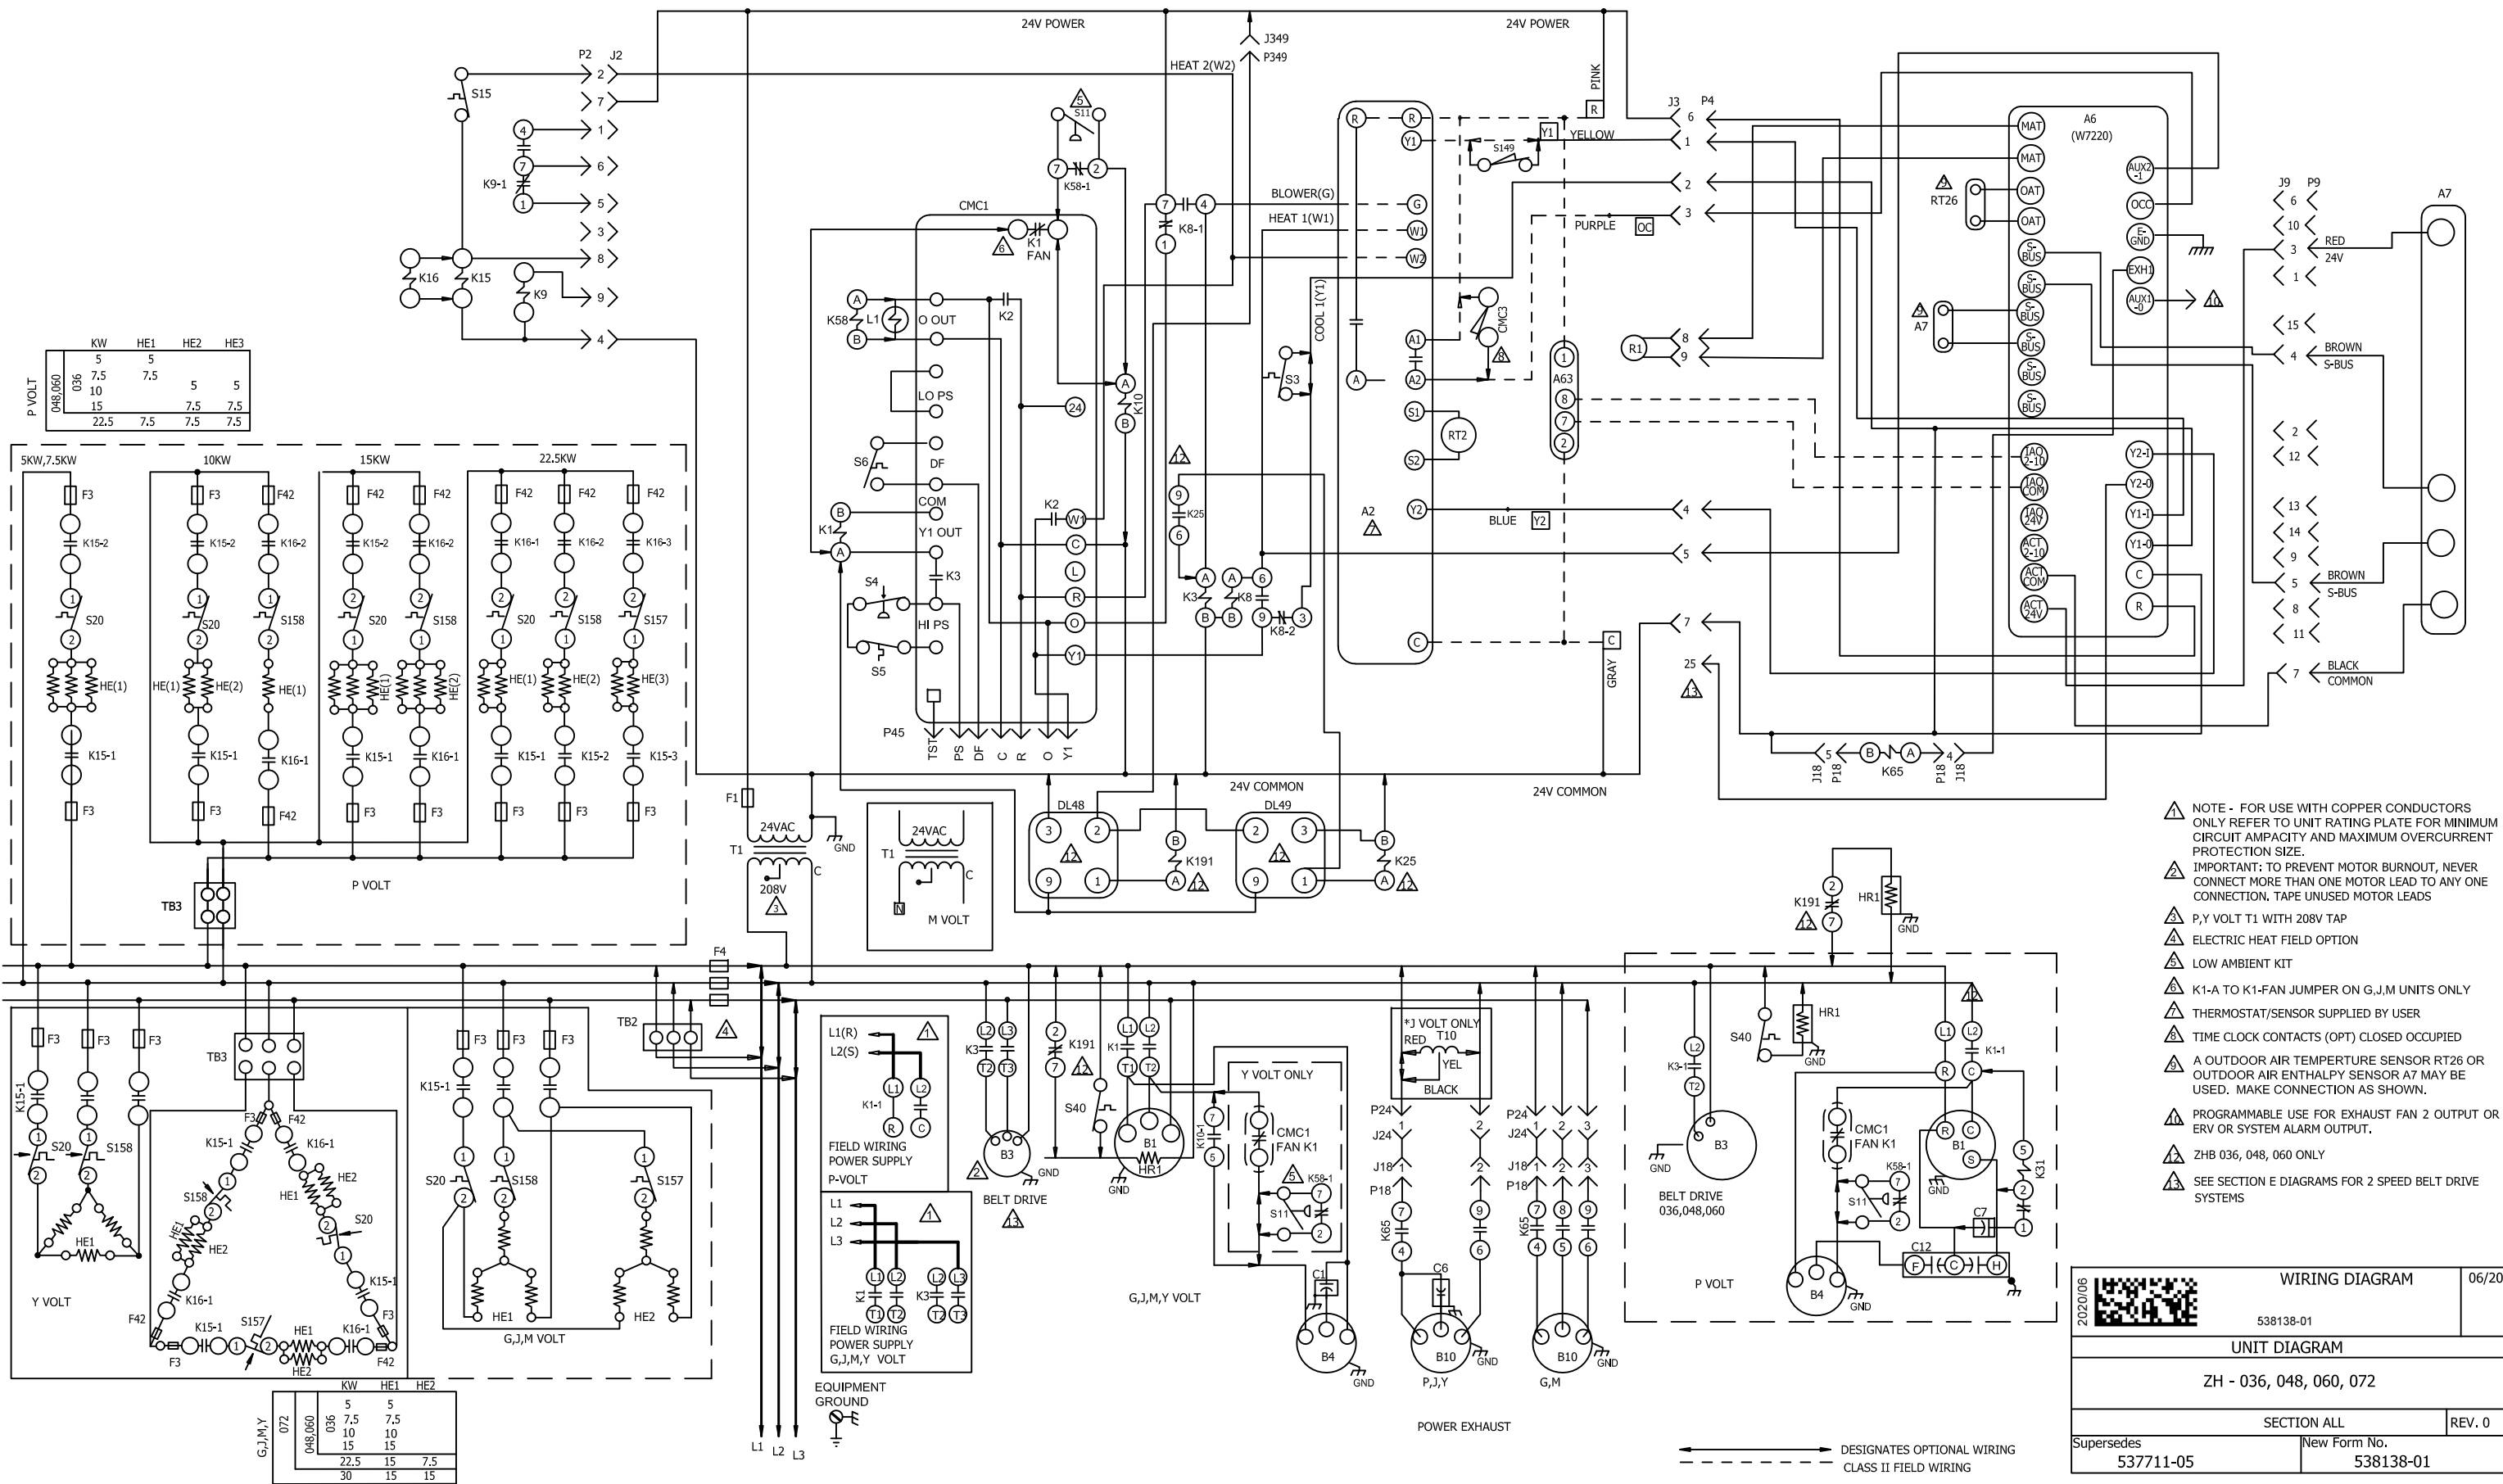

-  NOTE - FOR USE WITH COPPER CONDUCTORS ONLY REFER TO UNIT RATING PLATE FOR MINIMUM CIRCUIT AMPACITY AND MAXIMUM OVERCURRENT PROTECTION SIZE.
-  IMPORTANT: TO PREVENT MOTOR BURNOUT, NEVER CONNECT MORE THAN ONE MOTOR LEAD TO ANY ONE CONNECTION. TAPE UNUSED MOTOR LEADS
-  P,Y VOLT T1 WITH 208V TAP
-  ELECTRIC HEAT FIELD OPTION
-  LOW AMBIENT KIT
-  K1-A TO K1-FAN JUMPER ON G,J,M UNITS ONLY
-  THERMOSTAT/SENSOR SUPPLIED BY USER
-  TIME CLOCK CONTACTS (OPT) CLOSED OCCUPIED
-  A OUTDOOR AIR TEMPERATURE SENSOR RT26 OR OUTDOOR AIR ENTHALPHY SENSOR A7 MAY BE USED. MAKE CONNECTION AS SHOWN.
-  PROGRAMMABLE USE FOR EXHAUST FAN 2 OUTPUT OR ERV OR SYSTEM ALARM OUTPUT.
-  ZHB 036, 048, 060 ONLY
-  SEE SECTION E DIAGRAMS FOR 2 SPEED BELT DRIVE SYSTEMS

2020/06		WIRING DIAGRAM 538138-01	06/20
UNIT DIAGRAM ZH - 036, 048, 060, 072			
SECTION ALL			REV. 0
Supersedes 537711-05		New Form No. 538138-01	