

88K51	INSTALLATION INSTRUCTIONS
KITS COMMON TO COOLING AND HEAT PUMP EQUIPMENT	COIL GUARDS FOR LGA/LGC/LCA/LCC 090-150 UNITS

APPLICATION

The Coil Guard (88K51) is designed to prevent damage to the condenser coil of the HVAC unit. The following parts are included in the package:

SHIPPING AND PACKING LIST

- 1 ea. - Coil Guard
- 1 ea. - Hardware Package
 - 1 ea - Installation Instruction
 - 6 ea - #10 - 1/2" Self Drilling Screws

CAUTION!!

WHEN INSTALLING GUARD, USE CARE TO
NOT PUNCTURE CONDENSER COIL

INSTALLATION

STEP 1:

Center Coil Guard over condenser coil. Secure coil guard to the rooftop unit using the supplied screws. See Figure 1.

NOTE: To avoid damage to coil, never use screws longer than 1/2".

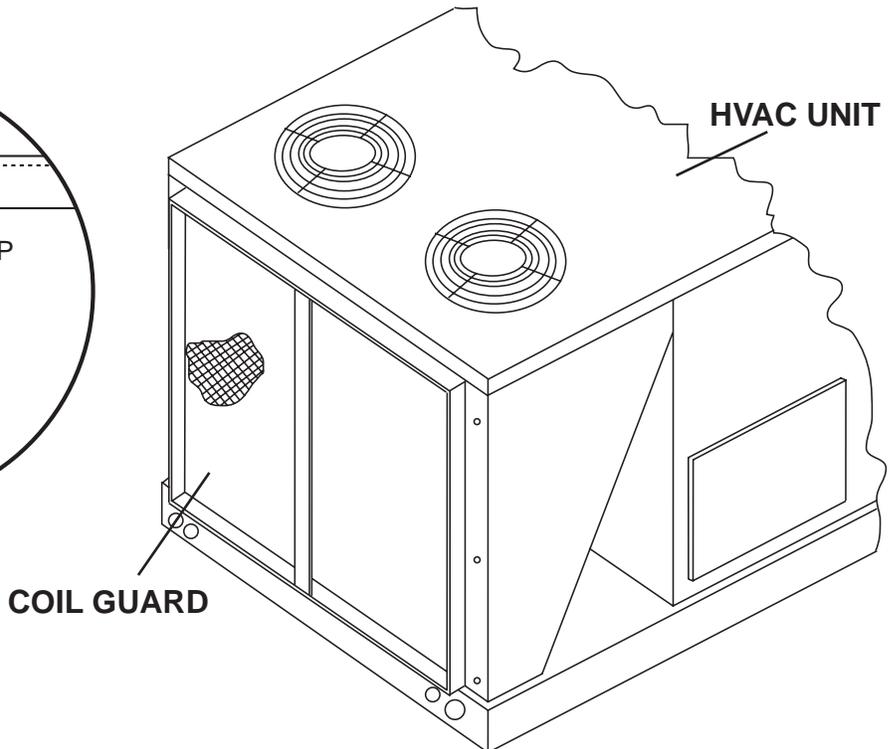
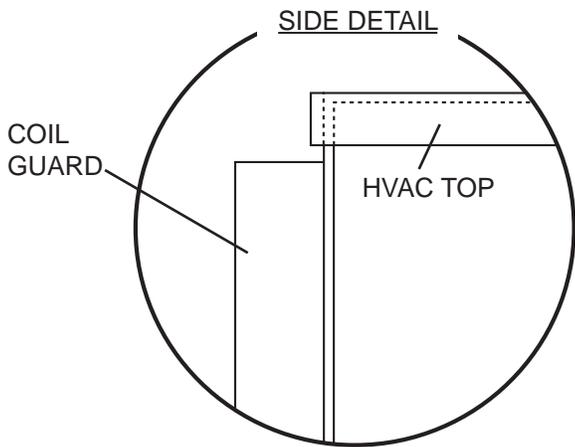
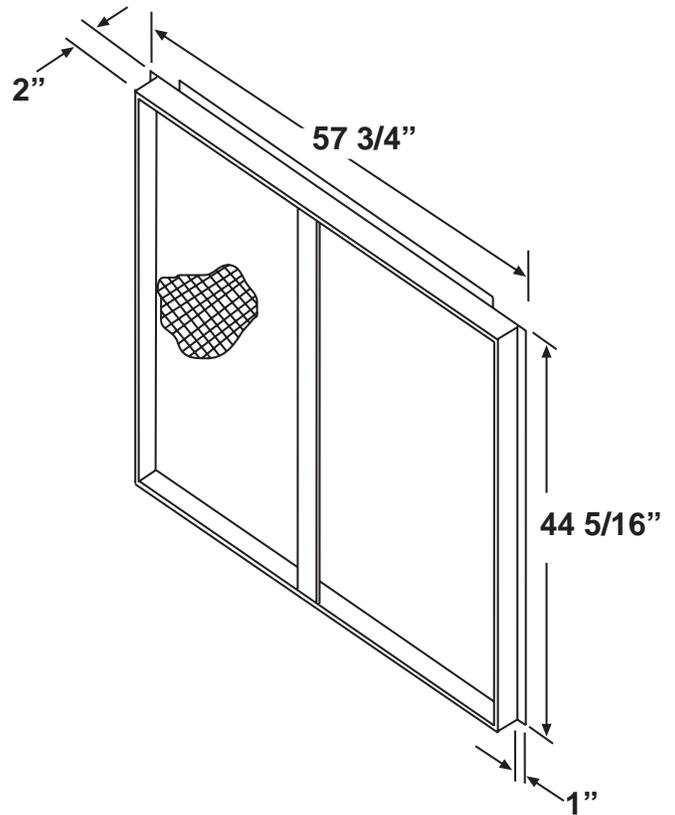


FIGURE 1