


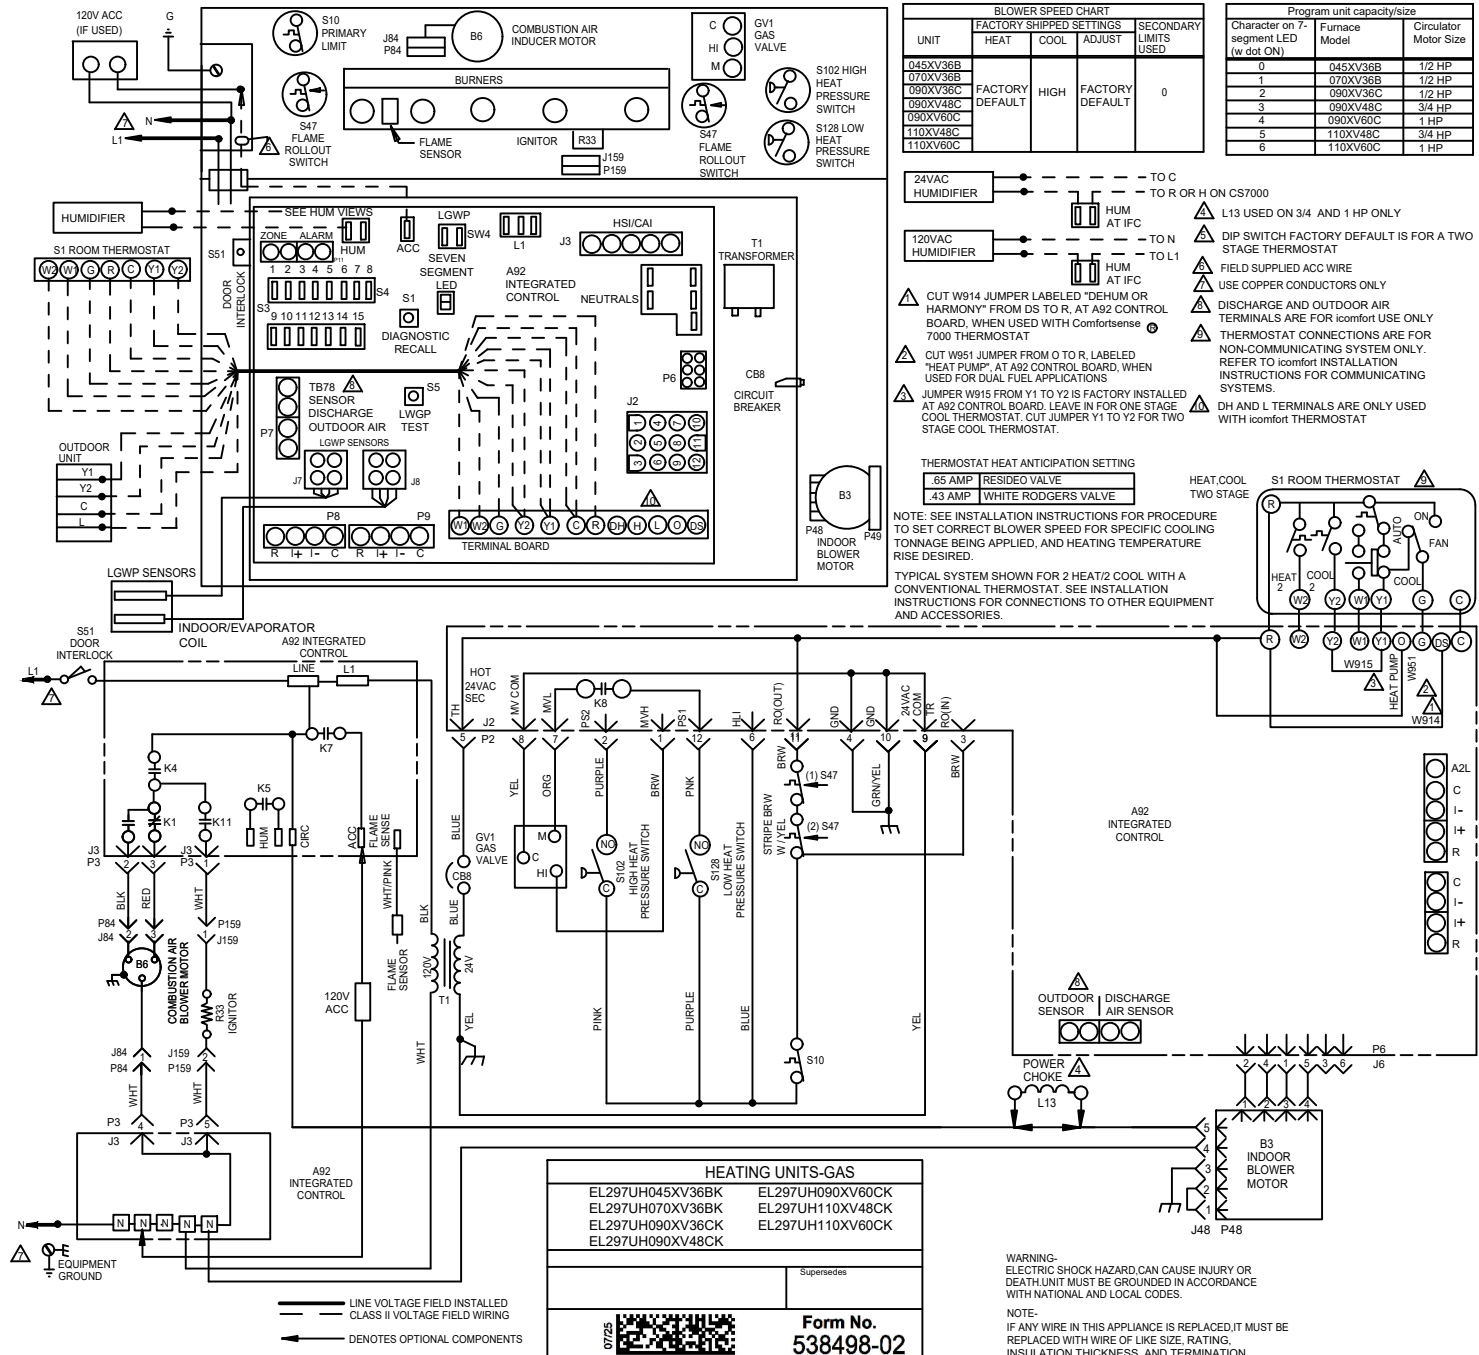

BLOWER SPEED CHART			
UNIT	FACTORY SHIPPED SETTINGS		SECONDARY LIMITS USED
	HEAT	COOL	
045XV36B	FACTORY DEFAULT	HIGH	FACTORY DEFAULT
070XV36B			
090XV36C			
090XV48C			
090XV60C			
110XV48C			
110XV60C			

Program unit capacity/size		
Character on 7-segment LED (w dot ON)	Furnace Model	Circulator Motor Size
0	045XV36B	1/2 HP
1	070XV36B	1/2 HP
2	090XV36C	1/2 HP
3	090XV48C	3/4 HP
4	090XV60C	1 HP
5	110XV48C	3/4 HP
6	110XV60C	1 HP

24VAC HUMIDIFIER

120VAC HUMIDIFIER

CUT W914 JUMPER FROM DS TO R, AT A92 CONTROL BOARD, WHEN USED WITH Comfortsense 7000 THERMOSTAT

CUT W951 JUMPER FROM O TO R, LABELED "HEAT PUMP", AT A92 CONTROL BOARD, WHEN USED FOR DUAL FUEL APPLICATIONS

JUMPER W915 FROM Y1 TO Y2 IS FACTORY INSTALLED AT A92 CONTROL BOARD. LEAVE IN FOR ONE STAGE COOL THERMOSTAT. CUT JUMPER Y1 TO Y2 FOR TWO STAGE COOL THERMOSTAT.

THERMOSTAT HEAT ANTICIPATION SETTING

.65 AMP	RESIDEO VALVE
.43 AMP	WHITE RODGERS VALVE

HEAT, COOL TWO STAGE

NOTE: SEE INSTALLATION INSTRUCTIONS FOR PROCEDURE TO SET CORRECT BLOWER SPEED FOR SPECIFIC COOLING TONNAGE BEING APPLIED, AND HEATING TEMPERATURE RISE DESIRED.

TYPICAL SYSTEM SHOWN FOR 2 HEAT/2 COOL WITH A CONVENTIONAL THERMOSTAT. SEE INSTALLATION INSTRUCTIONS FOR CONNECTIONS TO OTHER EQUIPMENT AND ACCESSORIES.

S1 ROOM THERMOSTAT

A92 INTEGRATED CONTROL

DISCHARGE AIR SENSOR

POWER CHOKE

B3 INDOOR BLOWER MOTOR

HEATING UNITS-GAS	
EL297UH045XV36BK	EL297UH090XV60CK
EL297UH070XV36BK	EL297UH110XV48CK
EL297UH090XV36CK	EL297UH110XV60CK
EL297UH090XV48CK	
Supersedes	
Form No. 538498-02	

0725

0211

Libro U.S.A.

WARNING-
ELECTRIC SHOCK HAZARD. CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.

NOTE-
IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION