


8-1/2" wide x 8" tall

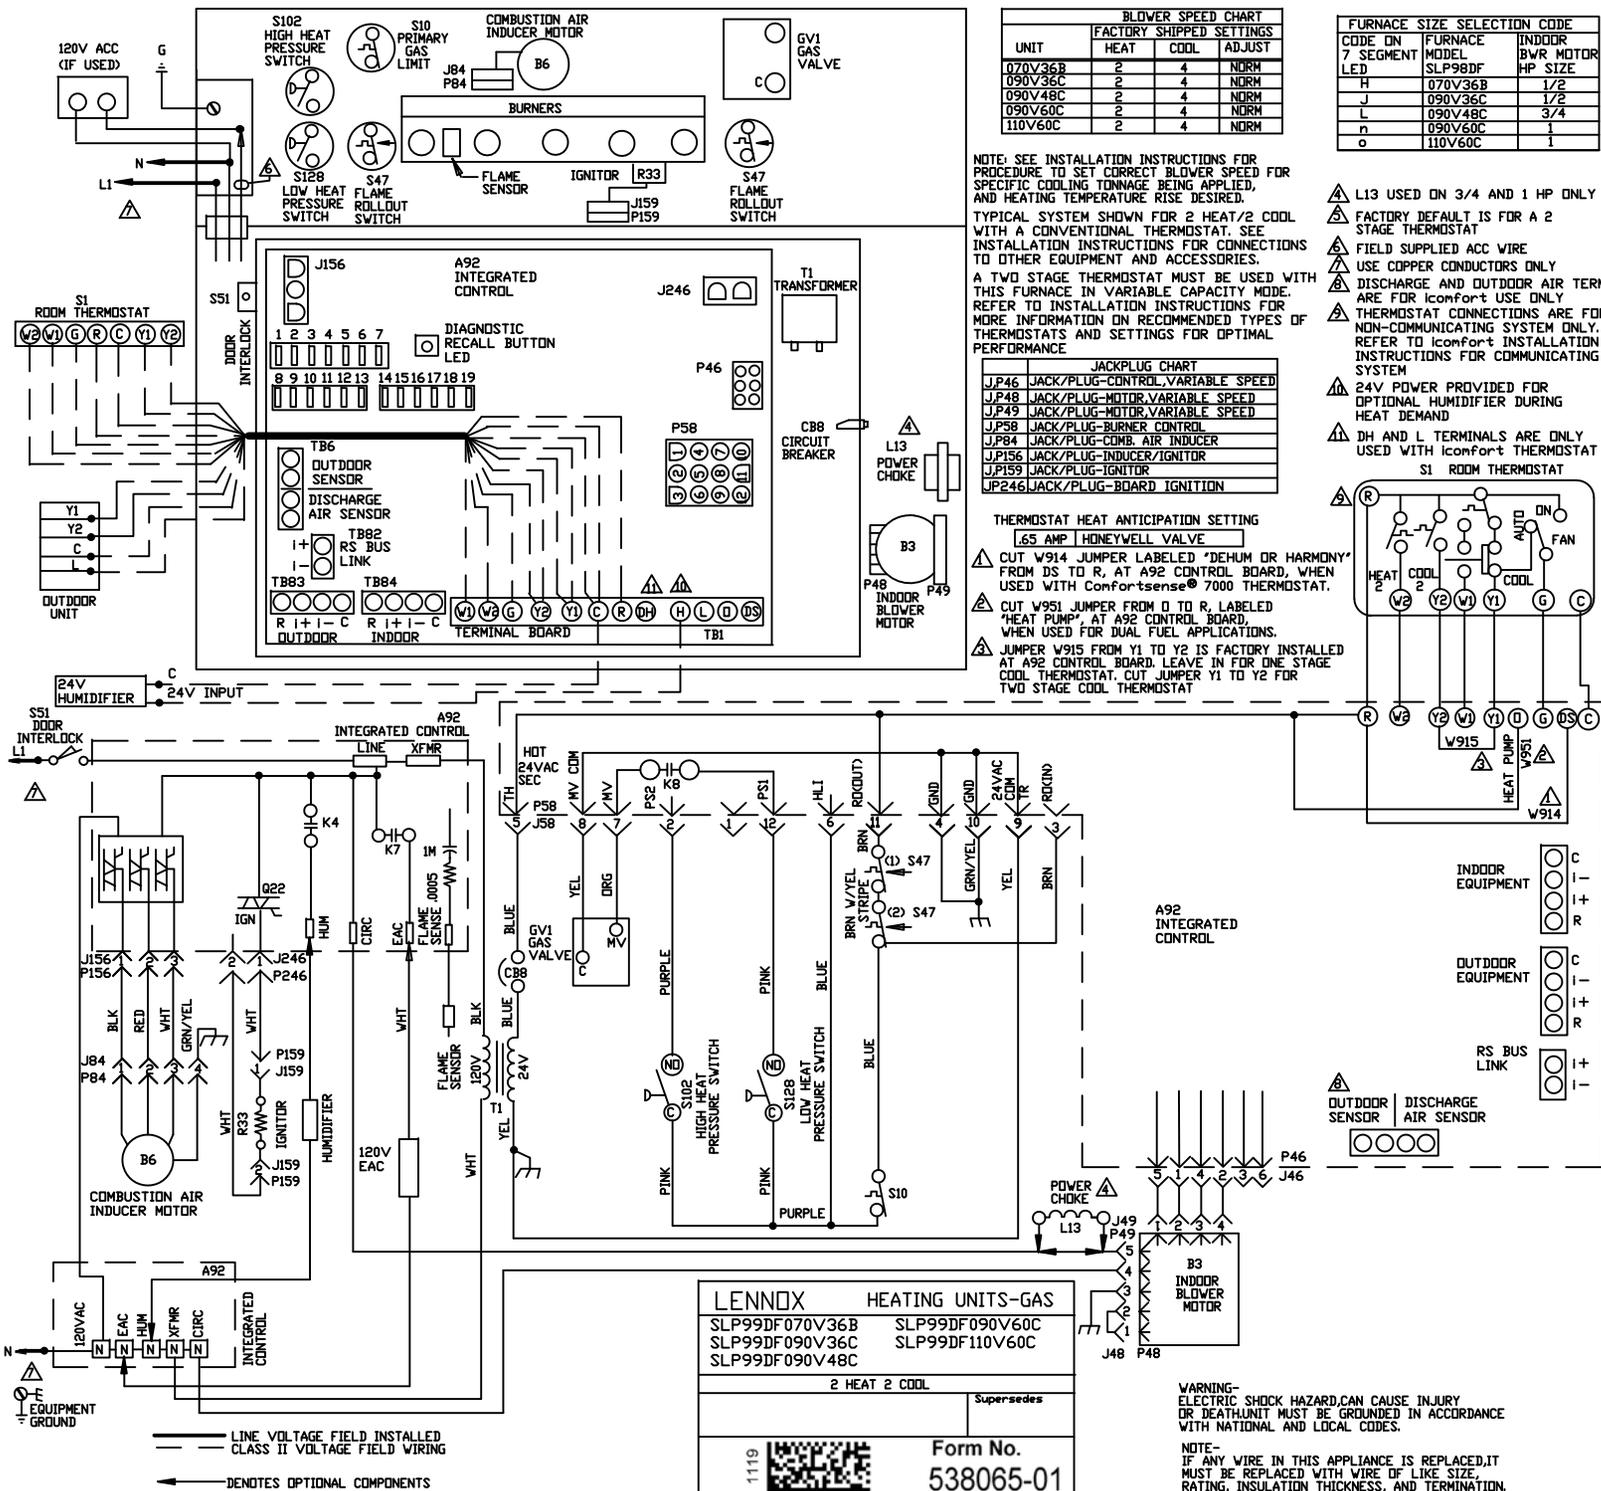

BLOWER SPEED CHART

UNIT	FACTORY SHIPPED SETTINGS		
	HEAT	COOL	ADJUST
070V36B	2	4	NORM
090V36C	2	4	NORM
090V48C	2	4	NORM
090V60C	2	4	NORM
110V60C	2	4	NORM

FURNACE SIZE SELECTION CODE

CODE	DN 7 SEGMENT LED	FURNACE MODEL	INDOOR BWR MOTOR HP SIZE
H		070V36B	1/2
J		090V36C	1/2
L		090V48C	3/4
n		090V60C	1
o		110V60C	1

NOTE: SEE INSTALLATION INSTRUCTIONS FOR PROCEDURE TO SET CORRECT BLOWER SPEED FOR SPECIFIC COOLING TONNAGE BEING APPLIED, AND HEATING TEMPERATURE RISE DESIRED.

TYPICAL SYSTEM SHOWN FOR 2 HEAT/2 COOL WITH A CONVENTIONAL THERMOSTAT. SEE INSTALLATION INSTRUCTIONS FOR CONNECTIONS TO OTHER EQUIPMENT AND ACCESSORIES.

A TWO STAGE THERMOSTAT MUST BE USED WITH THIS FURNACE IN VARIABLE CAPACITY MODE. REFER TO INSTALLATION INSTRUCTIONS FOR MORE INFORMATION ON RECOMMENDED TYPES OF THERMOSTATS AND SETTINGS FOR OPTIMAL PERFORMANCE.

JACKPLUG CHART

JP46	JACK/PLUG-CONTROL, VARIABLE SPEED
JP48	JACK/PLUG-MOTOR, VARIABLE SPEED
JP49	JACK/PLUG-MOTOR, VARIABLE SPEED
JP58	JACK/PLUG-BURNER CONTROL
JP84	JACK/PLUG-COMB. AIR INDUCER
JP156	JACK/PLUG-INDUCER/IGNITOR
JP159	JACK/PLUG-IGNITOR
JP246	JACK/PLUG-BOARD IGNITION



THERMOSTAT HEAT ANTICIPATION SETTING
 .65 AMP HONEYWELL VALVE

CUT W914 JUMPER LABELED "DEHUM OR HARMONY" FROM DS TO R, AT A92 CONTROL BOARD, WHEN USED WITH Comfortsense® 7000 THERMOSTAT.

CUT W951 JUMPER FROM Q TO R, LABELED "HEAT PUMP" AT A92 CONTROL BOARD, WHEN USED FOR DUAL FUEL APPLICATIONS.

JUMPER W915 FROM Y1 TO Y2 IS FACTORY INSTALLED AT A92 CONTROL BOARD. LEAVE IN FOR ONE STAGE COOL THERMOSTAT. CUT JUMPER Y1 TO Y2 FOR TWO STAGE COOL THERMOSTAT.

- ⚠ L13 USED ON 3/4 AND 1 HP ONLY
- ⚠ FACTORY DEFAULT IS FOR A 2 STAGE THERMOSTAT
- ⚠ FIELD SUPPLIED ACC WIRE
- ⚠ USE COPPER CONDUCTORS ONLY
- ⚠ DISCHARGE AND OUTDOOR AIR TERMINALS ARE FOR iComfort USE ONLY
- ⚠ THERMOSTAT CONNECTIONS ARE FOR NON-COMMUNICATING SYSTEM ONLY. REFER TO iComfort INSTALLATION INSTRUCTIONS FOR COMMUNICATING SYSTEM
- ⚠ 24V POWER PROVIDED FOR OPTIONAL HUMIDIFIER DURING HEAT DEMAND
- ⚠ DH AND L TERMINALS ARE ONLY USED WITH iComfort THERMOSTAT

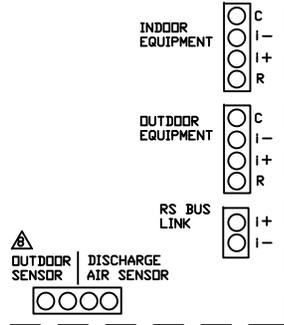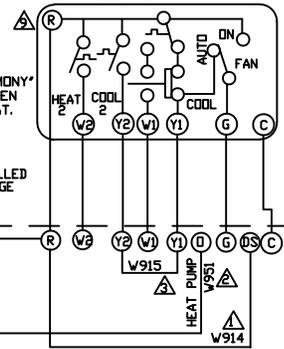

LENNOX HEATING UNITS-GAS

SLP99DF070V36B	SLP99DF090V60C
SLP99DF090V36C	SLP99DF110V60C
SLP99DF090V48C	

2 HEAT 2 COOL

Supersedes

Form No. 538065-01

1119

© 2010 Lennox U.S.A.

WARNING- ELECTRICAL SHOCK HAZARD CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDING IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.

NOTE- IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION.

— LINE VOLTAGE FIELD INSTALLED
 - - - CLASS II VOLTAGE FIELD WIRING
 ← DENOTES OPTIONAL COMPONENTS