



BLOWER SPEED CHART					MOTOR SPEEDS AVAIL.	SECONDARY LIMITS USED
UNIT	COOL	HEAT	PARK	PARK		
24A-045		RED	YELLOW	----	3	N/A
24A-070		YELLOW	RED	----	3	2
36A-070		RED	YELLOW	BROWN	4	2
36B-090		BROWN	YELLOW	RED	4	1 (RIGHT)
36C-110		BROWN	RED	YELLOW	4	1 (RIGHT)
48B-070		RED	YELLOW	BROWN	4	2
48B-090		YELLOW	RED	BROWN	4	2
48C-110		BROWN	RED	YELLOW	4	1 (RIGHT)
48C-135		YELLOW	RED	YELLOW	4	2
60C-110		YELLOW	RED	BROWN	4	1 (RIGHT)
60D-135		RED	YELLOW	BROWN	4	2
60D-155		YELLOW	RED	BROWN	4	2
BLOWER SPEED SELECTION						
HI →					LO	
SPEED TAPS	BLACK	YELLOW	RED		3	
	BLACK	BROWN	YELLOW	RED	4	

THERMOSTAT HEAT ANTICIPATION SETTINGS
 .65 AMP HONEYWELL VALVE
 .50 AMP WHITE-RODGERS VALVE

JACKPLUG CHART	
J, P158	JACK/PLUG-BURNER CONTROL
J, P135	JACK/PLUG-SECONDARY LIMIT
J, P156	JACK/PLUG-INDUCER/IGNITER
J, P159	JACK/PLUG-IGNITION

NOTE-
 IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS AND TERMINATION.

- IMPORTANT- TO PREVENT MOTOR BURNOUT, NEVER CONNECT MORE THAN ONE MOTOR LEAD TO ANY ONE CONNECTION.
- PARK TERMINALS ARE UNPOWERED TERMINALS. ALL UNUSED MOTOR LEADS MUST BE WIRED TO A PARK TERMINAL.
- FOR CORRECT NUMBER OF SECONDARY LIMITS USED, SEE SECONDARY LIMIT SECTION OF BLOWER SPEED CHART.
- 640UH-36B-090 AND 640UH-48C-135 ONLY. DO NOT USE RED (LOW SPEED) MOTOR LEAD FOR HEATING. LEAVE ON PARK.
- FIELD SUPPLIED ACC. WIRE.
- USE COPPER CONDUCTORS ONLY.

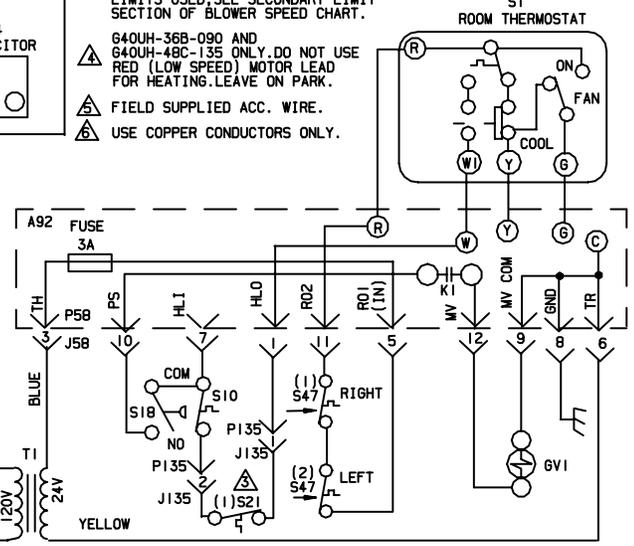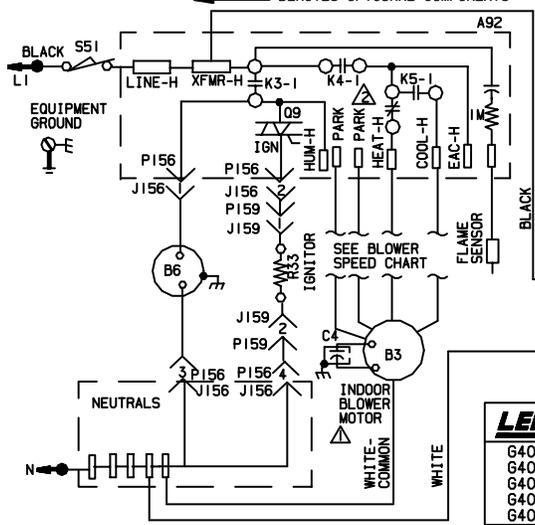

WARNING-
 ELECTRIC SHOCK HAZARD, CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.

LENNOX HEATING UNITS-GAS	
G40UH-24A-045, 045X-070-08	G40UH-48B-090, 090X-08
G40UH-36A-070, 070X-08	G40UH-48C-110-08
G40UH-48B-070-08	G40UH-60C-110, 110X-08
G40UH-36B-090-08	G40UH-48C-135-08
G40UH-36C-110-08	G40UH-60D-135, 155-08
Supersedes	
0204	
New Form No. 534, 591W	