

COOLING UNITS KITS AND ACCESSORIES

508640-01
06/2024

STAND-OFF GUARD-EDGE RAISER KIT

INSTALLATION INSTRUCTIONS FOR UNIT RAISER KIT – SL22KLV / SL25KCV

Shipping and Packing List

Package 1 of 1 contains:

1 – Raiser Kit (4 raisers - 3" or 6" depending on kit)

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier.

⚠ CAUTION

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.

General

Four composite raisers can be installed under the composite base. Specific cavities are molded into the composite base to each hold a 3" or 6" raiser.

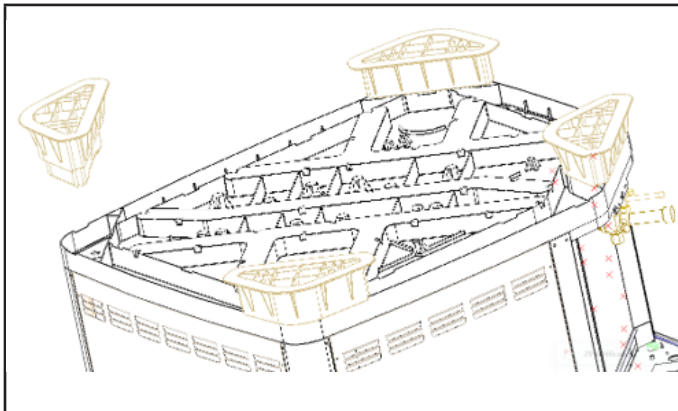


FIGURE 1. Raiser Placement

Installation

- 1 - Raise one side of the unit with a dolly and install one raiser (figure 2).
- 2 - Move to the next side of the unit, lift the unit with the dolly and install the second raiser.
- 3 - Perform the same process until all four raisers are installed.

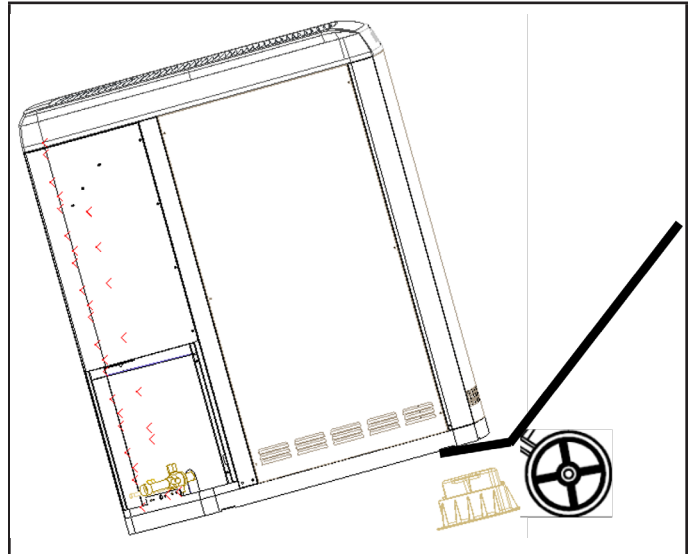


FIGURE 2. Lift Unit to Install Raiser