


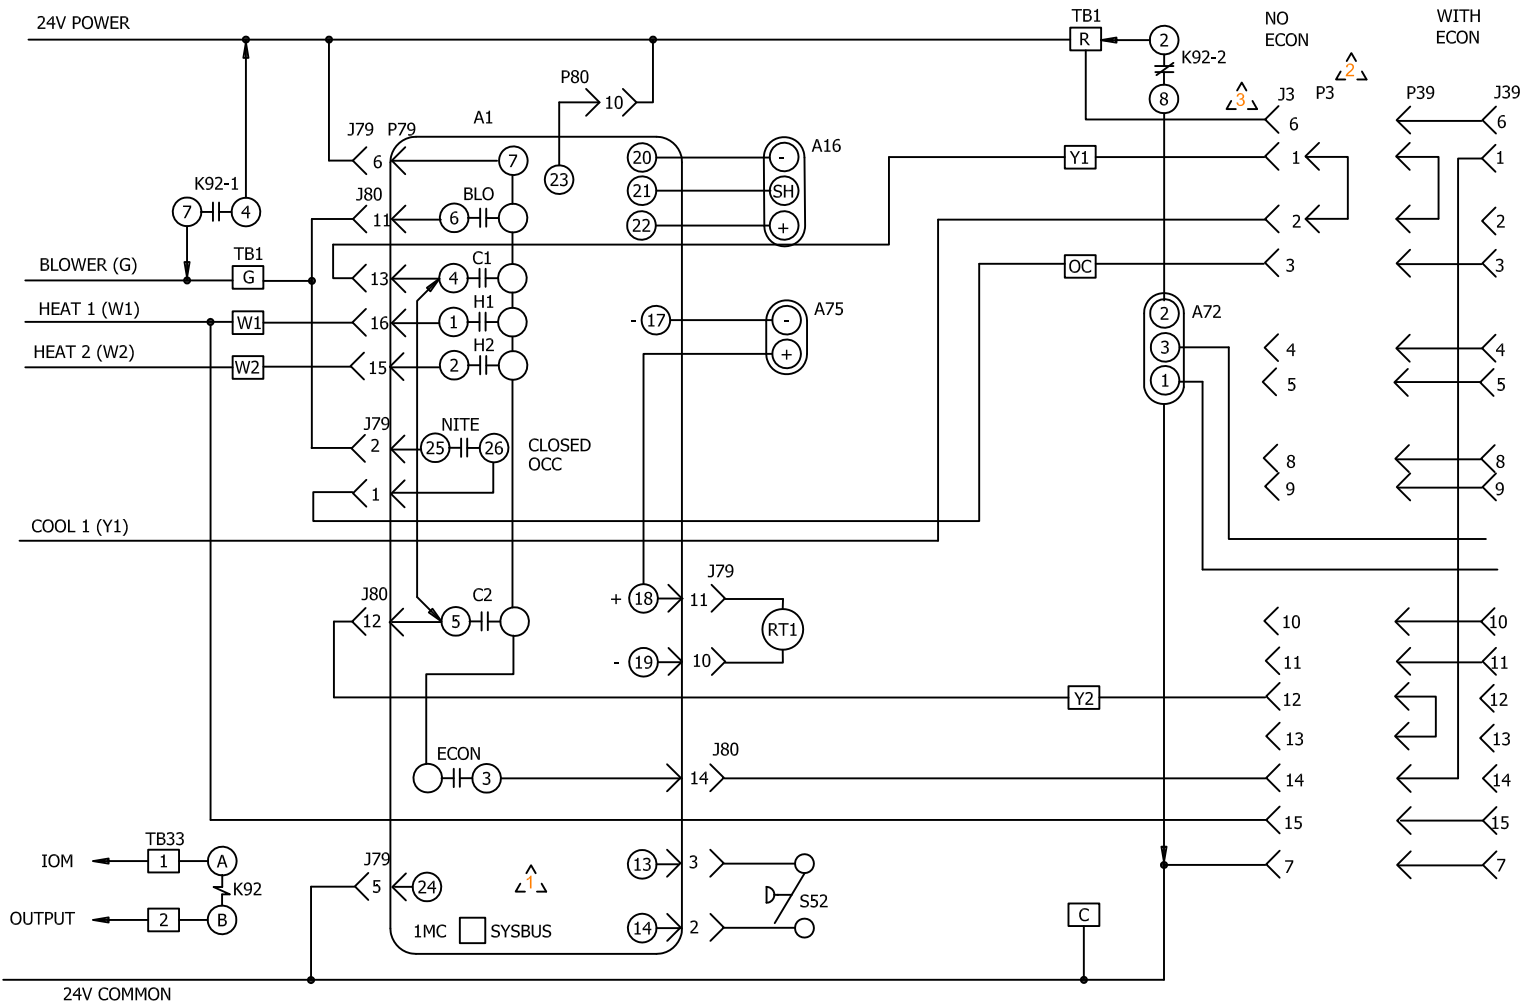

KEY	COMPONENT
A1	PANEL-LOGIC
A16	CONTROL-MICROPROCESSOR
A72	CONTROL, REMOTE MIN POS
A75	SENSOR-ROOM
J3	JACK-UNIT, ECONOMIZER
J24	JACK-EXHAUST FAN
J39	JACK-CONTROL INTERFACE
J79	JACK-PIGTAIL
J80	JACK-HEADER
K65	RELAY-EXHAUST FAN
K92	RELAY-INTERLOCK
P3	PLUG-UNIT, ECONOMIZER
P24	PLUG-EXHAUST FAN
P39	PLUG-CONTROL INTERFACE
P79	PLUG-HEADER
P80	PLUG-HEADER
R1	SENSOR-MIXED OR SUPPLY AIR
RT1	SENSOR-DISCHARGE AIR MONITOR
S52	SWITCH-AIRFLOW
TB1	TERMINAL STRIP-24V CLASS II

- 1 THERMOSTAT SUPPLIED BY USER
- 2 REMOVE P3 WHEN ECONOMIZER IS USED
- 3 J3 MAXIMUM LOAD 20VA 24VAC CLASS II

-----> DESIGNATES OPTIONAL WIRING
CLASS II FIELD WIRING

10/13		WIRING DIAGRAM	10/13
537638-01			
ACCESSORIES			
NOVAR ETM - 2024 CONTROL			
SECTION C			REV 0
Supersedes 537556-01		New Form No. 537638-01	