 


BLOWER SPEED CHART			
UNIT	FACTORY SHIPPED SETTINGS		
	HEAT	COOL	ADJUST
ALL	FACTORY DEFAULT	HIGH	FACTORY DEFAULT



NOTE: SEE INSTALLATION INSTRUCTIONS FOR PROCEDURE TO SET CORRECT BLOWER SPEED FOR SPECIFIC COOLING TONNAGE BEING APPLIED, AND EQUIPMENT AND ACCESSORIES.



TYPICAL SYSTEM SHOWN FOR 2 HEAT/2 COOL WITH A CONVENTIONAL THERMOSTAT. SEE INSTALLATION INSTRUCTIONS FOR CONNECTIONS TO OTHER EQUIPMENT AND ACCESSORIES.

CHARACTER ON 7-SEGMENT LED (W/DOT ON)	MODEL	BLOWER MOTOR SIZE
A	060NV36A	1/2 HP
C	080NV48B	1 HP
D	080NV60C	1 HP
E	100NV60C	1 HP

THERMOSTAT HEAT ANTICIPATION SETTING	
65 AMP	RESIDUE VALVE
70 AMP	SIT VALVE

- ▲ CUT W914 JUMPER LABELED "DEHUM OR HARMONY" FROM DS TO R, AT A92 CONTROL BOARD WHEN USED WITH COMFORTSENSE 7000.
- ▲ CUT W951 JUMPER FROM O TO R, LABELED "HEAT PUMP", AT A92 CONTROL BOARD, WHEN USED FOR DUAL FUEL APPLICATIONS
- ▲ JUMPER W915 FROM Y1 TO Y2 IS FACTORY INSTALLED AT A92 CONTROL BOARD. LEAVE IN FOR ONE STAGE COOL THERMOSTAT. CUT JUMPER Y1 TO Y2 FOR TWO STAGE COOL THERMOSTAT.

- ▲ L13 USED ON 1HP ONLY
- ▲ FACTORY DEFAULT IS FOR A 2 STAGE THERMOSTAT
- ▲ FIELD SUPPLIED ACC WIRE
- ▲ USE COPPER CONDUCTORS ONLY
- ▲ DISCHARGE AND OUTDOOR AIR TERMINALS ARE FOR icomfort USE ONLY
- ▲ THERMOSTAT CONNECTIONS ARE FOR NON-COMMUNICATING SYSTEM ONLY. REFER TO icomfort INSTALLATION INSTRUCTIONS FOR COMMUNICATING SYSTEMS.
- ▲ DH AND L TERMINALS ARE ONLY USED WITH icomfort THERMOSTAT

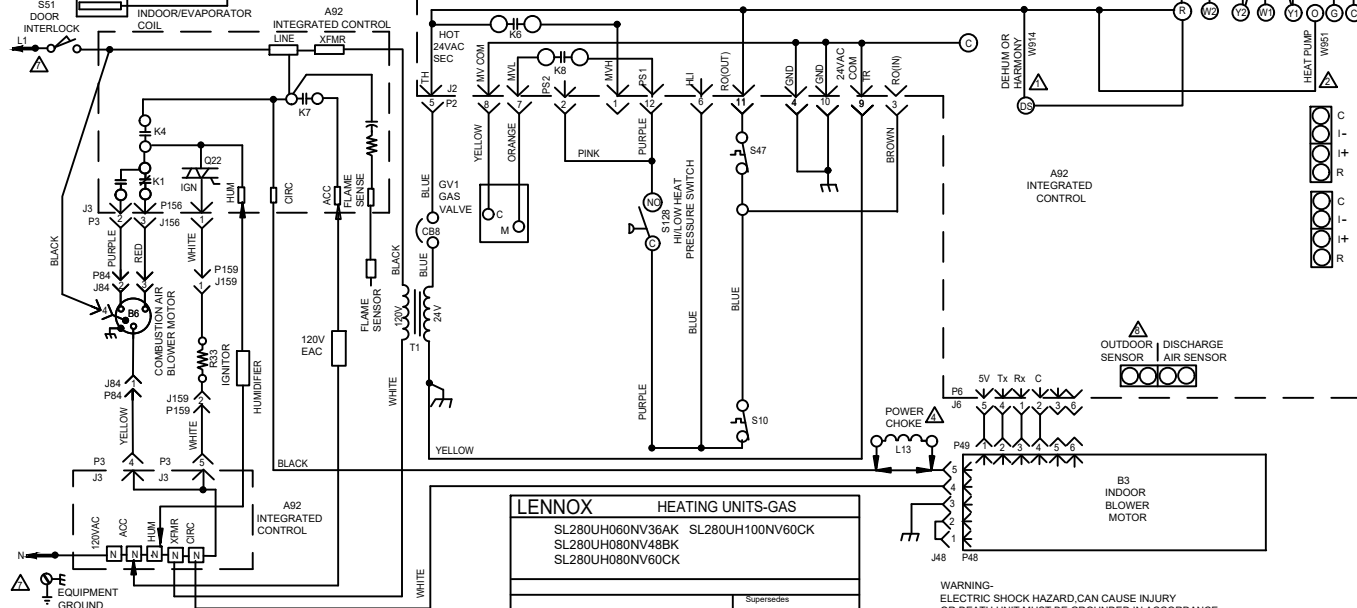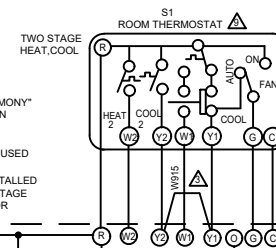

LENNOX HEATING UNITS-GAS	
SL280UH060NV36AK	SL280UH100NV60CK
SL280UH080NV48BK	
SL280UH080NV60CK	

Supersedes

Form No. 538486-01

WARNING: ELECTRIC SHOCK HAZARD, CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.

NOTE: IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION

CUT SIZE 8-1/16" x 7-7/16"