
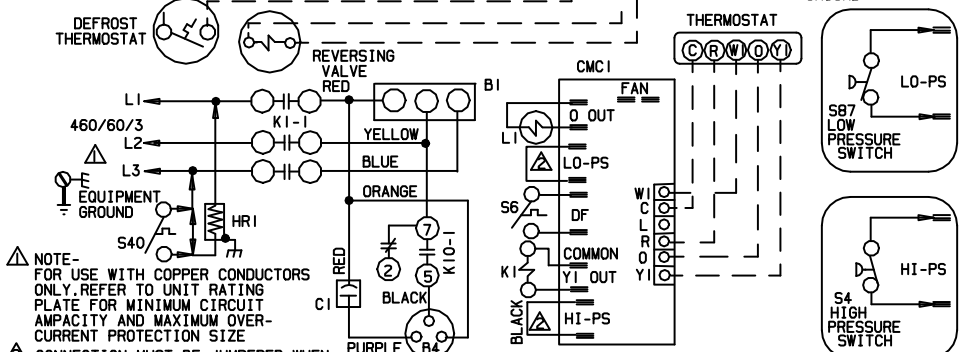


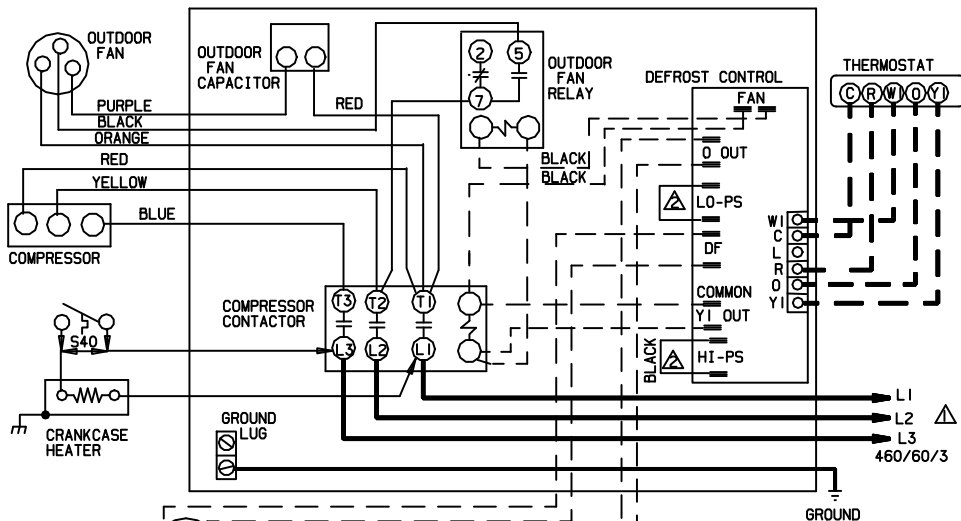

NOTE-
FOR USE WITH COPPER CONDUCTORS
ONLY. REFER TO UNIT RATING
PLATE FOR MINIMUM CIRCUIT
AMPACITY AND MAXIMUM OVER-
CURRENT PROTECTION SIZE

CONNECTION MUST BE JUMPERED WHEN
OPTIONAL SWITCH IS NOT USED

KEY	DESCRIPTION
B1	COMPRESSOR
B4	MOTOR-OUTDOOR FAN
C1	CAPACITOR-OUTDOOR FAN
CMC1	CONTROL-DEFROST
HR1	HEATER-COMPRESSOR
K1-1	CONTACTOR-COMPRESSOR
K10-1	RELAY-OUTDOOR FAN
L1	VALVE-REVERSING
S4	SWITCH-LIMIT, HI PRESS
S6	SWITCH-DEFROST
S40	THERMOSTAT-CRANKCASE
S87	SWITCH-LOW PRESS



WARNING-
ELECTRIC SHOCK HAZARD, CAN CAUSE INJURY OR
DEATH. UNIT MUST BE GROUND IN ACCORDANCE
WITH NATIONAL AND LOCAL CODES.

— DENOTES OPTIONAL COMPONENTS
— LINE VOLTAGE FIELD INSTALLED
— CLASS II VOLTAGE FIELD INSTALLED

1005	Supersedes
1005	New Form No.
535,039W	

© 2005

Litho U.S.A.

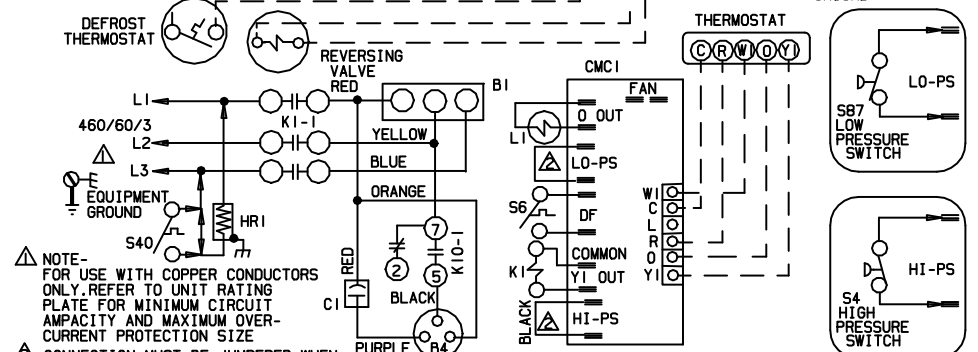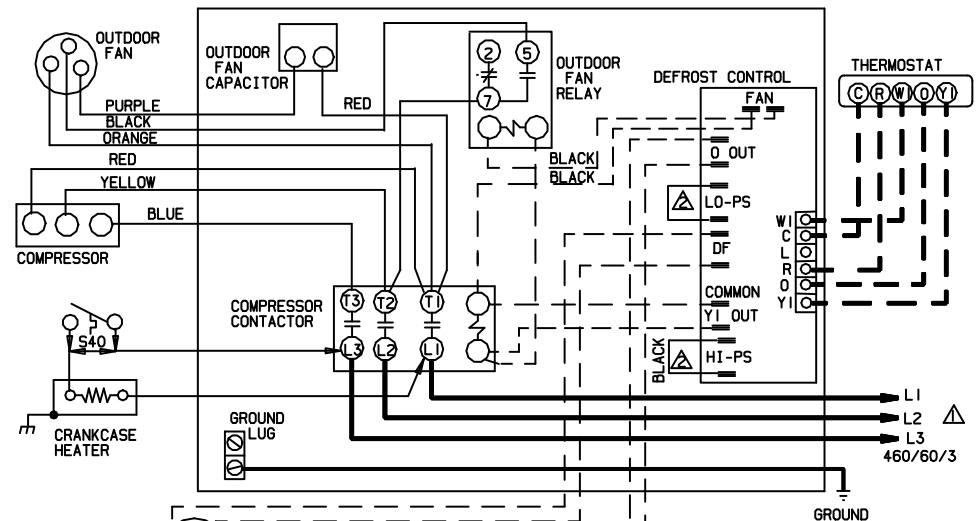

NOTE-
FOR USE WITH COPPER CONDUCTORS
ONLY. REFER TO UNIT RATING
PLATE FOR MINIMUM CIRCUIT
AMPACITY AND MAXIMUM OVER-
CURRENT PROTECTION SIZE

CONNECTION MUST BE JUMPERED WHEN
OPTIONAL SWITCH IS NOT USED

KEY	DESCRIPTION
B1	COMPRESSOR
B4	MOTOR-OUTDOOR FAN
C1	CAPACITOR-OUTDOOR FAN
CMC1	CONTROL-DEFROST
HR1	HEATER-COMPRESSOR
K1-1	CONTACTOR-COMPRESSOR
K10-1	RELAY-OUTDOOR FAN
L1	VALVE-REVERSING
S4	SWITCH-LIMIT, HI PRESS
S6	SWITCH-DEFROST
S40	THERMOSTAT-CRANKCASE
S87	SWITCH-LOW PRESS

WARNING-
ELECTRIC SHOCK HAZARD, CAN CAUSE INJURY OR
DEATH. UNIT MUST BE GROUND IN ACCORDANCE
WITH NATIONAL AND LOCAL CODES.

— DENOTES OPTIONAL COMPONENTS
— LINE VOLTAGE FIELD INSTALLED
— CLASS II VOLTAGE FIELD INSTALLED

1005	Supersedes
1005	New Form No.
535,039W	

© 2005

Litho U.S.A.