ML296DFV(K)

MERIT® SERIES

LENNOX Downflow | Two-Stage Heating | Variable Speed Blower | Refrigerant Detection | 60Hz

RESIDENTIAL PRODUCT SPECIFICATIONS (EHB)

AFUE - 96% Input - 44,000 to 88,000 Btuh


Nominal Add-on Cooling - 3 to 5 Tons







MODEL NUMBER IDENTIFICATION

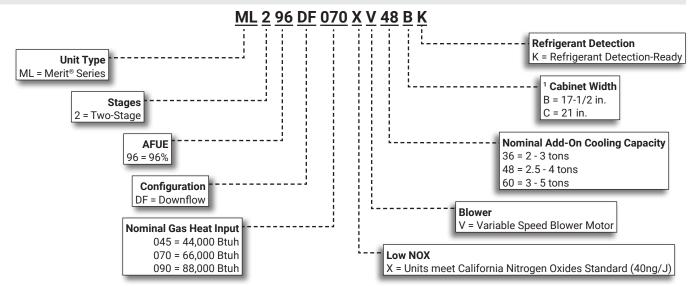

¹ Downflow indoor coils with the same letter designation will physically match the furnace supply air opening.

FEATURE HIGHLIGHTS

- 1. Lennox Duralok Plus™ Heat Exchanger
- 2. Secondary Heat Exchanger
- 3. Inshot Burners
- 4. Two-Stage Gas Control Valve
- 5. Two-Speed Combustion Air Inducer
- 6. SureLight® Integrated Furnace Control
- 7. Variable Speed Direct Drive Blower
- 8. Insulated Cabinet
- 9. Safety Interlock Switch
- 10. Gas Piping And Electrical Inlets



NOTE - ML296DFV(K) FURNACES CANNOT BE TWINNED!

CONTENTS

ower Data	. 22
provals And Warranty	3
ontrol Options	9
mensions	. 16
Furnace/Coil Combined Dimensions	. 18
Optional Accessories	. 17
Optional Accessories - Venting	. 19
Unit	. 16
atures	3
s Heat Accessories	. 15
gh Altitude Derate	. 15
door Air Quality Product Options	9
stallation Clearances	. 11
odel Number Identification	1
otional Accessories	. 12
ecifications	. 11
nt Lengths - Exhaust Using Ventilated Attic/Crawlspace Intake Air	. 15
nt Lengths - Uninsulated Exhaust Pipe In Unconditioned Space	. 13

APPROVALS AND WARRANTY

APPROVALS

- AHRI Certified
- Certified by CSA International
- Tested and rated according to US DOE test procedures and FTC labeling regulations
- ENERGY STAR® certified units are designed to use less energy, help save money on utility bills, and help protect the environment
- ISO 9001 Registered Manufacturing Quality System
- Blower data from unit tests conducted in Lennox Laboratory air test chamber
- All models meet UL 60335-2-40 Refrigerant Detector Requirements

NOTE - This furnace has not been CSA International design certified for installation in mobile homes, recreational vehicles, or outdoors.

California Only

- These furnaces do not meet the South Coast Air Quality Management District (SCAQMD) Rule 1111 and San Joaquin Valley Air Pollution Control District (SJVAPCD) Rule 4905 NOx emission limit (14 ng/J) and cannot be installed within the SCAQMD, SJVAPCD and Bay Area
- These furnaces are approved by the California Energy Commission and meets California Nitrogen Oxides Standard (NOx) limits of 40 ng/J

WARRANTY

- Duralok Plus™ Aluminized Steel Heat Exchanger:
 - Limited twenty years in residential applications
 - Limited ten years in non-residential applications
- All other covered components:
 - · Limited five years in residential installations
 - Limited one year in non-residential installations

NOTE - Refer to Lennox® Basic Limited Warrenty at www.Lennox.com for additional details.

FEATURES

APPLICATIONS

- Input capacities of 44,000, 66,000 and 88,000 Btuh
- Energy efficiency (AFUE) 96%
- Compact cabinet for downflow applications without any internal modifications
- · Lennox add-on indoor coils, high-efficiency air cleaners and humidifiers can easily be added to furnace
- Variable speed blower is ideal for zoning applications
- Shipped factory assembled with controls installed and wired
- Each unit factory test operated to ensure proper operation

ZONING APPLICATIONS

- Units may be used with certain zoning systems
- · Zone control panel must be able to interface and communicate with the variable speed blower motor in the unit
- Lennox® LZSV Variable Zoning System has this capability

HEATING SYSTEM



1 Lennox Duralok Plus™ Heat Exchanger Assembly

- Lennox developed heat exchanger assembly consists of primary heat exchanger and secondary condenser coil assembly
- Main multi-pass crimped seam design clamshell type heat exchanger
- Constructed of heavy-gauge, aluminized steel
- Designed for normal expansion and contraction with maximum efficiency and minimum resistance to air flow



- Secondary heat exchanger condenser coil constructed of aluminum fins fitted to stainless steel tubes
- · Coil is factory tested for leaks
- Condensate drain header box assembly located on front
- Compact size of complete heat exchanger assembly permits low overall design of furnace cabinet
- Heat exchanger assembly has been laboratory life cycle tested in excess of industry standards

HEATING SYSTEM (continued)

Lennox Designed Header Box

- Header box on end of condenser coil collects flue condensate for disposal through condensate drains
- The drains are located on each side of the cabinet for easy field installation of condensate drain trap
- Only one drain is used, the other drain is sealed
- Condensate drain trap is included with unit for field installation

Lennox Designed Flue Condensate Trap Assembly

- Condensate trap assembly is mounted outside the conditioned air stream
- Assembly can be mounted on either side of cabinet. See Installation Instructions
- 90° street elbow furnished for ease of drain trap installation
- Drain connection can be made with field provided PVC pipe, PVC coupling, or vinyl tubing with hose clamp
- · Drain cap on trap allows easy cleaning and winterizing

3 Inshot Burners

- Aluminized steel inshot burners provide efficient, troublefree operation
- Burner venturi mixes air and gas in correct proportion for proper combustion
- Burner assembly is removable from the unit as a single component for ease of service

SureLight® Hot Surface Ignitor

- · Tough, reliable, long-life, trouble-free performance
- · Silicon nitride ignitor
- Cemented to steatite block for protection against current leakage
- Ignition leads are constructed of nickel plated copper and are enclosed in high temperature Teflon[®] insulation for dependable operation

Two-Stage Gas Control Valve

 24 volt redundant combination two-stage gas control valve combines manual shut off switch (On-Off), automatic electric valve (dual) and gas pressure regulation into a compact combination control

Two-Speed Combustion Air Inducer

- · Permanent split capacitor (PSC) motor
- Heavy duty blower prepurges heat exchanger and safely vents flue products
- Dual pressure switches (low fire/high fire) prove blower operation before allowing gas valve to open
- Operates only during heating cycle

Flame Rollout Switches (2)

- Factory installed on burner box
- Switch provides protection from abnormal operating conditions
- Manual reset

Limit Control

- Primary limit is accurately located on vestibule panel on all units
- Automatic reset
 ML296DFV(K) | Page 4

Optional Accessories

High Altitude Orifice Kits

- Required on all units for proper unit operation at altitudes from 7501 to 10,000 ft.
- · Kits are available for natural gas and LPG/propane

High Altitude Pressure Switch Kit

 Required for proper unit operation on installations above 4500 ft.

Natural Gas to LPG/Propane Conversion Kit

 Required for field changeover from natural gas to LPG/ Propane

LPG/Propane to Natural Gas Conversion Kit

 Required for field changeover from LPG/Propane to natural gas

Muffler (US Only)

- Significantly reduces outdoor operating sound levels
- Two-inch diameter muffler is optional for 045 through 90 input models
- · See Optional Accessory Dimension Drawing

DIRECT VENT / NON-DIRECT VENT SEALED COMBUSTION SYSTEM

- Furnace features a "sealed combustion" system and can be installed in either Direct Vent or Non-Direct applications
- In Direct Vent applications, combustion air is supplied from outdoors and flue gases are discharged outdoors
- In Non-Direct Vent applications, combustion air is supplied from indoors and flue gases are discharged outdoors

NOTE - Lennox has approved the use of DuraVent® PolyPro®, Centrotherm InnoFlue® and ECCO Polypropylene Vent™ manufactured vent pipe and terminations as an alternative to PVC vent pipe. Must be ordered separately.

Tested and listed to the ULC S636 standard in

- Tested and listed to the ULC S636 standard in Canada
- The polypropylene venting system must follow the uninsulated and unconditioned space vent lengths listed in the table on Page 13
- Refer to the Installation Instructions for additional details

Flue Coupling

Canada.

- · Assists with exhaust flue piping connection and servicing
- Includes flexible one 2 inch rubber coupling and two adjustable bands
- Approved for all Lennox 90% furnaces

DIRECT VENT / NON-DIRECT VENT SEALED COMBUSTION SYSTEM (continued)

Termination Kits

- Facilitates installation of combustion air intake pipe and flue exhaust pipe
- Refer to venting table in this bulletin to determine pipe size needed and proper termination kit required
- Certain Termination Kits are certified to ULC S636 standard for use in Canada only
- See Optional Accessories table and dimension drawings

Concentric - Direct Vent Applications

- 2 or 3 inch kit contains concentric termination assembly, reducer bushing and 45 degree elbow
- 2 inch kit for -045-070 models contains an outdoor exhaust accelerator
- Kit requires single hole penetration of roof or wall for installation
- · Roof Termination Flashing Kit is available for use with 2 inch Kits
- · CSA certified

Flush-Mount

- Kit contains flush-mount termination, accelerator. mounting template and hardware
- Kit may be used with 2, 2-1/2 or 3 in. pipe

Wall Assembly

Close Couple (US Only) - Direct Vent Applications

- 2 or 3 inch kit consists of close-couple, side-by-side PVC piping with galvanized steel wall cover plate for sealing and isolating piping penetration of the wall
- Piping spacing and length is sized for proper wall installations
- · CSA certified

Close Couple WTK (Canada Only) - Direct Vent **Applications**

• 2 or 3 inch kit contains one insulated faceplate, one insulated exhaust pipe, elbow and fittings. Certified to ULC S636 standard

NOTE - Maintain a maximum of 6 inches between the inlet and outlet openings in the installation of the pipes

Roof Termination Flashing Kit

- For vertical venting through a roof
- 2 or 3 inch kit contains two neoprene rubber roof flashings
- Vent pipe and insulation not furnished
- Flashing Kit can also be used with Concentric Vent Termination Kits used in vertical venting rooftop applications

Left Side Vent Kit

- Allows venting out the left side of the cabinet
- Kit contains left vent tube and seal plate

CONTROLS



SureLight® Integrated Two-Stage / Variable Speed Blower Furnace Control

- nformation about various operating parameters in the furnace to the optional Lennox® Communicating Thermostat to constantly maintain the highest level of comfort and performance available
- Auto Configuration On start-up the control automatically sends a description of the unit to the optional Lennox® Communicating Thermostat to automatically configure the number of stages and features available
- Terminals for connecting a conventional heating/cooling thermostat are also provided on the control
- Control also features Innovative AirFlex[™] technology which allows custom blower settings based on the application
- Thermostat Control For optimal performance, the use of a high-quality, digital two-stage thermostat with adjustable settings for first stage/second stage, on/off differentials and adjustable stage timers is recommended

Furnace Input Staging Options

Thermostat Type	Input Staging Available
Lennox® Communicating Thermostat	
Two-Stage (Conventional)	Two-Stage (65 and 100%)
Single-Stage (Conventional)	

- Safety Controls Flame sensor utilizes flame rectification for safe and reliable operation
- · Should flame fail to ignite, control will initiate 4 reattempts at ignition before locking out unit operation for 60 minutes
- Watchguard type circuit automatically resets ignition control after one hour of continuous thermostat demand after unit lockout, eliminating nuisance calls for service
- · Display LED Seven segment LED displays alphanumeric information related to diagnostics as well as system operation and status
 - Diagnostic codes are held in non-volatile memory, immune from power interruptions
 - Holds up to ten diagnostic codes in order of occurrence for recall on demand
 - Port on blower door allows for easy viewing

DIP Switch Settings

- Select Thermostat Used Single-Stage or Two-Stage
- Two selectable second stage recognition times (7 and 12 minutes) are available on the control when the furnace is used with a single-stage thermostat
- When used with a two-stage thermostat, furnace will only initiate second stage operation with a second stage thermostat demand

CONTROLS (continued)

- Heating Speeds A combination of DIP switch settings allow the following motor speed selection settings within the heating speed selected for fine tuning air volume:
 - · Factory default
 - 6%, 12%, 18% or 24% increase
 - 6%, 12% or 18% decrease
 - · See Blower Performance tables
- Cooling Speeds A combination of DIP switch settings allow the following motor speed selection settings within the cooling speed selected for fine tuning air volume:
- Factory default
- 10% increase
- 10% decrease
- · See Blower Performance tables
- Blower Speed Ramping (Cooling Mode) DIP switch settings allow one of four blower speed profiles during cooling operation
 - Profile A (factory setting) Motor runs at 50% for 30 seconds, then at 82% for 7-1/2 minutes, then at 100% (if needed) until demand is satisfied. Once demand is met, motor runs at 50% for 30 seconds, then ramps down to stop
 - Profile B Motor runs at 82% for 7-1/2 minutes and then at 100% (if needed) until demand is satisfied.
 Once demand is met,motor ramps down to stop
 - Profile C Motor runs at 100% until demand is satisfied. Once demand is met, motor runs at 100% for 60 seconds, then ramps down to stop
 - Profile D Motor runs at 100% until demand is satisfied.
 Once demand is met, motor ramps down to stop
- Dehumidification (Active or Humiditrol® Option) A
 jumper on the control must be clipped to enable active
 dehumidification and/or operation with a Humiditrol®
 Whole-Home Dehumidification System
- A humidity controlling thermostat or device is also required
- During a call for cooling, air volume is automatically reduced, forcing humidity removal by the air conditioner or heat pump system (single stage units or two-stage units running at 2nd stage)
- After the humidity has reached the desired set-point the cooling air volume returns to its designed rate
- A dehumidification signal from the thermostat reduces the cooling cfm to 70% of the requested cooling cfm
- Dual-Fuel Operation A jumper on the control must be clipped to enable operation with a single or two-stage heat pump
- The indoor blower is started without delay when a call for heat is received
- Two-Stage Compressor Operation A jumper on the control must be clipped to enable operation with a two-stage compressor
- The cooling blower speeds for first and second stage cooling will be dictated by the applicable DIP switch settings

- Lennox System Operations Monitor Connection -Monitors outdoor unit operation (communicating mode)
- Blower On/Off Time (Heating) Blower on time is fixed at 30 seconds, blower off time is adjustable from 60, 90, 120 and 180 seconds (factory setting 120 seconds)
- Blower On/Off Time (Cooling) For air-conditioning applications, blower on time is 2 seconds following thermostat demand for cooling
- See Blower Speed Ramping (Cooling Mode) profiles for various blower off details
- Controls evaporator humidity by controlling blower and compressor speed on two-stage outdoor units when used with the Lennox® Communicating Thermostat or the CS7500 Thermostat
- Continuous Blower Speed Adjustable continuous blower speed is a percentage of the high cooling speed selection
- Two selectable options (via DIP switch settings) of 28% and 38% (default setting)
- Accessory Terminal One accessory terminal furnished for additional power supply requirements for 120 volt (less than 1 amp) powered air cleaners
- One unpowered pair of contacts are provided for humidifier connections and may be connected to 24V or 120V
- Control is factory installed in the unit control box

24 Volt Transformer (40VA)

- Furnished and factory installed on outside of control box
- Circuit breaker (furnished) is wired in series

Field Wiring Make-Up Box

- Furnished for line voltage wiring
- Factory installed internally on left side of furnace
- Box may be installed internally on right side of furnace

CONTROLS (continued)

Refrigeration Detection System (RDS)

(Part of the SureLight® Integrated Furnace Control)

- Complies with UL 60335-2-40 approved standard
- Required for all systems using R-454B refrigerant
- · Plug-in connection to the RDS Coil Sensor
- Supports up to two RDS Coil Sensors (factory setting)
- Used as an interface between indoor unit and thermostat to control system
- Ensures safe operation for systems equipped with R-454B refrigerant
- If R-454B refrigerant is detected, the refrigerant detection system will stop compressor and/or heating operation and operate the blower to reduce concentrations in the conditioned space
- Once safe levels are reached the HVAC system will resume normal operation
- Low GWP test button for troubleshooting
- Alarm/Zone relay interface can trigger an external alarm if R-454B refrigerant is detected and open all zone dampers (if part of a zoning system) if R-454B refrigerant is detected
- Power is disabled to non-communicating thermostats to prevent demand if R-454B refrigerant is detected
- On system start-up blower will run for five minutes and any thermostat demands are disabled

Optional Accessories

Thermostat

- · Thermostat is not furnished with unit
- · See Page 9

Transformer (75VA)

- Recommended when furnace is used with zoning or defrost thermostats and other 24V accessories requiring a higher VA rating
- · Circuit breaker (furnished) is wired in series
- · Replaces the standard 40VA transformer

BLOWER



Variable Speed Direct Drive Blower

- Each blower assembly statically and dynamically balanced
- · Blower assembly easily removed for servicing

Variable Speed Blower Motor

- Variable speed motor maintains specified air volume from 0 though 0.8 in. w.g. (heating) and 0 through 1.0 in. w.g. (Cooling) static range
- Variable speed operation is achieved by the use of an ECM (Electronically Commutated Motor) motor
- Motor is controlled by furnace control
- Change in blower speed is easily accomplished by simple jumper change on the furnace control
- During start-up the blower motor slowly ramps up to normal operating speed to minimize noise and increase comfort
- At the end of a cooling or heating cycle the motor slowly ramps down after a short blower "off" delay
- If continuous blower operation has been selected, the variable speed motor will slowly ramp down until it reaches the airflow for that condition
- · Motor is resiliently mounted
- · See Blower Data tables

CABINET

- Low-profile, narrow width cabinet allows easy installation
- Heavy-gauge, cold rolled steel construction
- · Pre-painted cabinet finish
- Flanges provided on supply air opening for ease of plenum connection or alignment with indoor coil
- Insulated with foil faced insulation on sides and back of heating compartment
 - · Sealed blower compartment
 - · Cabinet door can be removed without any tools
 - · Complete service access
- Safety interlock switch automatically shuts off power to unit when blower compartment access door is removed
- Gas piping and electrical inlets are provided in both sides of cabinet

Coil Match-Up

 All Lennox downflow indoor coils will physically match the furnace supply air opening with the same letter designation (A, B, C, D) as in the furnace model number

Low Leakage Cabinet

 All models have less than 2% air leakage and meet ANSI/ASHRAE Standard 193-2010 "Method of Test for Determining the Air Tightness of HVAC Equipment"

Optional Accessories

Condensate Drain Heat Cable Kits

- Self-limiting wattage heat cable prevents condensate drain from freezing in unconditioned areas
- · Available in 6 or 24 ft. lengths

Crawl Space Vent Drain Kit

- Allows venting through a crawl space for downflow applications
- Includes 2 or 3 in. sanitary tee, 2 in. PVC assembly, PVC boot and clamp
- Kit for Canada is certified to ULC S636

Downflow Combustible Flooring Base

- Required for heating only units installed on combustible floors
- Not required in add-on cooling applications
- See Dimension Drawing

FILTER (not furnished)

 Filter and provisions for external mounting must be field provided

Optional Accessories

Downflow Filter Cabinet

- · Filter cabinet mounts directly on top of furnace
- "B and "C" width cabinets have two filters
- · Filter rails are furnished
- Front access for servicing
- · Cleanable filter(s) are furnished

INDOOR AIR QUALITY PRODUCT OPTIONS

Healthy Climate® PureAir® Air Purification System

- Filtration The Carbon Clean 16® (MERV 16) media filter captures more than 95% of particles 0.3 microns and larger and more than 90% of particles 0.01 microns and larger
- Highest airflow performance and lowest pressure drop when compared to a leading brand.
- vest
- · Long life filters up to 1 year

Healthy Climate® Media Air Cleaner

- High performance in a narrow 7 in. cabinet
- Available with MERV 11, 13, or 16 rated filters
- Multi-position heavy gauge steel cabinet will support furnace/coil or air handler and associated duct work
- · Tool-less entry
- Tool-less assembly for quick installation



Healthy Climate® Whole Home In Duct Air Purifiers

- · Compact Duct Mounted Design
- · Effective against odors and VOC's
- · Certified Ozone free
- UVC lamp and carbon cells

Healthy Climate® Ultraviolet Germicidal Lights

- Compact duct mounted design
- Single or dual applications
- · Certified ozone free
- Effective against odors to help keep the system clean



- Low power consumption
- Available for 24V or 110/230V
- Up to 1340 microwatts /cm² output (dual lamp model)

NOTE - Please refer to the individual Product Specifications for these products for full information.

CONTROL OPTIONS

E30 Smart Wi-Fi Thermostat

- 4 Htg.-2 Clg.
- 7-day, universal, programmable, touchscreen thermostat
- Controls dehumidification during cooling mode and humidification during heating mode
- Smooth Setback Recovery and compressor short-cycle protection
- One-Touch Away Mode, Smart Away[™] (geo-fencing), equipment maintenance reminders and scheduling
- Smart home automation compatible with Apple HomeKit™, Amazon Alexa® and Google Assistant
- Lennox® Home App controls temperature, fan operation, set programs/schedules and set Away mode on a smartphone
- Lennox Smart Tech App allows the installer to commission the system and remotely turn the system on and off during setup or service call on a smartphone



M30 Smart Wi-Fi Thermostat

- 4 Htg.-2 Clg.
- 7-day, universal, programmable, touchscreen thermostat
- Humidification / dehumidification / dewpoint measurement and control, Humiditrol ® control
- Smooth Setback Recovery and compressor short-cycle protection
- One-Touch Away Mode, Smart Away[™] (geo-fencing), equipment maintenance reminders and scheduling
- Smart home automation compatible with Apple HomeKit[™], Amazon Alexa[®] and Google Assistant
- Lennox® Home App controls temperature, fan operation, set programs/schedules and set Away mode on a smartphone
- Lennox Smart Tech App allows the installer to commission the system and remotely turn the system on and off during setup or service call on a smartphone

NOTE - Please refer to the individual Product Specifications for these products for full information.





INDOOR AIR QUALITY PRODUCT OPTIONS - ORDERING

NOTE - Refer to the individual Product Specifications documents for additional accessories and maintenance items.

Description	Dimensions	Furnace Width	Order Number
PureAir® Air Purification System	'		
PCO3-16-16	17-1/2 x 8-3/4 x 26-1/2	A/B/C	Y6598
PCO3-20-16	21-1/8 x 8-3/4 x 26-1/2	C/D	Y6595
Healthy Climate® Media Air Cleaner			
HCC16-28 (Cabinet)	17-1/2 x 28-1/2 x 7	A/B/C	Y2920
HCC16-28 (Cabinet) 4-pack	17-1/2 x 28-1/2 x 7		Y2921
HCF16-16 (Filter) MERV 16	16 x 25 x 5		X6672
HCXF16-16 (Expandable Filter) MERV 16	16 x 25 x 5		X8306
HCF16-13 MERV 13	16 x 25 x 5		19L16
HCF16-11 (Filter) MERV 11	16 x 25 x 5		X6670
HCXF16-11 (Expandable Filter) MERV 11	16 x 25 x 5		X8303
HCC20-28 (Cabinet)	21 x 28-1/2 x 7	C/D	X6661
HCC20-28 (Cabinet) 4-pack	21 x 28-1/2 x 7		X7751
HCF20-16 (Filter) MERV 16	20 x 25 x 5		X6675
HCXF20-16 (Expandable Filter) MERV 16	20 x 25 x 5		X8307
HCF20-13 MERV 13	20 x 25 x 5		19L17
HCF20-11 (Filter) MERV 11	20 x 25 x 5		X6673
HCXF20-11 (Expandable Filter) MERV 11	20 x 25 x 5		X8304
Healthy Climate® Whole Home In Duct A	ir Purifiers		
HCWHAP1	8 x 7 x 16.5		23V99
Healthy Climate® Ultraviolet Germicidal	Lights		
UVC-24V (24V) 17-1/2 in.	Ballast 4-3/4 x 2-1/4 x 2		X9423
UVC-41W-S (110/230V) 17-1/2 in.	Ballast 11-3/4 x 2-3/4 x 1-5/8		X9424
UVC-41W-D (110/230V) 17-1/2 in.	Ballast 11-3/4 x 2-3/4 x 1-5/8		X9425
CONTROLS - ORDERING			
E30 Smart Wi-Fi Thermostat	5 x 7-1/2 x 1		20A65
M30 Smart Wi-Fi Thermostat	3-5/16 x 4-5/16 x 7/8		15Z69
Thermostat Accessories	, ,		
¹ Discharge Air Temperature Sensor (For S4	40, E30)		88K38
² Remote Outdoor Air Temperature Sensor	(For dual-fuel and Humiditrol®)		X2658

¹ Optional for service diagnostics (E30).

² Remote Outdoor Air Temperature Sensor is used with conventional (non-Lennox® Communicating) outdoor units (sensor is furnished with Lennox® Communicating outdoor units). Allows the thermostat to display outdoor temperature. Required in dual-fuel and Humiditrol® applications.

Gas	Model	ML296DF045XV36BK	ML296DF070XV48BK	ML296DF090XV60CK	
Heating	AHRI Reference No.	202575917	202575918	202575919	
Performance	¹ AFUE	96%	96%	96%	
	High Input - Btuh	44,000	66,000	88,000	
	Fire Output - Btuh	43,000	64,000	85,000	
	Temperature rise range - °F	35-65	35-65	40-70	
	Gas Manifold Pressure (in. w.g.) Nat. Gas / LPG/Propane	3.5 / 10.0	3.5 / 10.0	3.5 / 10.0	
	Low Input - Btuh	29,000	43,000	57,000	
	Fire Output - Btuh	28,000	42,000	56,000	
	Temperature rise range - °F	20 - 50	25 - 55	30 - 60	
	Gas Manifold Pressure (in. w.g.) Nat. Gas / LPG/Propane	1.7 / 4.5	1.7 / 4.5	1.7 / 4.5	
High static -	Heating	0.8	0.8	0.8	
n. w.g.	Cooling	1.0	1.0	1.0	
Connections	Intake / Exhaust Pipe (PVC)	2/2	2/2	2/2	
	Gas pipe size IPS	1/2	1/2 1/2		
Cond	ensate Drain Trap (PVC pipe) - i.d.	3/4	3/4	3/4	
	with furnished 90° street elbow	3/4 slip x 3/4 MIPT	3/4 slip x 3/4 MIPT	3/4 slip x 3/4 MIPT	
with	field supplied (PVC coupling) - o.d.	3/4 slip x 3/4 MPT	3/4 slip x 3/4 MPT	3/4 slip x 3/4 MPT	
ndoor	Wheel diameter x width - in.	10 x 9	11 x10	11 x 11	
Blower	Motor output - hp	1/2	3/4	1.0	
	Tons of add-on cooling	3	4	5	
	Air Volume Range - cfm	545 - 1360	575 - 1800	753 - 1982	
Electrical	Voltage		120 volts - 60 hertz - 1 phas	e	
Data	Blower motor full load amps	7.7	9.6	12.8	
	Maximum overcurrent protection	15	20	20	
Shipping Data	a lbs 1 package	131	138	166	

NOTE - Filters and provisions for mounting are not furnished and must be field provided.

¹ Annual Fuel Utilization Efficiency based on DOE test procedures and according to FTC labeling regulations. Isolated combustion system rating for non-weatherized furnaces.

INSTALLATION CLEARANCE	S
Sides	¹ 0 inches (0 mm)
Rear	0 inches (0 mm)
Top/Plenum	1 inch (25 mm)
Front	0 inches (0 mm)
Front (service/alcove)	24 inches (610 mm)
Floor	² Combustible

NOTE - Air for combustion must conform to the methods outlined in the National Fuel Gas Code (NFPA 54/ANSI-Z223.1) or the National Standard of Canada CAN/CSA-B149.1 "Natural Gas and Propane Installation Code"

NOTE - In the U.S. flue sizing must conform to the methods outlined in the current National Fuel Gas Code (NFPA 54/ANSI-Z223.1) or applicable provisions of local building codes. In Canada flue sizing must conform to the methods outlined in National Standard of Canada CAN/CSA-B149.1.

¹ Allow proper clearances to accommodate condensate trap and vent pipe installation.

² Clearance for installation on combustible floor if Optional Downflow Combustible Flooring Base is installed between furnace and combustible floor. Not required in add-on cooling applications if installed in accordance with local codes or National Fuel Gas Code ANSI-Z223.1 or CAN/CGA-149.1,.2. Do not install the furnace directly on carpeting, tile, or other combustible materials other than wood flooring.

OPTIONAL ACCESSORIES

NOTE - FURNACES CANNOT BE TWINNED!

			"B" Width Models	"C" Width Models
CABINET ACCESS	ORIES	'		'
Downflow Combus	tible Flooring Base		11M60	11M61
CONDENSATE DRA	AIN KITS	,		
Condensate Drain	Heat Cable	6 ft.	26K68	26K68
		24 ft.	26K69	26K69
Crawl Space Vent D	Drain Kit	US	51W18	51W18
		Canada	15Z70	15Z70
CONTROLS				
Transformer (75VA))		27J32	27J32
FILTERS		, '		
¹ Downflow Filter C	abinet		51W07	51W08
		No. and Size of filter - in.	(2) 16 x 20 x 1	(2) 16 x 20 x 1
TERMINATION KIT	rs	·		
See Installation Instr	ructions for specific venting inforn	nation.		
Direct Vent	Concentric	US - 2 in.	71M80	69M29
		3 in.		60L46
		Canada - 2 in.	44W92	44W92
		3 in.		44W93
	Flush-Mount	US - 2, 2-1/2 or 3 in.	51W11	51W11
		Canada - 2, 2-1/2 or 3 in.	51W12	51W12
	Wall - Close Couple	US - 2 in.	22G44	
		3 in.	44J40	44J40
		Canada - 2 in.	30G28	
		3 in.	81J20	81J20
	Roof Termination Flashing Kit	2 in.	15F75	15F75
	(no vent pipe - 2 flashings)	3 in.	44J41	44J41
VENTING				
Flue Coupling		2 in.	17H92	17H92
² Left Side Vent Kit		2 or 3 in.	87W73	87W73

¹ Cleanable polyurethane, frame-type filter.

NOTE - Termination Kits (44W92, 44W93, 30G28, 51W12, 81J20) and Crawl Space Vent Drain Kit (15Z70) are certified to ULC S636 standard for use in Canada only.

² NOTE - The curved exhaust pipe furnished with the Left Side Vent Kit counts as one additional 2 in. diameter 90° elbow. When using 3 in. diameter pipe, the furnished curved exhaust pipe and field provided fittings to transition from 2 in. to 3 in. count as 20 feet of equivalent pipe on all units.

OUTD	OOR TERM	IINATION K	CIT USAGE						
			Standard Te	erminations	Concentric Terminations				
Input	Vent Pipe	Flush Mount	Wal	l Kit	Field Fabricated	Concentric Kit			
Size	Diameter	Kit	2 inch	3 inch	Exhaust	1-1/2 inch	2 inch	3 inch	
	(in.)	51W11 (US) 5 51W12 (CA)	22G44 (US) 5 30G28 (CA)	44J40 (US) 5 81J20 (CA)	Accelerator Size Required	71M80 (US) 5 44W92 (CA)	69M29 (US) 5 44W92 (CA)	60L46 (US) 5 44W93 (CA)	
	¹ 1-1/2	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
045	2	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
045	2-1/2	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
	3	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
	¹ 1-1/2	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
070	2	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
070	2-1/2	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
	3	⁴ YES	YES	² YES	1-1/2 in.	³ YES			
	2	⁴ YES		YES	2 in.		YES	YES	
090	2-1/2	⁴ YES		YES	2 in.		YES	YES	
	3	⁴ YES		YES	2 in.		YES	YES	

NOTE - Standard Terminations do not include any vent pipe or elbows external to the structure.

⁵ Termination Kits 30G28, 44W92, 44W93, 51W12 and 81J20 are certified to ULC S636 standard for use in Canada only.

VENT LENGTHS	s - UNINSI	JLATED EX	HAUST PIP	E IN UNCO	NDITIONED	SPACE					
		Unit Input Size									
		04	45	0	70	090					
¹ Winter Design	Vent Pipe		² Maximum Uninsulated Exhaust Vent Length (ft.)								
Temperatures	Diameter	PVC	³ PolyPro/ InnoFlue/ ECCO	PVC	³ PolyPro/ InnoFlue/ ECCO	PVC	³ PolyPro/ InnoFlue/ ECCO				
	1-1/2 in.	22	N/A	20	N/A	N/A	N/A				
20 to 21°⊏	2 in.	21	18	33	30	46	42				
32 to 21°F	2-1/2 in.	16	N/A	26	N/A	37	N/A				
	3 in.	12	12	21	21	30	30				
	1-1/2 in.	12	N/A	20	N/A	N/A	N/A				
20 to 1°F	2 in.	11	9	19	17	28	25				
20 to 1 F	2-1/2 in.	7	N/A	14	N/A	21	N/A				
	3 in.	N/A	N/A	9	9	16	16				
	1-1/2 in.	8	N/A	13	N/A	N/A	N/A				
0 to 20°F	2 in.	6	4	12	10	19	16				
0 to –20°F	2-1/2 in.	N/A	N/A	7	N/A	13	N/A				
	3 in.	N/A	N/A	N/A	N/A	8	8				

¹ Refer to 99% Minimum Design Temperature table provided in the current edition of the ASHRAE Handbook-Fundamentals.

VENTING NOTES - Concentric Terminations are equivalent to 5 ft. of straight pipe and should be included when measuring total pipe length.

One 90° elbow is equivalent to 5 feet of straight vent pipe.

Two 45° elbows are equal to one 90° elbow.

One 45° elbow is equivalent to 2.5 feet of straight vent pipe.

Any vent pipe or elbows external to the structure must be included in total vent length calculations. See Vent Length Tables.

¹ 2 inch to 1-1/2 inch reducer required, must be field provided.

² Requires field provided 1-1/2 in. outdoor exhaust accelerator.

³ Concentric Kits **71M80** and **44W92** include 1-1/2 in. outdoor exhaust accelerator, required when used with 030, 045 and 070 input models. Accelerator is not used with 090 or 110 input models. When using 1-1/2 in. piping, the pipe must be transitioned to 2 in. pipe when used with the Concentric Kit.

⁴ Flush Mount Kit **51W11** and **51W12** includes 1-1/2 in. outdoor exhaust accelerator, required when used with 030, 045, 070 and 090 input models. Accelerator is not used with 110 input models. When using 1-1/2 in. piping, the pipe must be transitioned to 2 in. pipe when used with the Flush Mount Kit.

² Maximum Equivalent Vent Length permitted is defined as Total Length (linear feet) of vent pipe, plus equivalent length (ft.) of fittings, plus equivalent length (ft.) of termination.

³ PolyPro® poly-propylene vent pipe is a registered trademark of DuraVent®. Innoflue® is a registered trademark of Centrotherm Eco Systems. ECCO Polypropylene Vent™is a registered trademark of ECCO Manufacturing™.

VENT LENGTHS - FEET

STANDARD TERMINATION AT ELEVATION 0 - 4500 ft.

Р	ipe Size		1-1/2 in.		2 in.			2-1/2 in.			3 in.		
	Input	045	070	090	045	070	090	045	070	090	045	070	090
	1	20	15	N/A	71	56	34	105	105	83	128	127	108
	2	15	10	N/A	66	51	29	100	100	78	123	122	103
	3	10	N/A	N/A	61	46	24	95	95	73	118	117	98
	4	N/A	N/A	N/A	56	41	19	90	90	68	113	112	93
No. of	5	N/A	N/A	N/A	51	36	14	85	85	63	108	107	88
90 ELL	6	N/A	N/A	N/A	46	31	9	80	80	58	101	102	83
	7	N/A	N/A	N/A	41	26	4	75	75	53	98	97	78
	8	N/A	N/A	N/A	36	21	N/A	70	70	48	93	92	73
	9	N/A	N/A	N/A	31	16	N/A	65	65	43	88	87	68
	10	N/A	N/A	N/A	26	11	N/A	60	60	38	83	82	63

STANDARD TERMINATION ELEVATION 4501 - 10,000 ft.

P	Pipe Size 1-1/2 in.			2 in.			2-1/2 in.			3 in.			
	Input	045	070	090	045	070	090	045	070	090	045	070	090
	1	20	15	N/A	71	56	34	105	105	83	128	127	108
	2	15	10	N/A	66	51	29	100	100	78	123	122	103
	3	10	N/A	N/A	61	46	24	95	95	73	118	117	98
	4	N/A	N/A	N/A	56	41	19	90	90	68	113	112	93
No. of	5	N/A	N/A	N/A	51	36	14	85	85	63	108	107	88
90 ELL	6	N/A	N/A	N/A	46	31	9	80	80	58	103	102	83
	7	N/A	N/A	N/A	41	26	4	75	75	53	98	97	78
	8	N/A	N/A	N/A	36	21	N/A	70	70	48	93	92	73
	9	N/A	N/A	N/A	31	16	N/A	65	65	43	88	87	68
	10	N/A	N/A	N/A	26	11	N/A	60	60	38	83	82	63

CONCENTRIC TERMINATION AT ELEVATION 0 - 4500 ft.

Р	Pipe Size 1-1/2 in.				2 in.			2-1/2 in.			3 in.		
	Input	045	070	090	045	070	090	045	070	090	045	070	090
	1	15	10	N/A	63	48	32	95	95	79	111	111	104
	2	10	N/A	N/A	58	43	27	90	90	74	106	106	99
	3	N/A	N/A	N/A	53	38	22	85	85	69	101	91	94
	4	N/A	N/A	N/A	48	33	17	80	80	64	96	96	89
No. of	5	N/A	N/A	N/A	43	28	12	75	75	59	91	91	84
90 ELL	6	N/A	N/A	N/A	38	23	7	70	70	54	96	86	79
	7	N/A	N/A	N/A	33	18	2	65	65	49	81	81	74
	8	N/A	N/A	N/A	28	13	N/A	60	60	44	76	76	69
	9	N/A	N/A	N/A	23	8	N/A	55	55	39	71	71	64
	10	N/A	N/A	N/A	18	3	N/A	50	50	34	66	66	59

CONCENTRIC TERMINATION ELEVATION 4501 - 10,000 ft.

Pipe Size			1-1/2 in.			2 in.			2-1/2 in.			3 in.		
	Input	045	070	090	045	070	090	045	070	090	045	070	090	
	1	15	10	N/A	63	48	32	95	95	79	111	111	104	
	2	10	N/A	N/A	58	43	27	90	90	74	106	106	99	
	3	N/A	N/A	N/A	53	38	22	85	85	69	101	101	94	
	4	N/A	N/A	N/A	48	33	17	80	80	64	96	96	89	
No. of	5	N/A	N/A	N/A	43	28	12	75	75	59	91	91	84	
90 ELL	6	N/A	N/A	N/A	38	23	7	70	70	54	86	86	79	
	7	N/A	N/A	N/A	33	18	2	65	65	49	81	81	74	
	8	N/A	N/A	N/A	28	13	N/A	60	60	44	76	76	69	
	9	N/A	N/A	N/A	23	8	N/A	55	55	39	71	71	64	
	10	N/A	N/A	N/A	18	3	N/A	50	50	34	66	66	59	

VENT LENGTHS - EXHAUST USING VENTILATED ATTIC/CRAWLSPACE INTAKE AIR

STANDARD TERMINATION AT ELEVATION 0 - 10,000 ft.

Pip	e Size		1-1/2 in.			2 in.			2-1/2 in.			3 in.	
	Input	045	070	090	045	070	090	045	070	090	045	070	090
	1	15	10	N/A	61	46	24	90	90	68	108	107	88
	2	10	N/A	N/A	56	41	19	85	85	63	103	102	83
	3	N/A	N/A	N/A	51	36	14	80	80	58	98	97	78
	4	N/A	N/A	N/A	46	31	9	85	75	63	93	92	73
No. of	5	N/A	N/A	N/A	41	26	4	70	70	48	88	87	68
90 ELL	6	N/A	N/A	N/A	36	21	N/A	65	65	43	83	82	63
	7	N/A	N/A	N/A	31	16	N/A	60	60	38	78	77	58
	8	N/A	N/A	N/A	26	11	N/A	55	55	33	73	72	53
	9	N/A	N/A	N/A	21	6	N/A	50	50	28	68	67	48
	10	N/A	N/A	N/A	16	1	N/A	45	45	23	63	62	43

GAS	GAS HEAT ACCESSORIES													
Input	_	Altitude Switch Kit	Natural Gas to LPG/Propane Kit	LPG/Propane to Natural Gas Kit	Natural Gas High Altitude Orifice Kit	LPG/Propane High Altitude Orifice Kit	Muffler (US Only)							
	4501 - 7500 ft. 7501 - 10,000 ft.		0 - 7500 ft.	0 - 7500 ft.	7501- 10,000 ft.	7501- 10,000 ft.								
045	14A47	14A50	11K51	77W09	73W37	11K46	15Y66 (2-inch)							
070	14A55	14A56	11K51	77W09	73W37	11K46	15Y66 (2-inch)							
090	14A54	14A53	11K51	77W09	73W37	11K46	15Y66 (2-inch)							

HIGH ALTITUDE DERATE

NOTE - Units may be installed at altitudes up to 10,000 ft.

At altitudes above 4501 ft. the unit must be derated to match the manifold pressure information shown below.

Units installed at altitudes of 4501 to 10,000 ft. require a pressure switch change.

Units installed at altitudes of 7501 to 10,000 ft. require an orifice change.


See the Gas Heat Accessories table for ordering information.

NOTE - This is the only permissible derate for these units.

NOTE - In Canada, certification for installations at elevations over 4500 feet is the jurisdiction of local authorities.

					Man	ifold Pr	essure i	n. w.g.				Supply Line	
Input	Gas	0 - 45	600 ft.	4501 -	5500 ft.	5501 -	6500 ft.	6501 -	7500 ft.	7501 - 1	0,000 ft.	Pres in. v 0 - 10,	w.g.
		Low Fire	High Fire	Min.	Max.								
All Sizes	Natural	1.7	3.5	1.6	3.3	1.5	3.2	1.5	3.1	1.7	3.5	4.5	13.0
	LPG/Propane	4.5	10.0	4.2	9.4	4.0	9.1	3.9	8.9	4.5	10.0	11.0	13.0

DIMENSIONS UNIT

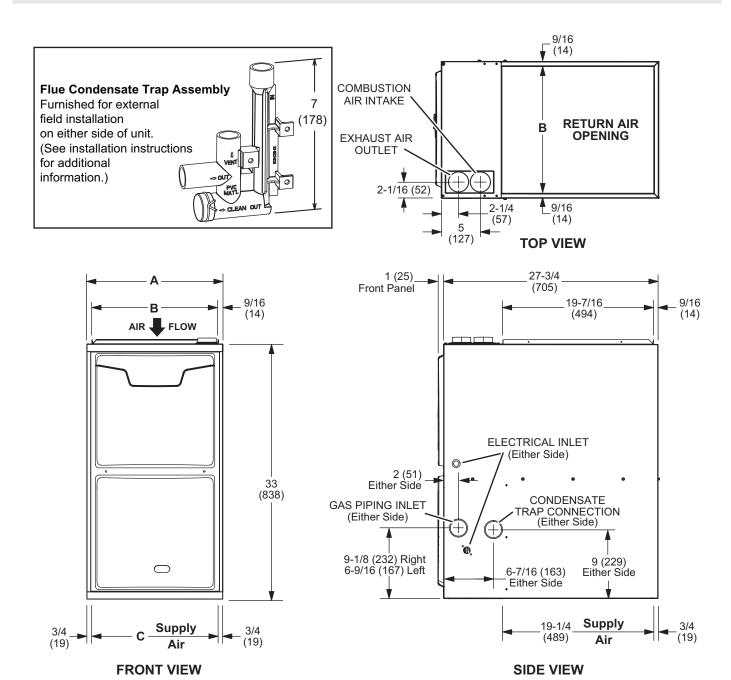


Model No.		A	E	3	(<u> </u>
	in.	in. mm in		mm	in.	mm
ML296DF045XV36BK	17-1/2	446	16-3/8	416	16	406
ML296DF070XV48BK						
ML296DF090XV60CK	21	533	19-7/8	505	19-1/2	495


(559)

DOWNFLOW FILTER CABINET


"B AND "C" WIDTH FURNACES (Two Filters)

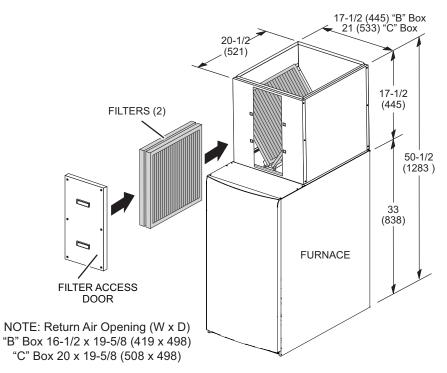



DOWNFLOW COMBUSTIBLE FLOORING BASE

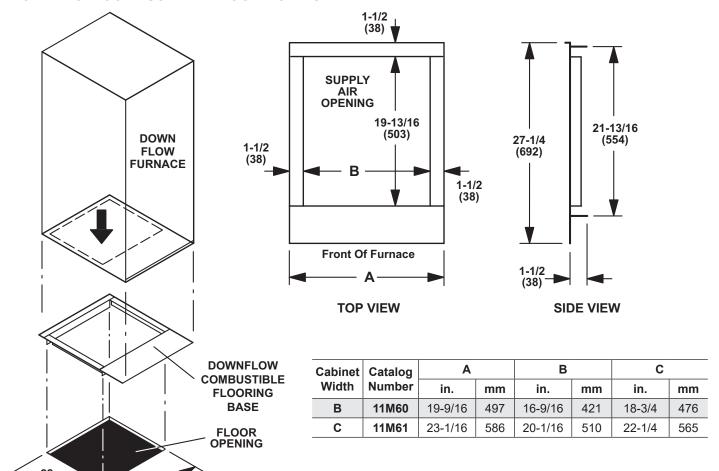


Model		Coil/Fu		Co Hei		Overall Height		
CK40DT	CRX35	in.	mm	in.	mm	in.	mm	
CK40DT-24B	CRX35-24B	17-1/2	445	18	457	51	1295	
CK40DT-30/36B	CRX35-30/36B	17-1/2	445	23-1/2	597	56-1/2	1435	
CK40DT-30/36C	CRX35-30/36C	21	533	23-1/2	597	56-1/2	1435	
CK40DT-42B	CRX35-42B	17-1/2	445	23-1/2	597	56-1/2	1435	
CK40DT-48C	CRX35-48C	21	533	27-1/2	699	60-1/2	1537	
CK40CT-50/60C	CRX35-50/60C	21	533	27-1/2	699	60-1/2	1537	

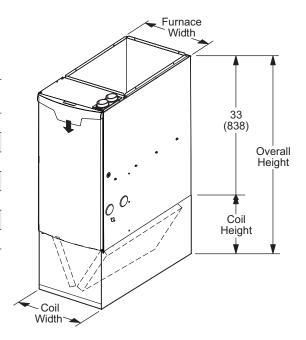


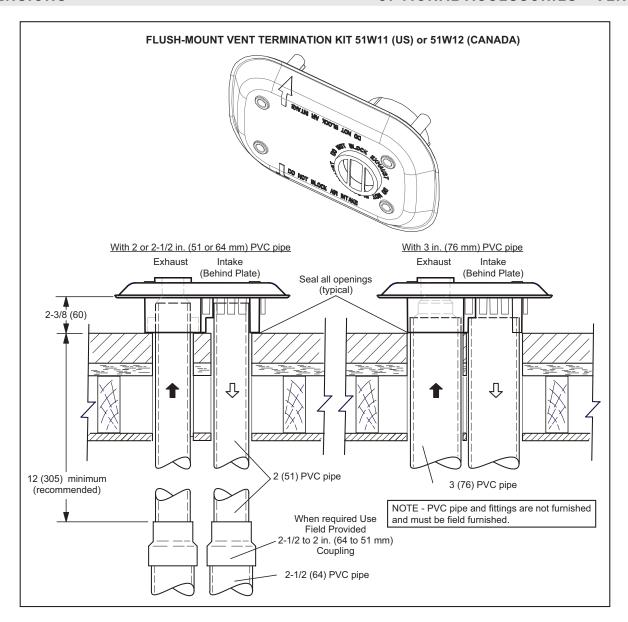

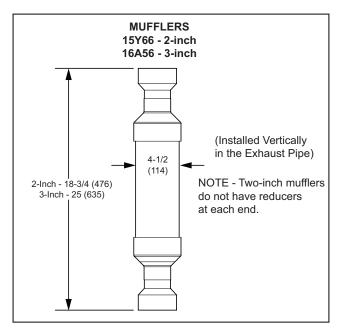

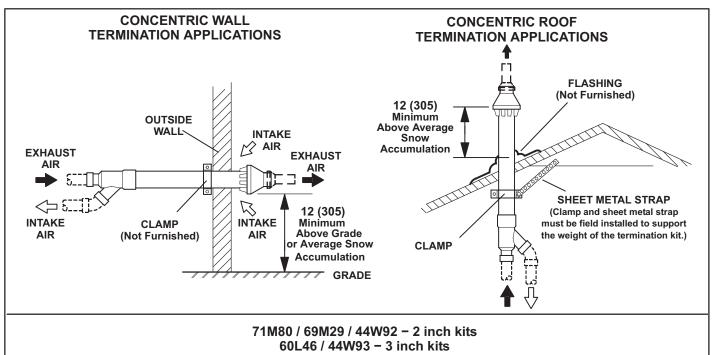


See Installation Instructions for additional information.

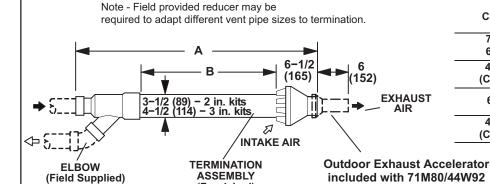


(Furnished)

Cat. No.	A		В	
Cat. No.	in.	mm	in.	mm
71M80 69M29	33-3/8	848	16-3/4	425
44W92 (Canada)	29	737	15-1/2	394
60L46	38-7/8	987	21-3/16	538
44W93 (Canada)	36-1/8	918	19-1/2	495

NOTE - Typical illustration for dimensions only. Design may vary depending on kit ordered.

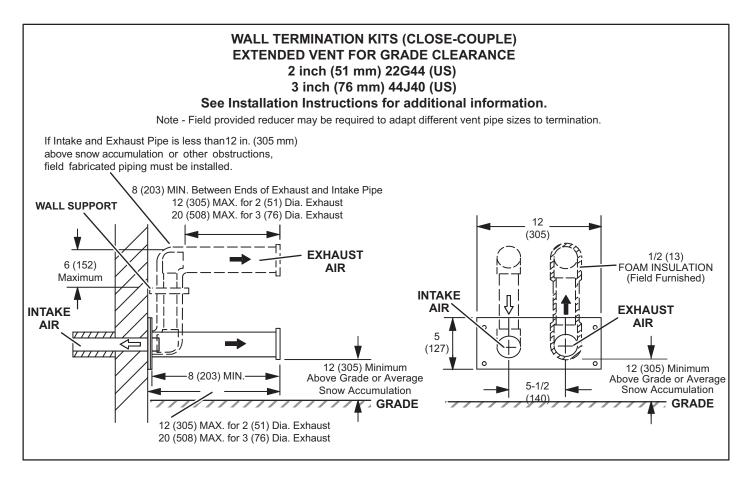

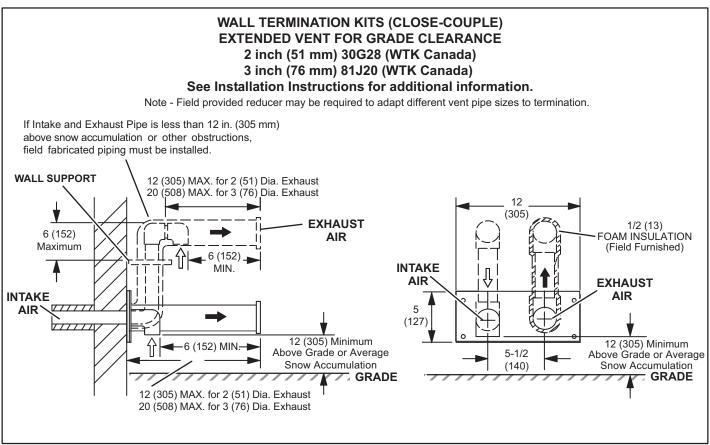

BLOWER DATA

ML296DF045XV36BK BLOWER PERFORMANCE (less filter)

0 through 0.8 in. w.g. (Heating) and 0 through 1.0 in. w.g. (Cooling) External Static Pressure Range

"ADJUST"				Speed Swite	ch Positions							
Switch	Sec	ond Stage "H	EAT" Speed -	cfm	Seco	ond Stage "C	OOL" Speed	cfm				
Positions	Low	Med-Low	¹ Med-High	High	Low	Med-Low	Med-High	¹ High				
+	770	860	945	1045	915	1100	1200	1320				
¹ NORM	710	780	860	960	845	1010	1110	1215				
_	635	710	775	855	750	905	995	1100				
"ADJUST"	First Stage "HEAT" Speed - cfm First Stage "COOL" Speed - cfm											
Switch Positions	Low	Med-Low	¹ Med-High	High	Low	Med-Low	Med-High	¹ High				
+	700	760	855	940	625	785	860	965				
¹ NORM	645	690	775	855	585	710	770	870				
_	590 630		700	765	545	660	705	780				

¹ Factory default jumper setting.

NOTES - The effect of static pressure is included in air volumes shown.

First stage HEAT is approximately $\bf 91\%$ of the same second stage HEAT speed position.

First stage COOL (two-stage air conditioning units only) is approximately 70% of the same second stage COOL speed position.

Continuous Fan Only speed is approximately 38% of the same second stage COOL speed position.

Lennox® LZSV Variable Zoning System Applications - Minimum blower speed is 300 cfm.

ML296DF045XV36BK BLOWER MOTOR WATTS (COOLING)

Jumper Speed						Moto	r Watt	s @ V	arious	Exter	nal St	atic Pı	ressur	es - in	. wg.				
Jumper : Positi	- 1				First	Stage							S	Secon	d Stag	е			
1 03111	Olio	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
"+" (Plus	(Plus) SETTING ("Adjust" Jumper at "+" Setting)																		
	Tap D	61	83	98	121	145	166	191	212	134	156	184	208	238	261	281	305	325	350
"COOL"	Tap C	91	120	144	166	192	212	233	250	210	231	262	293	316	350	376	409	432	458
Speed	Тар В	111	141	162	191	212	234	260	281	250	287	320	347	388	419	438	473	506	524
	Tap A		176	205	232	258	282	304	332	330	368	402	429	463	500	529	532	537	531
"NORM"	(Normal) SET	TING (("Adju	st" Ju	mper	at "NC	RM"	Setting	g)									
	Tap D	55	71	92	107	133	148	174	187	107	132	160	187	202	232	256	278	300	322
"COOL"	Tap C	72	94	121	148	164	185	208	229	167	198	228	256	277	300	329	357	384	398
Speed	Тар В	84	116	139	158	185	196	230	250	208	243	280	304	330	356	381	406	438	466
	Тар А	112	143	168	196	222	239	267	283	268	302	338	364	399	417	453	476	503	526
"—" (Min	us) SET	TING	("Adju	ıst" Ju	ımper	at "—	" Setti	ng)											
Tap D 51 71 86 106 123 144 161 17										79	105	127	153	175	196	220	239	264	283
-	Tap C	53	82	105	123	147	168	191	207	121	157	182	206	234	251	283	299	332	346
Speed	Тар В	66	91	120	138	159	179	200	219	162	185	212	239	268	294	323	348	365	388
	Тар А	85	114	143	164	189	207	235	252	200	226	255	292	316	347	377	398	424	453

BLOWER DATA

ML296DF070XV48BK BLOWER PERFORMANCE (less filter) BOTTOM RETURN AIR

0 through 0.8 in. w.g. (Heating) and 0 through 1.0 in. w.g. (Cooling) External Static Pressure Range

"ADJUST"				Speed Swite	ch Positions						
Switch	Sec	ond Stage "H	EAT" Speed -	cfm	Seco	ond Stage "C	OOL" Speed	· cfm			
Positions	Low	Med-Low	¹ Med-High	High	Low	Med-Low	Med-High	¹ High			
+	1135	1300	1450	1620	1125	1360	1580	1805			
¹ NORM	1025	1175	1325	1475	1020	1220	1435	1650			
_	930	1060	1185	1315	920	1110	1290	1500			
"ADJUST"	First Stage "HEAT" Speed - cfm First Stage "COOL" Speed - cfm										
Switch Positions	Low	Med-Low	¹ Med-High	High	Low	Med-Low	Med-High	¹ High			
+	855	945	1050	1185	770	970	1105	1275			
¹ NORM	770	810	960	1085	700	850	1010	1160			
_	680	725	820	970	615	755	875	1045			

¹ Factory default jumper setting.

NOTES - The effect of static pressure is included in air volumes shown.

First stage HEAT is approximately 73% of the same second stage HEAT speed position.

First stage COOL (two-stage air conditioning units only) is approximately 70% of the same second stage COOL speed position.

Continuous Fan Only speed is approximately 38% of the same second stage COOL speed position.

Lennox® LZSV Variable Zoning System Applications - Minimum blower speed is 380 cfm.

ML296DF070XV48BK BLOWER MOTOR WATTS (COOLING)

Jumper Speed					Moto	r Watt	s @ V	arious	Exter	nal St	atic Pı	essur	es - in	. wg.			•		
Jumper : Positi	- 1				First	Stage							S	Second	d Stag	е			
1 03111	Olio	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
"+" (Plus	us) SETTING ("Adjust" Jumper at "+" Setting)																		
	Tap D	79	102	124	147	169	194	208	237	166	196	224	251	286	313	339	362	389	417
"COOL"	Tap C	118	144	175	202	228	253	273	291	273	305	338	368	397	425	457	490	519	548
Speed	Тар В	163	196	224	251	281	307	332	356	417	456	492	527	553	596	626	654	695	734
	Tap A		265	290	323	353	383	414	441	603	648	699	735	747	744	749	737	738	736
"NORM"	(Normal) SET	TING (("Adju	st" Ju	mper	at "NC	RM"	Setting	g)									
- HORW	Tap D	66	87	106	127	145	165	186	216	139	159	188	221	242	275	297	315	341	364
"COOL"	Tap C	93	114	138	169	190	215	238	266	211	241	269	296	325	359	387	416	439	465
Speed	Tap B	127	155	185	210	237	261	293	308	322	356	392	421	452	486	520	552	577	616
	Тар А	184	211	238	263	299	326	352	376	469	510	545	586	618	649	682	713	734	738
"—" (Min	us) SET	TING	("Adjı	ıst" Jı	ımper	at "—	" Setti	ng)											
	Tap D 54 74 91 109 125 148 170 1								194	111	136	165	191	212	237	260	286	312	342
"COOL"	Tap C	75	96	119	140	161	181	206	231	157	190	217	245	274	304	331	355	381	404
	Тар В	98	123	146	171	199	223	250	276	233	266	302	332	358	396	424	451	481	503
	Тар А	138	166	197	220	245	275	296	323	360	390	427	461	496	522	553	588	618	650

BLOWER DATA

ML296DF090XV60CK BLOWER PERFORMANCE (less filter)

BOTTOM RETURN AIR, RETURN AIR FROM BOTH SIDES OR RETURN AIR FROM BOTTOM AND ONE SIDE

0 through 0.8 in. w.g. (Heating) and 0 through 1.0 in. w.g. (Cooling) External Static Pressure Range

"ADJUST"				Speed Swite	ch Positions						
Switch	Sec	ond Stage "H	EAT" Speed -	cfm	Seco	ond Stage "C	OOL" Speed	· cfm			
Positions	Low	Med-Low	¹ Med-High	High	Low	Med-Low	Med-High	¹ High			
+	1430	1555	1725	1865	1350	1550	1755	1985			
¹ NORM	1300	1415	1570	1685	1240	1445	1635	1815			
_	1195	1275	1415	1515	1120	1290	1455	1630			
"ADJUST"	First Stage "HEAT" Speed - cfm First Stage "COOL" Speed - cfm										
Switch Positions	Low	Med-Low	¹ Med-High	High	Low	Med-Low	Med-High	¹ High			
+	1175	1275	1415	1505	985	1130	1280	1440			
¹ NORM	1075	1165	1295	1375	905	1035	1180	1315			
_	980	1045	1160	1240	835	940	1070	1195			

¹ Factory default jumper setting.

NOTES - The effect of static pressure is included in air volumes shown.

First stage HEAT is approximately **80%** of the same second stage HEAT speed position.

First stage COOL (two-stage air conditioning units only) is approximately 70% of the same second stage COOL speed position.

Continuous Fan Only speed is approximately 38% of the same second stage COOL speed position.

Lennox® LZSV Variable Zoning System Applications - Minimum blower speed is 460 cfm.

ML296DF090XV60CK BLOWER MOTOR WATTS (COOLING)

Jumper Speed						Moto	r Watt	s @ V	arious	Exter	nal St	atic Pı	ressur	es - in	. wg.				
Jumper : Positi	•				First	Stage							S	Secon	d Stag	е			
1 03111	Olio	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
"+" (Plus)	SETTII	NG ("A	Adjust	" Jum	per at	"+" S	etting)												
	Tap D	113	139	156	181	206	228	248	267	235	264	294	321	347	372	396	430	453	483
"COOL"	Tap C	151	178	204	222	254	275	295	324	334	364	396	429	454	482	516	546	580	611
Speed	Тар В	205	233	255	284	310	333	368	388	464	504	536	576	598	640	672	703	744	768
	Тар А	271	302	325	349	381	409	432	464	659	715	764	791	819	849	896	917	944	963
"NORM"	(Norma) SET	TING (("Adju	st" Ju	mper	at "NC	RM"	Setting	g)									
	Tap D	93	116	139	158	180	202	226	244	203	228	250	276	300	318	353	381	400	430
"COOL"	Tap C	128	150	174	197	218	244	265	287	290	312	344	374	399	423	449	474	506	536
Speed	Тар В	161	189	217	241	262	288	310	340	392	436	456	485	513	543	574	594	631	667
	Тар А	216	245	269	291	324	343	372	403	501	547	581	617	648	686	717	749	782	808
"—" (Min	us) SET	TING	("Adjı	ıst" Jı	ımper	at "—	" Setti	ng)											
	Tap D	80	104	125	146	164	187	202	224	159	182	211	233	254	279	305	326	348	375
"COOL"	Tap C	103	126	147	168	193	217	238	257	213	245	269	291	318	348	378	400	427	444
	Тар В	137	161	182	205	230	256	273	298	287	322	347	372	403	428	453	489	516	544
	Тар А	174	199	227	249	276	298	328	353	375	417	449	484	514	544	573	608	639	662

REVISIONS	
Sections	Description of Change
Blower Data	Updated speed tap descriptions.











Visit us at www.LennoxPros.com
For the latest technical information, www.LennoxPros.com
Contact us at 1-800-4-LENNOX