PACKAGED HEAT PUMP

LDT

ENLIGHT ROOFTOP UNITS

Dual-Fuel High Efficiency | Lennox® CORE Controller | R-454B | 60Hz

COMMERCIAL
PRODUCT SPECIFICATIONS (EHB)

25 Tons
Net Cooling Capacity – 274,000 Btuh
Net Heating Capacity - 270,000 Btuh
Gas Input Heat Capacity - 85,000 to 480,000 Btuh

ENLIGHT



CORE CONTROL SYSTEM

MSAV™ MULTI-STAGE AIR VOLUME

Humiditrol

SMARTWIRE™ SYSTEM

ASHRAE Standard 90.1

MODEL NUMBER IDENTIFICATION

L D T 302 H 5 M S 1 Y

Brand
L = Lennox®

Unit Type
D = Packaged Dual-Fuel (Heat Pump/Gas Heating) Unit

Family
T = Enlight Series

Nominal Cooling Capacity - Tons
302 = 25 Tons

Cooling Efficiency
H = High Efficiency

Refrigerant Type
5 = R-454B

Blower Type
M = MSAV® Multi-Stage Air Volume, Belt Drive

Heating Type
Two Stage
S = Standard Gas Heat, 2 Stage
M = Medium Gas Heat, 2 Stage
H = High Gas Heat, 2 Stage
Modulating
P = Standard Gas Heat, Modulating
K = Medium Gas Heat, Modulating
R = High Gas Heat, Modulating

Minor Design Sequence
1 = 1st Revision
2 = 2nd Revision
3 = 3rd Revision


Voltage
Y = 208/230V-3 phase-60hz
G = 460V-3 phase-60hz
J = 575V-3 phase-60hz

Form Number 211117 | November 2026
Supersedes all previous versions

FEATURE HIGHLIGHTS

Enlight rooftop units featuring the Lennox® CORE Control System create a bright future through a highly energy-efficient and environmentally sustainable design. Comprehensive configurations meet a wide range of applications, making it the most flexible product line Lennox has to offer.

1. Scroll Compressors
2. Copper Tube Outdoor Coil
3. Thermal Expansion Valves
4. Filters/Driers
5. Reversing Valve
6. Outdoor Coil Fan Motors
7. Heat Exchanger/Inshot Burners
8. Heavy Gauge Steel Cabinet
9. Hinged Access Panels
10. MSAV® Multi-Stage Air Volume Blower
11. Air Filters
12. Lennox® CORE Control System
13. Economizer (option)
14. Downflow Barometric Relief Dampers (option)
15. Power Exhaust (option)
16. Humiditrol® Dehumidification System (option, not shown)

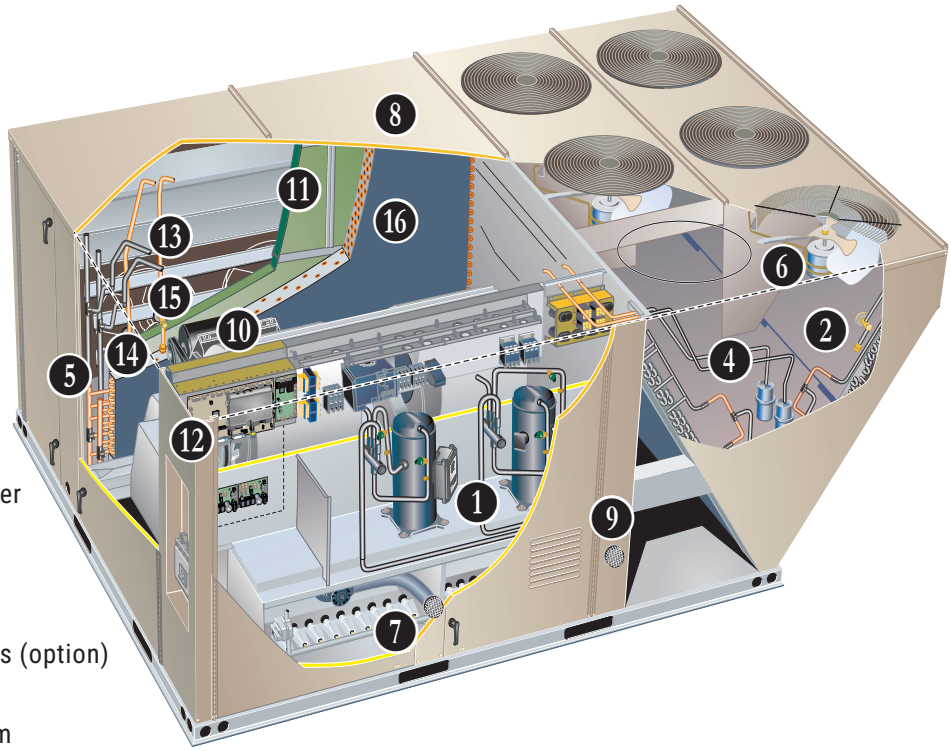

CONTENTS

Approvals And Warranty 3
Blower Data 31
Control System 9
Dimensions 39
- Accessories 40
- Unit 39
Electrical Accessories 35
Electrical Data 35
Features And Benefits 3
High Altitude Derate 28
Humiditrol® Dehumidification System Option 14
Humiditrol® Dehumidification System Ratings 30
Model Number Identification 1
Optional Conventional Temperature Control Systems 15
Options / Accessories 23
Outdoor Sound Data 37
Ratings 29
Specifications 27
Specifications - Gas Heat 28
Unit Clearances 36
Weight Data 38

APPROVALS AND WARRANTY

APPROVALS

- All models tested at conditions included in AHRI Standard 340/360-2022
- ETL and CSA listed
- All models are ASHRAE 90.1-2025 compliant
- All models meet DOE 2023 energy efficiency standards
- All models are listed to UL 60335-1 and UL 60335-2-40 and meet the Refrigerant Detection and Dissipation Requirements
- Components are bonded for grounding to meet safety standards for servicing required by ETL, NEC and CEC
- All models meet California Code of Regulations, Title 24 and ASHRAE 90.1-2025 Section 6.4.3.10 requirements for staged airflow
- All models have been sound tested in accordance with test conditions included in AHRI Standard 270 or 370
- ISO 9001 Registered Manufacturing Quality System
- All models have FSA approval and are compliant with standard ASCE 7-22 (ASD) and the Florida Building Code Eighth Edition (2023)
- Units are charged with virgin refrigerant to comply with NYCRR Part 494
- All models are fully charged and run tested to verify unit operation and functionality

WARRANTY

- Stainless Steel Heat Exchanger - Limited fifteen years
- Compressors - Limited five years
- Lennox® CORE Unit Controller - Limited three years
- Variable-Frequency Drive (VFD) - Limited five years
- High Performance Economizers (optional) - Limited five years
- All other covered components - Limited one year

FEATURES AND BENEFITS

DUAL-FUEL OPERATION

(Heating Mode)

- Operates the heat pump for 1st stage heating
  - If 1st stage heat settings are not met, 2nd stage activates gas heating (secondary heat source)
- Mechanical heat pump operation automatically terminates on gas heat start-up
- Lennox® CORE Control System automatically changes blower speeds between heat pump heating and gas heating
- Blower operates in high speed during 1st stage (heat pump) operation and terminates during changeover to gas heat operation
- Blower starts when heat exchanger is warm, and runs in high speed during 2nd stage (gas heat) operation
  - If continuous blower operation is available on the thermostat, a change in blower speed automatically occurs during heat pump to gas heat changeover.

COOLING/HEATING SYSTEM

- Designed to maximize sensible and latent cooling and heating performance at design conditions
- Mechanical cooling operates from 0°F to 125°F
- Mechanical heating operates down to 35°F ambient (default dual fuel balance point) adjustable 10°F to 65°F
- Mechanical heating operates at ambient temperatures above 10°F
- Gas heating operates from 35°F down to -40°F (default) dual fuel balance point) adjustable 10°F to 65°F

NOTE - Optional Low Temperature Vestibule Heater extends gas heat operation down to -60°F.

R-454B Refrigerant

- Low GWP (Global Warming Potential)
- Zero ODP (Ozone Depletion Potential)
- Low Toxicity/Lower Flammability - A2L
- Unit is factory pre-charged

FEATURES AND BENEFITS

COOLING/HEATING SYSTEM (Continued)

1 Scroll Compressors
- System consists of one two-stage compressor and one single-stage scroll compressor
- Resiliently mounted on rubber grommets for quiet operation

Compressor Crankcase Heaters
- Protects against refrigerant migration that can occur during low ambient operation or during extended off cycles

2 Coil Construction
- Copper tube construction
- Enhanced rippled-edge aluminum fins
- Flared shoulder tubing connections
- Silver soldered construction
- Factory leak tested

Evaporator Coil
- Copper tube construction
- Enhanced rippled-edge aluminum fins
- Flared shoulder tubing connections
- Silver soldered construction
- Factory leak tested
- Cross-row circuiting with rifled tubing

3 Thermal Check/Expansion Valves
- Ensures optimal performance throughout the application range
- Removable element head
- Factory configured, no adjustment required

4 Filter/Driers
- High capacity filter/drier protects the system from dirt and moisture

5 Reversing Valve
- 4-way interchange reversing valve rapidly changes the direction of refrigerant flow resulting in quick changeover from cooling to heating and vice versa

High Pressure Switches

Protects the compressor from overload conditions such as dirty condenser coils, blocked refrigerant flow or loss of outdoor fan operation

Low Pressure Switches
- Protects the compressors from low pressure conditions such as low refrigerant charge or low/no airflow

Indoor Coil Freeze Protection
- Protects the indoor coil from damaging ice build-up due to conditions such as low/no airflow, or low refrigerant charge

Antimicrobial Condensate Drain Pan
- Composite pan, sloped to meet drainage requirements per ASHRAE 62.1
- Antimicrobial additive prevents growth of mold and mildew, which improves indoor air quality and reduces drain line blockage
- Side drain connections

NOTE - Stainless steel drain pan available as a factory installed option.

6 Outdoor Coil Fan Motors
- Thermal overload protected
- Totally enclosed
- Permanently lubricated ball bearings
- Shaft up
- Wire basket mountOutdoor Coil Fans
- PVC coated fan guard furnished

Required Selections

Cooling Capacity
- Specify nominal cooling capacity

Options/Accessories

Factory or Field Installed

Drain Pan Overflow Switch
- Monitors condensate level in drain pan
- Shuts down unit if drain becomes clogged

Stainless Steel Drain Pan
- Non-corrosive drain pan

Field Installed

Condensate Drain Trap
- Available in copper or PVC

LOW GWP REFRIGERANT DETECTION SYSTEM (RDS)
- Complies with UL 60335-2-40 approved standard
- Required for all systems using R-454B refrigerant
- Factory installed on all units
- Consists of a refrigerant detection sensor(s) and a mitigation control
- Ensures safe operation for systems equipped with R-454B refrigerant
- Sensor(s) monitors indoor coil area for R-454B refrigerant
- If R-454B refrigerant is detected the refrigerant detection system will prevent compressor and heating operation until R-454B refrigerant is no longer detected
- Refrigeration detection system energizes blower if any R-454B refrigerant is detected to mitigate any concentrations of refrigerant from the unit and the system

HEATING SYSTEM

7 Heat Exchanger
- Tubular construction, stainless steel
- Life-cycle tested
- Aluminized steel inshot burners
- Direct spark ignition
- Electronic flame sensor
- Combustion air inducer
- Redundant automatic gas valves with manual shut-off

Electronic Pilot Ignition
- Electronic spark igniter provides positive direct ignition of burners on each operating cycle
- Permits main gas valve to stay open only when the burners are proven to be lit
- If loss of flame occurs, gas valve closes, shutting off the gas to the burners
- LED indicates status and aids in troubleshooting
- Factory installed in the control section

Limit Controls
- Redundant limit controls with fixed temperature setting
- Protects heat exchanger and other components from overheating

Safety Switches
- Flame roll-out switch
- Flame sensor
- Combustion air inducer proving switch
- Protects system operation

Two-Stage Gas Heat
- Two-Stage gas valve adjusts heat for low and high output

NOTE – Modulating Gas Heat may be ordered as a factory installed option. See Options/Accessories table.

Required Selections

Gas Input Choice - Order one:
- Standard Gas Heat (all models) - 85,000-260,000 Btuh
- Medium Gas Heat (all models) - 117,000-360,000 Btuh
- High Gas Heat (180-240 models) - 156,000-480,000 Btuh

NOTE – Two-stage heat models can be operated with four stages of gas heating when controlled in either zone sensor, Discharge Air Control, or fresh air tempering mode on the Lennox® CORE unit controller (available when using the CS8500 thermostat or when connected to Building Automation Systems using BACnet, LonTalk, or S-Bus protocols).

Options/Accessories

Factory Installed

Two-Stage Gas Heat
- Two-Stage gas valve adjusts heat for low and high output

Modulating Gas Heat
- Modulating gas valve adjusts heat output in real time based on demand for smoother temperature control
- Includes two factory-installed sensors:
  - Mixed Air Sensor
  - Indirect Sensing Discharge Air Temperature Sensor

NOTE - Modulating Gas Heat for Horizontal Applications requires a Remote Discharge Air Temperature Sensor / Fresh Air Tempering. Sensor is shipped with the unit for field installation if unit is configured at the factory. Sensor must be ordered separately for field installation if unit is not factory configured.

Field Installed

Low Temperature Vestibule Heater
- Electric heater automatically controls minimum temperature in gas burner compartment when temperature is below -40°F
- CSA certified to allow operation of unit down to -60°F

Combustion Air Intake Extensions
- Recommended for use with existing flue extension kits in areas where high snow areas can block intake air
- Order two kits

LPG/Propane Kits
- Conversion kit to field change over units from Natural Gas to LPG/Propane
- Order two kits

Vertical Vent Extension Kit
- Use to exhaust flue gases vertically above unit
- Required when unit vent is too close to fresh air intakes per building codes
- Also prevents ice formation on intake louvers
- Kit contains vent transition, vent tee, drain cap and installation hardware
- Order two kits.

NOTE - Straight vent pipes (4 in. B-Vent) and caps are not furnished and must be field supplied. Refer to kit instructions for additional information

FEATURES AND BENEFITS

CABINET

8 Construction
- Heavy-gauge steel panels
- Full perimeter heavy-gauge galvanized steel base rail
- Base rails have rigging holes
- Three sides of the base rail have forklift slots
- Raised edges around duct and power entry openings in the bottom of the unit for water protection

Airflow Choice
- Units are shipped in downflow (vertical) return air flow configuration

NOTE - Units can be field converted to horizontal air flow with optional Horizontal Return Air Panel Kit and Horizontal Roof Curb.

Power/Gas Entry
- Electrical and gas lines can be routed through the unit base or through horizontal access knock-outs

Exterior Panels
- Constructed of heavy-gauge, galvanized steel
- Textured pre-paint with polyurethane finish
- Cyclic salt fog and UV exposure up to 1,680 hours per ASTM D5894

Insulation
- Fully insulated with non-hygroscopic fiberglass insulation (conditioned areas)
- Unit base is fully insulated
- Base insulation serves as an air seal to the roof curb, eliminating the need to add a seal during installation

9 Hinged Access Panels
- Filter section
- Blower section
- Heating section
- Compressor/controls section
- Panel seals and quarter-turn latching handles provide a tight air and water seal

Options/Accessories

Factory Installed

Corrosion Protection
- Completely flexible immersed coating
- Electrodeposited dry film process (AST ElectroFin E-Coat)
- ASTM B117 / DIN 53167 Salt Spray - 15,000+ hours
- ASTM G85 Annex A3 SWAAT Modified Salt Spray - 3000 hours
- VA Master Construction Specification Division 23 for High Humidity Installations
- CID AA-52474A (GSA)
- Indoor Corrosion Protection:
  - Coated coil
  - Painted blower housing
  - Painted base
- Outdoor Corrosion Protection:
  - Coated coil
  - Painted outdoor base

Factory or Field Installed

Combination Coil/Hail Guards
- Heavy gauge steel frame
- Painted to match cabinet
- Expanded metal mesh protects outdoor coil

Field Installed

Horizontal Return Air Panel Kit
- Required for horizontal applications with Horizontal Roof Curb
- Contains panel with return air opening for field replacement of existing unit panel and panel to cover bottom return air opening in unit
- See dimension drawings.

Burglar Bars
- Heavy gauge galvanized frame
- Fully welded
- 3/4 in. bar meets ASTM specification
- Frame meets ASTM A446, A525, A526 and A527 specification
- Burglar bars designed to fit ductwork

BLOWER

- A wide selection of supply air blower options are available to meet a variety of airflow requirements

Motor

- Overload protected
- Ball bearings
- Belt drive motors are offered on all models and are available in several different sizes to maximize air performance

NOTE - All blower motors 5 hp and above meet minimum energy efficiency standards in accordance with the Energy Independence and Security Act (EISA).of 2007

10 Supply Air Blower

- Forward curved blades
- Double inlet
- Blower wheel statically and dynamically balanced
- Ball bearings
- Adjustable pulley (allows speed change)
- Blower assembly slides out of unit for servicing
- Grease fittings furnished

Blower Proving Switch (Standard)

- Monitors blower operation, shuts down unit if blower fails

MSAV® Multi-Stage Air Volume

- MSAV® Multi-Stage Air Volume stages the amount of airflow according to compressor stages, heating demand, ventilation demand or smoke alarm
  - Utilizes a Variable Frequency Drive (VFD) to stage the supply air blower airflow
  - VFD alters the frequency and voltage of the power supply to the blower to control blower speed
- The amount of airflow for each stage can be set according to a parameter in the Lennox® CORE Unit Controller
  - Unit is shipped from the factory with preset airflows
  - If equipped with the optional Bypass Control the MSAV® Multi-Stage Air Volume features automatic electronic bypass control of the VFD
  - In case of a VFD malfunction, a VFD alarm is generated by the Lennox® CORE Unit controller
  - Unit controller will automatically switch to full blower speed if a VFD alarm is generated

NOTE - Units equipped a Variable Frequency Drive (VFD) are designed to operate on balanced, three-phase power. Operating units on unbalanced three-phase power will reduce the reliability of all electrical components in the unit. Unbalanced power is a result of the power delivery system supplied by the local utility company. Factory-installed inverters are sized to drive blower motors with an equivalent current rating using balanced three-phase power. If unbalanced three-phase power is supplied; the installer must replace the existing factory-installed inverter with an inverter that has a higher current rating to allow for the imbalance. Refer to the installation instructions for additional information and replacement information.

Ordering Information

- Specify motor horsepower and drive kit number when base unit is ordered

Options/Accessories

Factory Installed

Supply VFD Blower Bypass Control

- Allows unit to operate as a constant air volume (CAV) unit in case of variable frequency drive (VFD) failure

NOTE - Supply VFD Blower Bypass Control is not available with High Static Power Exhaust.

Field Installed

Blower Belt Auto-Tensioner

- Provides proper tension to belt drive blower belt without the need for regular adjustments
- Maintains airflow and proper performance

ELECTRICAL

SmartWire™ System

- Keyed and color-coded wiring connectors prevent miswiring
- Wire coloring scheme is standardized across all models
- Each connection is intuitively labeled to make troubleshooting and servicing quick and easy

Electrical Plugs

- Positive connection electrical plugs connect common accessories or maintenance parts for easy removal or installation

Phase/Voltage Detection

- Monitors power supply to assure phase is correct at unit start-up
- If phase is incorrect, the unit will not start and an alarm code is reported to the unit controller
- Protects unit from being started with incorrect phasing which could lead to issues such as compressors running backwards
- Voltage detection monitors power supply voltage to assure proper voltage
- If voltage is not correct (over/under voltage conditions) the unit will not start and an alarm code is reported to the unit controller

ELECTRICAL (continued)

Required Selections

Voltage Choice
- Specify when ordering base unit

Options/Accessories

Factory Installed

Circuit Breakers
- HACR type
- Overload and short circuit protection
- Factory wired and mounted in the power entry panel
- Current sensitive and temperature activated
- Manual reset

Short-Circuit Current Rating (SCCR)
- Higher short-circuit protection up to 100kA

NOTE - Disconnect Switch is furnished and factory installed with High SCCR option

Factory or Field Installed

Disconnect Switch
- Accessible outside of unit
- Spring loaded weatherproof cover furnished

GFI Service Outlets (2)
- 115V ground fault circuit interrupter (GFCI) type
- Available non-powered, field-wired or factory-wired and powered

Field Installed

GFI Weatherproof Cover
- Single-gang cover
- Heavy-duty UV-resistant polycarbonate case construction
- Hinged base cover with gasket

INDOOR AIR QUALITY

11 Air Filters
- Disposable 2 inch MERV 4 filters furnished as standard

Options/Accessories

Factory or Field Installed

Healthy Climate® High Efficiency Air Filters
- Disposable MERV 8 or MERV 13 (Minimum Efficiency Reporting Value based on ASHRAE 52.2) efficiency 2-inch pleated filters
- Replacement Filter Media Kit With Frame
- Replaces existing pleated filter media
- Includes washable metal mesh screen and metal frame with clip for holding replaceable non-pleated filter


Field Installed

Healthy Climate® High Efficiency MERV 16 Air Filters
- Disposable MERV 16 (Minimum Efficiency Reporting Value based on ASHRAE 52.2) efficiency 2-inch pleated filters

Indoor Air Quality (CO_2) Sensors
- Monitors CO_2 levels
- Reports to the Lennox® CORE Control, which adjusts economizer dampers as needed

CONTROL SYSTEM

LENNOX® CORE CONTROL SYSTEM

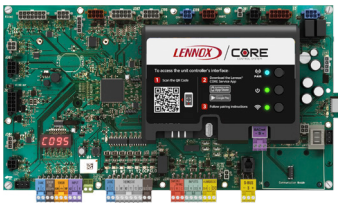

12 The Lennox® CORE Control System is designed to accelerate equipment install and service. Standard with all Enlight rooftop units, control system integrates key technologies that lower installation costs, drive system efficiency, and protect your investments.

The Lennox® CORE Unit Controller is a microprocessor-based controller that provides flexible control of all unit functions.

CORE Mobile Service App

- Guided Setup with progress indicators, detailed help, and exportable summaries to manage simple, trouble-free setup, reducing commissioning times
- Enhanced Test Functionality provides real-time sensor readings, trending, and reports that enable easy troubleshooting
- Ability to set and configure parameters of the CORE Control System to manage sequence of operation
- Economizer test function ensures economizer is operating correctly

Download on the App Store | ANDROID APP ON Google play

Additional Features:

- Built-In 7-Segment Display shows Unit Status and active alarms for easy troubleshooting
- Buttons for test and clearing delays
- SmartWire™ System with keyed and removable screw terminals ensure correct field wiring
- Built-in BACnet MS/TP and IP allow open integration to building management systems.
- Two-port Ethernet Switch enables daisy chaining for BACnet IP and automatic firmware updates

NOTE - Unit Internet Connection required.

- Profile setup copies key settings between units with the same configuration to reduce setup time
- USB port allows a technician to download and transfer unit information to help verify service was performed
- USB software updates on the Lennox® CORE Unit Controller enhance functionality without the need to change components
- Unit Controller Software

Configurable Built-In Functions

- Discharge Air Cooling Control
- Up to three distinct Cooling Airflows in Thermostat Mode
- Programmable independent heating, ventilation and cooling blower speeds
- Discharge Air Heating Control
- Economizer Control Options (See Economizer / Exhaust Air / Outdoor Air sections)
- Exhaust Fan Control Modes for fresh air damper position
- Configurable Morning Warm-up
- Night Setback Mode
- Fresh Air Tempering for Improved Ventilation
- Demand Control Ventilation
- Low Ambient Controls for operation down to 0°F
- Humiditrol® Operation
- Enhanced Dehumidification (Latent Demand Control without hot gas reheat)

Component Protection / Unit Safeguards:

- Compressor Time-Off Delay
- Adjustable Blower On/Off Delay
- Return Air Temperature Limit Control
- Safety Switch Input allows Controller to respond to a external safety switch trip
- Service Relay Output
- Thermostat Bounce Delay
- Smoke Alarm Mode has four choices (unit off, positive pressure, negative pressure, purge)
- "Strike Three" Protection
- Gas Valve Time Delay Between First and Second Stage
- Minimum Compressor Run Time

Control Methods / Interfaces:

- DDC and 24V Thermostat
- BACnet MS/TP and IP
- LONTalk (Factory and Field Option)
- Lennox S-BUS
- Zone Temperature Sensor Input
- Dehumidistat and Humidity Sensor Inputs
- Indoor Air Quality Inputs (2)
- Built-in Control Parameter Defaults
- Permanent Diagnostic Code Storage
- Field Adjustable Control Parameters (Over 200 settings)
- Multiple Configurable Digital Inputs
- LED Indicators
- PC Interface connects the Lennox® CORE Unit Controller to a PC with the Lennox Unit Controller Software

NOTE - Lennox® CORE Control System features vary with the type of rooftop unit in which the control is installed.

CONTROL SYSTEM

LENNOX® CORE CONTROL SYSTEM (continued)

Controls Options

Factory or Field Installed

Dirty Filter Switch
- Senses static pressure increase and issues alarm if necessary

Fresh Air Tempering
- Used in applications with high outside air requirements
- Controller energizes the first stage heat as needed to maintain a minimum supply air temperature for comfort, regardless of the thermostat demand
- When ordered as a factory option, sensor ships with the unit for field installation

Smoke Detector
- Photoelectric type
- Installed in supply air section, return air section or both sections
- Available with power board and single sensor (supply or return) or power board and two sensors (supply and return)
- Power board located in unit control compartment

Commercial Control Systems

Interoperability via BACnet® or LonTalk® Protocols
- Communication compatible with third-party automation systems that support the BACnet Application Specific Controller device profile, LonMark® Space Comfort Controller functional profile, or LonMark Discharge Air Controller functional profile

Field Installed

Thermostats and Room Sensors
- Control system and thermostat options, see page 15

OPTIONS / ACCESSORIES

ECONOMIZER

- Economizer operation is set and controlled by the Lennox® CORE unit controller
- Simple plug-in connections from economizer to unit controller for easy installation
- All Enlight rooftop units are equipped with factory installed CEC Title 24 approved sensors for outside, return and discharge air temperature monitoring

NOTE - Optional sensors may be used instead of unit sensors to determine whether outdoor air is suitable for free cooling. See Options/Accessories table.

Factory or Field Installed

13 High Performance Economizer
- Approved for California Title 24 building standards
- Low leakage dampers are Air Movement and Control Association International (AMCA) Class 1A Certified - Maximum 3 CFM per sq. ft. leakage at 1 in. w.g.
- ASHRAE 90.1 and IECC compliant
- Outdoor Air Hood with mist elimination is included when economizer is factory installed and is furnished with economizer when ordered for field installation

NOTE - Downflow or horizontal economizer applications require optional Downflow or Horizontal Barometric Relief Dampers with Exhaust Hood.

- Linked damper action
- High torque 24-volt fully-modulating spring return damper motor
- Return air and outdoor air dampers
- Plug-in connections to unit

NOTE - High Performance Economizers are not approved for use with enthalpy controls in Title 24 applications.

NOTE - The Free Cooling setpoint for Title 24 applications must be set based on the Climate Zone where the system is installed. See Section 140.4 "Prescriptive Requirements for Space Conditioning Systems" of the California Energy Commission's 2022 Building Energy Efficiency Standards.

NOTE - Refer to Installation Instructions for complete setup information.

ECONOMIZER (continued)

Differential Sensible Control
- Factory setting
- Uses outdoor air and return air sensors that are furnished with the unit
- The Lennox® CORE unit controller compares outdoor air temperature with return air
- When the outdoor air is below the configured setpoint and cooler than return air, the controller activates the economizer

NOTE - Differential Sensible Control can be configured in the field to provide Offset Differential Sensible Control or Single Sensible Control.

NOTE - In Offset Differential Sensible Control mode, the economizer is enabled if the temperature differential (offset) between outdoor air and return air reaches the configured setpoint.
In Single Sensible Control mode, the economizer is enabled when outdoor air temperature falls below the configured setpoint.

Global Control
- The unit controller communicates with a DDC system with one global sensor (enthalpy or sensible)
- Determines whether outside air is suitable for free cooling on all units connected to the control system
- Sensor must be field provided

NOTE - Global control with enthalpy is not approved for Title 24 applications.

Factory or Field Installed

Single Enthalpy Temperature Control (Not for Title 24)
- Outdoor air enthalpy sensor enables Economizer if the outdoor enthalpy is less than the setpoint of the control

Differential Enthalpy Control (Not for Title 24)
- Order two Single Enthalpy Controls
- One is field installed in the return air section
- One is installed in the outdoor air section
- Allows the economizer control to select between outdoor air or return air, whichever has lower enthalpy

Field Installed

Outdoor Air CFM Control
- Maintains constant outdoor air volume levels on the supply air fan and varying unit airflows
- Velocity sensor located in the rooftop unit outdoor air section, the Lennox® CORE unit controller changes the Economizer position to help minimize the effect of supply fan speed changes on outdoor air volume levels
- Setpoint for outdoor air volume is established by field testing

NOTE - Not available with Demand Control Ventilation (CO_2 Sensor) or Building Pressure Control.

Building Pressure Control
- Maintains constant building pressure level
- Includes a static pressure transducer and outdoor static pressure assembly

Using differential pressure information between the outdoor air and the building air, the Lennox® CORE unit controller changes the Economizer position to help maintain a constant building pressure

NOTE - Not available with Demand Control Ventilation (CO_2 Sensor) or Outdoor Air CFM Control.

EXHAUST

Factory or Field Installed

14 Downflow Barometric Relief Dampers
- Allow relief of excess air
- Aluminum blade dampers prevent blow back and outdoor air infiltration during off cycle
- Exhaust hood is factory installed when dampers are factory installed with economizer
- Exhaust hood is furnished with dampers when ordered for field installation
- Bird screen furnished

Horizontal Barometric Relief Dampers
- For use when unit is configured for horizontal applications requiring an economizer
- Allows relief of excess air
- Aluminum blade dampers prevent blow back and outdoor air infiltration during off cycle
- Field installed in return air duct
- Bird screen and hood furnished

NOTE - Horizontal Economizer Conversion kit is available for field installation.

EXHAUST (continued)

Factory or Field Installed

15 Standard Static Power Exhaust

- Fans install internal to unit for downflow applications only with economizer option
- Provides exhaust air pressure relief
- Interlocked to run when return air dampers are closed and supply air blower is operating
- Fans run based on air damper position (adjustable)
- Three 1/3 HP motors
- 20 in. diameter propeller-type fans
- Five blades
- Total power input of 1125 Watts
- Total air volume of 12,800 cfm at 0 in. w.g.
- Motor is inherently protected
- Totally enclosed
- Steel cabinet and hood painted to match unit

NOTE - Requires optional Downflow Economizer Barometric Relief Dampers. Also see Standard Static Power Exhaust Blower Tables.

Field Installed

High Static Power Exhaust

- Centrifugal-type power exhaust blowers
- Overload and sub-fuse protected
- Ball bearings
- Forward curved blades
- Blower wheel is statically and dynamically balanced
- Adjustable pulleys for speed adjustments

NOTE - High Static Power Exhaust (with VFD) features a solid-state analog pressure transducer control which senses differential pressure between conditioned space and outdoor air to regulate exhaust blower speed. Also see High Static Power Exhaust Blower Tables.

NOTE - High Static Power Exhaust is field installed but must be ordered at the same time as the rooftop unit so the unit can be factory configured for this option.

Control Choices

Damper Position Control

- For Standard Static Power Exhaust without VFD
- Lennox® CORE unit controller controls the power exhaust based on economizer damper position

Field Installed

Differential Pressure Transducer Control

- For Standard Static Power Exhaust or High Static Power Exhaust with VFD
- Lennox® CORE unit controller controls the power exhaust system based on a 0-10VDC signal from a differential pressure transducer, which compares atmospheric pressure to conditioned space static pressure

OPTIONS / ACCESSORIES

OUTDOOR AIR

Factory or Field Installed

Motorized Outdoor Air Dampers
- Linked mechanical dampers
- Fully modulating spring return damper motor with plug-in connection
- 0 to 25% (fixed) outdoor air adjustable
- Installs in unit
- Outdoor air hood with bird screen included

NOTE - Outdoor Air Hood is shipped separately in the unit with factory installed dampers for field installation.

Field Installed

Manual Outdoor Air Damper
- Adjustable slide damper
- Installed in unit
- Outdoor air hood with bird screen included

ROOF CURBS
- Nailer strip furnished (downflow only)
- Mates to unit
- US National Roofing Contractors Approved
- Shipped knocked down

Downflow

Hybrid Roof Curbs
- Interlocking tabs fasten corners together
- No tools required for assembly
- Can also be fastened together with furnished hardware
- Available in 14, 18, and 24 inch heights

Horizontal
- Converts unit from downflow to horizontal (side) air flow
- Return air is on unit
- Supply air is on curb
- Available in 37 inch and 41 inch heights.
- See dimension drawings

NOTE - Requires Horizontal Return Air Panel Kit.

NOTE - Optional Insulation Kit is available to help prevent sweating.

CEILING DIFFUSERS

Field Installed

Ceiling Diffusers
(Flush or Step-Down)
- White powder coat finish on diffuser face and grilles
- Insulated UL listed duct liner
- Diffuser box has collars for duct connection
- Step-down diffusers have double deflection blades
- Flush diffusers have fixed blades
- Provisions for suspending
- Internally sealed to prevent recirculation
- Removable return air grille
- Adapts to T-bar ceiling grids or plaster ceilings

Transitions (Supply and Return)
- Used with diffusers
- Installs in roof curb
- Galvanized steel construction
- Flanges furnished for duct connection to diffusers
- Fully insulated

HUMIDITROL® DEHUMIDIFICATION SYSTEM OPTION

16 OVERVIEW

NOTE - Available for 302H models with MSAV® Multi-Stage Air Volume option.

- Factory installed option designed to control humidity
- Provides dehumidification on demand using ASHRAE 90.1 recommended method for comfort conditioning humidity control
- Unit comes equipped with one row reheat coil, solenoid valve and humidity controller

BENEFITS

- Improves indoor air quality
- Helps prevents damage due to high humidity levels
- Improves comfort levels by reducing space humidity levels

OPERATION

No Dehumidification Demand

- The unit will operate conventionally whenever there is a demand for cooling or heating and no dehumidification demand
- Free cooling is only permitted when there is no demand for dehumidification

Dehumidification Demand Only

- Reheat operation will initiate on a dehumidification demand and does not require a cooling demand
- The unit will operate in the dehumidification mode until the relative humidity of the conditioned space is below the setpoint
- The reheat coil is sized to provide 68°F to 75°F supply air during reheat operation
- This reduces sensible cooling capacity and extends compressor run time to control humidity when the cooling load is low
- A solenoid valve diverts hot gas from the compressor to the reheat coil
- The cooled and dehumidified air from the evaporator is reheated as it passes through the reheat coil
- The de-superheated and partially condensed refrigerant continues to the outdoor condenser coil where condensing is completed
- The unit will continue to operate in this mode until the dehumidification demand is satisfied


NOTE - See Sequence of Operation for additional information.

Dehumidification and Cooling Demand (Thermostat/ Room Sensor Application)

- If both a dehumidification and a full cooling demand occur, the system will operate in cooling until the cooling demand is satisfied
- Then the system will energize the dehumidification mode


COOLING REFRIGERANT SCHEMATIC

NOTE - Only compressor 1 circuit connected with refrigerant reheat system

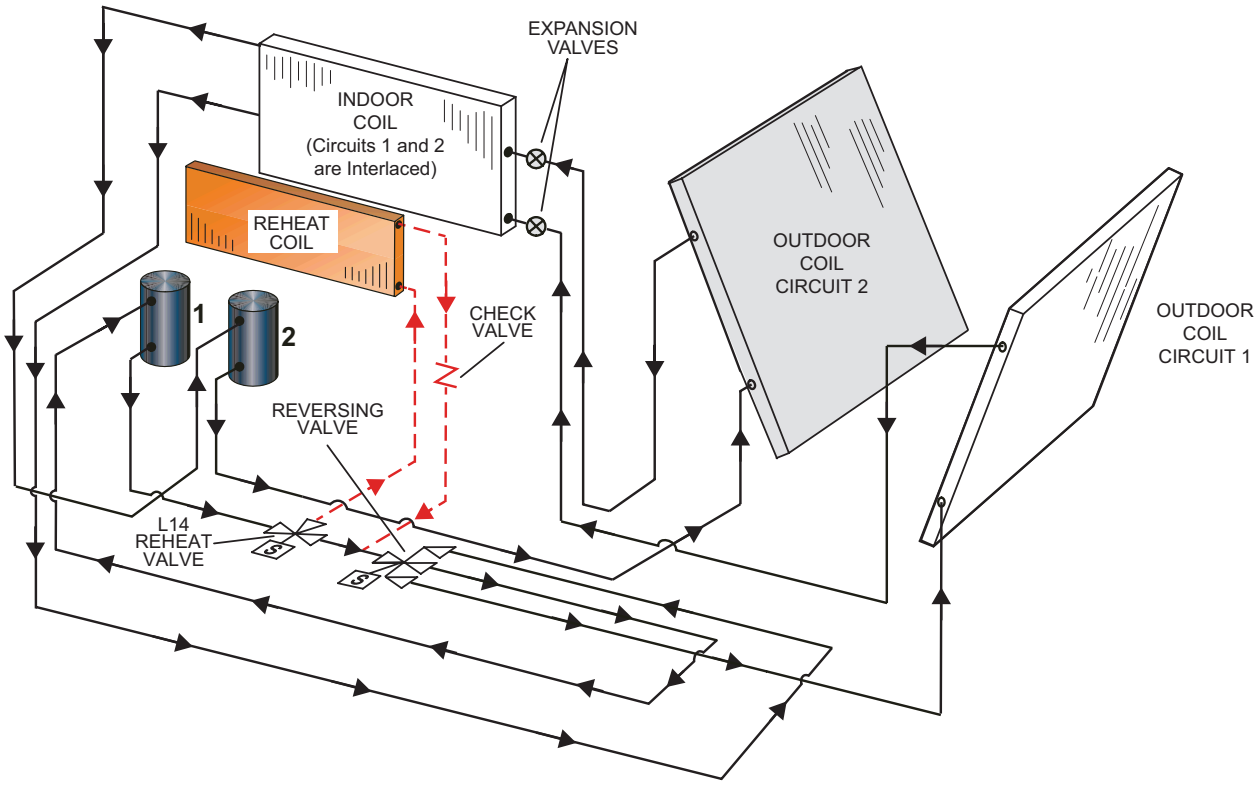

OPTIONAL CONVENTIONAL TEMPERATURE CONTROL SYSTEMS

CS8500 Commercial 7-Day Programmable Thermostat

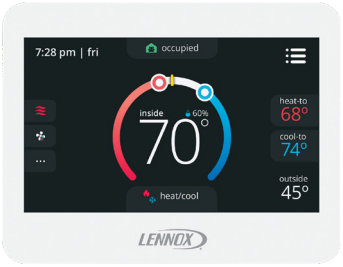


- Fully Communicating Sensor
- Full Color Touchscreen Interface
- Variable Speed System Control (On Compatible Units)
- Up To 4 Heat / 4 Cool
- Built-In Sensors For Temperature, Humidity And Optional CO_2
- Remote Sensor Options For Occupancy, Temperature
- BACnet Capable Options
- 5-2 or 7-Day Scheduling
- Smooth Setback Recovery
- Heat/Cool Auto-Changeover
- Four-Wire Installation
- FDD, ASHRAE, IECC Compliant

CS7500 Commercial 7-Day Programmable Thermostat



- Four-Stage Heating / Three-Stage Cooling
- Universal Multi-Stage
- Intuitive Touchscreen Interface
- Automatic Changeover between Heating and Cooling
- Full Seven-Day Programming
- Four Time Periods Per Day
- Temperature and Humidity Control
- One-Touch Away Mode
- Holiday Scheduling
- Smooth Setback Recovery (SSR)
- Performance Reports
- Notifications/Reminders
- Dehumidification Control
- Economizer Relay Control
- Backlit Display
- Wallplate Furnished
- FDD, ASHRAE and IECC Compliant

CS3000 Commercial 5-2 Day Programmable Thermostat

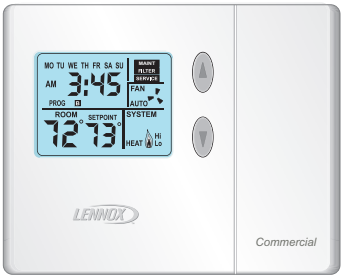

- Two-Stage Heating / Two-Stage Cooling
- Conventional Systems
- Intuitive Interface
- 5-2 Day Programming
- Program Hold
- Remote Indoor Temperature Sensing
- Smooth Setback Recovery (SSR)
- Economizer Relay Control
- Maintenance/Filter/Service Reminders
- Backlit Display
- Wallplate Furnished
- Simple Up and Down Temperature Control

Wired Temperature/Humidity Room Sensor (Non-Communicating)



- Terminal blocks for wiring connections
- Five-wire sensor connection
- Off-white plastic enclosure
- Non-adjustable
- Relative humidity range: 0 -100%
- +/- 3% Accuracy

OPTIONAL CONVENTIONAL TEMPERATURE CONTROL SYSTEMS

Description		Order Number
CS8500 Commercial 7 Day Programmable Thermostat		
CS8500 7-Day Thermostat	No CO_2 Sensing	**24K55**
	With CO_2 Sensing	**24K53**
Sensors/Accessories	[1] Remote non-adjustable wall-mount 10k	**47W37**
	[1] Remote non-adjustable wall-mount 11k	**94L61**
CS7500 Commercial 7-Day Programmable Thermostat		
CS7500 7-Day Thermostat		**24K41**
Sensors/Accessories	[2] Remote non-adjustable wall-mount 20k	**47W36**
	[2] Remote non-adjustable wall-mount 10k	**47W37**
	Remote non-adjustable discharge air (duct mount)	**19L22**
	Outdoor temperature sensor	**X2658**
CS3000 Commercial 5-2 Day Programmable Thermostat		
CS3000 5-2 Day Thermostat		**11Y05**
Sensors/Accessories	Remote non-adjustable wall mount 10k averaging	**47W37**
	Thermostat wall mounting plate	**X2659**
Universal Thermostat Guard with Lock (clear)		
	Inside Dimensions (H x W x D) 5-7/8 x 8-3/8 x 3 in.	**39P21**
Temperature/Humidity Room Sensor		
A335MT13AE1 Wired Temperature/Humidity Room Sensor (Non-Communicating)		**21W06**

Up to nine of the same type remote temperature sensors can be connected in parallel.

Remote wall-mount sensors can be applied in any of the following combinations:
One Sensor - (1) 47W36, Two Sensors - (2) 47W37, Three Sensors - (2) 47W36 and (1) 47W37
Four Sensors - (4) 47W36, Five Sensors - (3) 47W36 and (2) 47W37

SEQUENCE OF OPERATION

Objective: Outline the unit functions as a result of room thermostat or zone sensor demands.

Given: When economizer is present, it will function as an integral part of the unit cooling system. When not present, unit will function as if economizer is present but outdoor ambient is high and sensed as not suitable.

UNIT OPERATION WITH 2-STAGE THERMOSTAT (2 COOL AND 2 HEAT STAGES, Y1, Y2, W1, W2)

SUPPLY AIR BLOWER SPEED

Unit has following supply air blower speed setting:

- Ventilation speed
- Cooling Speed - Low
- Cooling Speed - High
- Heating speed
- Smoke speed (Used only in smoke removal option - not discussed)

COOLING

[1] Unit Features An Economizer And Outdoor Air Is Suitable

Thermostat Mode (Y1, Y2)

Y1 Demand:

All compressors are off, supply air blower is on low cooling speed to minimize blower power consumption, economizer modulates (minimum to maximum open position) to maintain 55°F supply air temperature (default unit controller setting).

Y2 Demand:

All compressors are off, supply air blower is on high cooling speed providing higher cooling capacity, and economizer modulates to maintain 55°F supply air temperature. If economizer stays at maximum open for 3 minutes, compressor 1 is energized while supply air blower stays on high cooling speed providing maximum cooling capacity.

[1] Outdoor air suitability is determined by the energy state of outdoor ambient (enthalpy or sensible) and its ability to achieve the desired free cooling effects. Outdoor air suitability can also be determined by a third party controller and provided to the rooftop unit via a network connection.

Unit Does Not Feature An Economizer Or Outdoor Air Is Not Suitable

Thermostat Mode (Y1, Y2)

Y1 Demand:

Compressor 1 operates, and supply air blower operates at low cooling speed.

Y2 Demand:

All compressors operate and supply air blower operates at high cooling speed.

DEHUMIDIFICATION

Unit Features the Humiditrol® Dehumidification option. Economizer free cooling is locked out

Call For Dehumidification, No Y1, Y2 Demand:

1st stage compressors (1 & 2) operate, supply air blower operates at low cooling speed, and the reheat valves are energized.

Y1 Demand With A Call For Dehumidification:

All compressors operate, supply air blower operates at high cooling speed and the reheat valves are energized.

Y2 Demand With A Call For Dehumidification:

All compressors operate, supply air blower operates at high cooling speed, and the reheat valves are de-energized.

SEQUENCE OF OPERATION

UNIT OPERATION WITH 3-STAGE THERMOSTAT OR ZONE SENSOR (3 COOL AND 2 HEAT STAGES, Y1, Y2, Y3 AND W1, W2)

SUPPLY AIR BLOWER SPEED

Unit has following supply air blower speed setting:

- Ventilation speed
- Cooling Speed - Low
- Cooling Speed - Medium
- Cooling Speed - High
- Heating speed
- Smoke speed (Used only in smoke removal option - not discussed)

COOLING

[1] Unit Features An Economizer And Outdoor Air Is Suitable

Thermostat or Zone Sensor Mode (Y1, Y2, Y3)

Y1 Demand:

All compressors are off, supply air blower is on low cooling speed to minimize blower power consumption, economizer modulates (minimum to maximum open position) to maintain 55°F supply air temperature (default unit controller setting).

Y2 Demand:

All compressors are off, supply air blower is on high cooling speed providing higher cooling capacity, and economizer modulates to maintain 55°F supply air temperature. If economizer stays at maximum open for 3 minutes, compressor 1 is energized while supply air blower stays on high cooling speed providing maximum cooling capacity. After compressors are energized the economizer stays at maximum open.

Y3 Demand:

Compressors 1 and 2 are energized while supply air blower stays on high cooling speed.

[1] Outdoor air suitability is determined by the energy state of outdoor ambient (enthalpy or sensible) and its ability to achieve the desired free cooling effects. Outdoor air suitability can also be determined by a third party controller and provided to the rooftop unit via a network connection.

Unit Does Not Feature An Economizer or Outdoor Air Is Not Suitable

Thermostat or Zone Sensor Mode (Y1, Y2, Y3)

Y1 Demand:

Compressor 1 operates at part load and supply air blower operates at low cooling speed.

Y2 Demand:

Compressor 1 operates at part load with compressor 2 ON, and supply air blower operates at medium cooling speed.

Y3 Demand:

All compressors operate and supply air blower operates at high cooling speed.

SEQUENCE OF OPERATION

UNIT OPERATION WITH ZONE SENSOR (4 COOL AND 2 HEAT STAGES, Y1, Y2, Y3, Y4 AND W1, W2)

SUPPLY AIR BLOWER SPEED

Unit has following supply air blower speed setting:

- Ventilation speed
- Cooling speed - Low
- Cooling speed - Medium-Low
- Cooling speed - Medium-High
- Cooling speed - High
- Heating speed
- Smoke speed (Used only in smoke removal option - not discussed)

COOLING

[1] Unit Features An Economizer And Outdoor Air Is Suitable

Y1 Demand:

All compressors are off, supply air blower is on low cooling speed to minimize blower power consumption, economizer modulates (minimum to maximum open position) to maintain 55°F supply air temperature (default unit controller setting).

Y2 Demand:

All compressors are off, supply air blower is on high cooling speed providing higher cooling capacity, and economizer modulates to maintain 55°F supply air temperature.

If economizer stays at maximum open for 3 minutes, compressor 1 is energized while supply air blower stays on high cooling speed. After compressor 1 is energized the economizer stays at maximum open.

Y3 Demand:

Compressor 1 and 2 are energized while supply air blower is on high cooling speed providing even higher cooling capacity.

Y4 Demand:

All compressors are energized while supply air blower is on high cooling speed providing maximum cooling capacity.

[1] Outdoor air suitability is determined by the energy state of outdoor ambient (enthalpy or sensible) and its ability to achieve the desired free cooling effects. Outdoor air suitability can also be determined by a third party controller and provided to the RTU via a network connection.

Unit Does Not Feature An Economizer Or Outdoor Air Is Not Suitable

Y1 Demand:

Compressor 1 operates at part load and supply air blower operates at low cooling speed.

Y2 Demand:

Compressors 2 operates and supply air blower operates at medium-low cooling speed.

Y3 Demand:

Compressor 1 operates at part load with compressor 2 ON and supply air blower operates at medium-high cooling speed.

Y4 Demand:

All compressors operate and supply air blower operates at high cooling speed.

SEQUENCE OF OPERATION

DEFROST

Coil Sensors (RT48 - Circuit 1 and RT49 - Circuit 2) and Ambient Sensor (RT17) provides input to the Lennox® CORE Unit Controller to initiate a defrost cycle if needed.

Coil sensors are located on a return bend for each circuit on the front of the outdoor coil.

Ambient sensor is located on the inside of the corner mullion on the back of the outdoor coil section.

If a coil sensor measures a temperature below 35°F during mechanical heating mode, defrost logic is enabled. The system will constantly monitor coil and ambient temperatures and will initiate a defrost cycle if the controller determines that the target temperature difference between the coil and ambient temperature has been satisfied, or when the accumulated run time with coil temperature below 35°F reaches 6 hours.

Defrost will not be activated on more than one circuit at the time.

If the ambient sensor fails, or the circuit is in uncalibrated state, the controller will switch to time/temperature defrost operation.

Gas heating is not energized during a defrost cycle.

SEQUENCE OF OPERATION

HEATING - TWO-STAGE

NOTE – THERMOSTAT MODE HAS TWO STAGES OF HEATING. ROOM SENSOR MODE HAS UP TO THREE STAGES OF HEATING.

Thermostat or Zone Sensor - Outdoor Air Temperature is more than the Balance Point

W1/H1 Demand:

A first-stage heating demand (W1/H1) will energize all compressors (mechanical heating), the outdoor fans, and supply air blower operates at the heating speed.

W2/H2 Demand:

A second-stage heating demand (W2/H2) will de-energize the compressors (mechanical heating) and Low Gas Heat will be energized. The supply air blower operates at the heating speed.

H3 Demand:

A third-stage heating demand (H3) will de-energize Mechanical Heating and High Gas Heat will be energized. The supply air blower operates at the heating speed.

NOTE – L1 and L2 reversing valves are de-energized in the heating mode.

NOTE – Balance Point (default is 35°F). User adjustable from 10°F to 76°F.

Thermostat or Zone Sensor - Outdoor Air Temperature is less than the Balance Point

W1 Demand:

A first-stage heating demand (W1/H1) will energize Low Gas Heat and the supply air blower operates at the heating speed.

W2 Demand:

A second-stage heating demand (W2/H2) will energize High Gas Heat and the supply air blower operates at the heating speed.

NOTE – L1 and L2 reversing valves are de-energized in the heating mode.

NOTE – Balance Point (default is 35°F). User adjustable from 10°F to 76°F.

NOTE - If the Outdoor Air Temperature is less than the Balance Point, the controller will lock out Mechanical Heating and will enable gas heat only.

HEATING - MODULATING

Modulating Heating Mode: Thermostat (Up to 2 stages W1, W2)

W1 or Low Heating Demand

Supply fan operates at low heating speed and Gas valves modulate to maintain Discharge Air Temperature (DAT) set-point.

W2 or High Heating Demand

Supply fan operates at high heating speed and Gas valves modulate to maintain Discharge Air Temperature (DAT) set-point.

Modulating Heating Mode: Zone Sensor

Heating demand is based on delta and duration of Zone Air Temperature (ZAT) away from ZAT set-point. Based on heating demand, supply fan modulates between low heating speed and high heating speed while Gas valves modulate to maintain Discharge Air Temperature (DAT) set-point as the blower speed changes.

SEQUENCE OF OPERATION

ACCESSORIES

Modulating Outdoor Air Damper

The minimum damper position for “occupied low blower” and “occupied high blower” is adjusted during unit setup to provide minimum fresh air requirements per ASHRAE 62.1 at the corresponding supply air blower speeds.

When supply air blower is off or the unit is in unoccupied mode, the outdoor air damper is closed.

When unit is in occupied mode and supply air blower is operating at a speed below the “midpoint” blower speed, the outdoor air damper is at minimum “low blower” position.

When unit is in occupied mode and supply air blower is operating at a speed equal to or above the “midpoint” blower speed, the outdoor air damper is at minimum “high blower” position.

NOTE - The “midpoint” blower speed is an average of the minimum and maximum blower speed (minimum speed + maximum speed divided by 2).

Power Exhaust

NOTE - POWER EXHAUST OPERATION IS THE SAME FOR ALL CONTROL OPTIONS

MSAV® models are equipped with 2-stage power exhaust fans. Power exhaust fans operate when economizer outdoor air dampers are 50% open (adjustable). Power exhaust operates in 1st stage (one fan) up to 70% of supply air blower speed. 2nd stage power exhaust fans (both fans) operate when supply air blower speed is above 70% (adjustable) of full speed.

OPTIONS / ACCESSORIES

Item Description		Order Number	Size 302
COOLING SYSTEM			
Condensate Drain Trap	PVC	**22H54**	X
	Copper	**76W27**	X
Drain Pan Overflow Switch		**21Z07**	OX
Stainless Steel Condensate Drain Pan		**83W42**	OX
GAS HEAT			
Combustion Air Intake Extensions (Order 2 Kits)		**89L97**	X
[1] Modulating Gas Heat		Factory	O
Gas Heat Input	Standard - 85,000-260,000 Btuh	Factory	O
	Medium - 117,000-360,000 Btuh	Factory	O
	High - 156,000-480,000 Btuh	Factory	O
LPG/Propane Conversion Kit (Order 2 Kits)	Two-Stage Standard Heat	**14N28**	X
	Two-Stage Medium Heat	**14N29**	X
	Two-Stage High Heat	**14N30**	X
NOTE - Combination Two-Stage and Modulating Kits will not be available until 11/16/2026	Two-Stage and Modulating Standard Heat	**39J84**	X
	Two-Stage and Modulating Medium Heat	**39J85**	X
	Two-Stage and Modulating High Heat	**39J84**	X
Low Temperature Vestibule Heater	208/230V-3ph	**22H58**	X
	460V-3ph	**22H59**	X
	575V-3ph	**22V43**	X
Vertical Vent Extension		**42W16**	X
BLOWER - SUPPLY AIR			
Motors	Belt Drive (standard efficiency) - 5 hp	Factory	O
	Belt Drive (standard efficiency) - 7.5 hp	Factory	O
	Belt Drive (standard efficiency) - 10 hp	Factory	O
	Automatic VFD Bypass Option (MSAV® Models Only)	Factory	O
Drive Kits See Blower Data Tables for usage and selection	Kit #1 740-895 rpm	Factory	O
	Kit #2 870-1045 rpm	Factory	O
	Kit #3 715-880 rpm	Factory	O
	Kit #4 770-965 rpm	Factory	O
	Kit #5 660-810 rpm	Factory	O
	Kit #6 770-965 rpm	Factory	O
	Kit #7 570-720 rpm	Factory	O
	Kit #8 480-630 rpm	Factory	O
	Kit #9 410-535 rpm	Factory	O
	Blower Belt Auto-Tensioner	**38C61**	X
CABINET			
Burglar Bars		**Y1036**	X
Combination Coil/Hail Guards		**13T16**	OX
Corrosion Protection		Factory	O
Horizontal Return Air Panel Kit		**38K48**	X
CONTROLS			
Commercial Controls	LonTalk® Module	**54W27**	OX
	Novar® LSE	Factory	O
Dirty Filter Switch		**53W68**	OX
[1] Remote Discharge Air Temperature Sensor		**21Z08**	OX
Fresh Air Tempering		**21Z08**	OX
			OX
Smoke Detector - Supply or Return (Power board and one sensor)		**37G73**	OX
Smoke Detector - Supply and Return (Power board and two sensors)		**37G74**	OX

[1] Modulating Gas Heat for Horizontal Applications requires a Remote Discharge Air Temperature Sensor (21Z08). Sensor is shipped with the unit for field installation if unit is configured at the factory. Sensor must be ordered separately for field installation if unit is not factory configured.

NOTE - Order numbers shown are for ordering field installed accessories.

OX - Configure To Order (Factory Installed) or Field Installed

O = Configure To Order (Factory Installed)

X = Field Installed

OPTIONS / ACCESSORIES

Item Description		Order Number	Size 302
INDOOR AIR QUALITY			
Air Filters			
Healthy Climate® High Efficiency Air Filters 20 x 20 x 2 - order 12 per unit	MERV 8	**54W21**	OX
	MERV 13	**52W39**	OX
	MERV 16	**21U40**	X
Replaceable Media Filter with Metal Mesh Frame (includes Non-Pleated Filter Media) 20 x 20 x 2- order 12 per unit		**44N60**	X
Indoor Air Quality (CO_2) Sensors			
Sensor - Wall-mount, off-white plastic cover with LCD display		**77N39**	X
Sensor - Wall-mount, off-white plastic cover, no display		**87N53**	X
Sensor - Black plastic case, LCD display, rated for plenum mounting		**87N52**	X
Sensor - Black plastic case, no display, rated for plenum mounting		**87N54**	X
CO_2 Sensor Duct Mounting Kit - for downflow applications		**23Y47**	X
Aspiration Box - for duct mounting non-plenum rated CO_2 sensors (**77N39**)		**90N43**	X
ELECTRICAL			
Voltage 60 hz	208/230V - 3 phase	Factory	O
	460V - 3 phase	Factory	O
	575V - 3 phase	Factory	O
[2] Short-Circuit Current Rating (SCCR) of 100kA (includes Phase/Voltage Detection)		**Factory**	O
HACR Circuit Breakers		**Factory**	O
[3] Disconnect Switch - See Electrical Data Tables on page 35 for selection	80 amp	**54W88**	OX
	150 amp	**54W89**	OX
	250 amp	**90W82**	OX
GFI Service Outlets	15 amp non-powered, field-wired (208/230V, 460V only)	**74M70**	OX
	[5], [6] 15 amp factory-wired and powered (208/230V, 460V)	Factory	O
	[6] 20 amp non-powered, field-wired (208/230V, 460V, 575V)	**67E01**	OX
	[6] 20 amp non-powered, field-wired (575V)	Factory	O
Weatherproof Cover for GFI		**10C89**	X
HUMIDITROL® CONDENSER REHEAT OPTION			
Humiditrol® Dehumidification Option		Factory	O
Humidity Sensor Kit, Remote mounted (required)		**17M50**	X

[2] SCCR option is not available if the MOCP of the configured unit is greater than 200A.

[3] Disconnect Switch is furnished and factory installed with SCCR option

[4] If a factory installed disconnect switch is ordered with a factory installed GFI, the default disconnect size is 150 amps.

[5] Unit powered GFI Service Outlets are not available with SCCR option. Disconnect Switch or Circuit Breaker is required with unit powered GFI Service Outlets.

[6] Canada requires a minimum 20 amp circuit. Select 20 amp, non-powered, field wired GFI.

NOTE - Order numbers shown are for ordering field installed accessories.

OX - Configure To Order (Factory Installed) or Field Installed

O = Configure To Order (Factory Installed)

X = Field Installed

OPTIONS / ACCESSORIES

Item Description		Order Number	Size 302
ECONOMIZER			
High Performance Economizer (Approved for California Title 24 Building Standards / AMCA Class 1A Certified)			
High Performance Economizer Downflow or Horizontal Applications - Includes Outdoor Air Hood, order Downflow or Horizontal Barometric Relief Dampers separately.		**18X87**	OX
Economizer Controls			
Differential Enthalpy (Not for Title 24)	Order 2	**21Z09**	OX
Sensible Control	Sensor is Furnished	Factory	O
Single Enthalpy (Not for Title 24)		**21Z09**	OX
Global	Sensor Field Provided	Factory	O
Building Pressure Control		**13J77**	X
Differential Sensible	Sensor is Furnished	Factory	O
Outdoor Air CFM Control		**13J76**	OX
Barometric Relief Dampers With Exhaust Hood			
Downflow Barometric Relief Dampers		**76W17**	OX
Horizontal Barometric Relief Dampers		**33K78**	OX
OUTDOOR AIR			
Outdoor Air Dampers With Outdoor Air Hood			
Motorized		**18X89**	OX
Manual		**18X88**	X
POWER EXHAUST			
Standard Static, SCCR Rated	208/230V	**74W21**	OX
	460V	**74W22**	OX
	575V	**74W23**	OX
High Static with VFD 2 hp (731 - 932 rpm)	208/230V	**83M89**	X
	460V	**83M90**	X
	575V	**83M91**	X
Power Exhaust Control			
Pressure Transducer Control		**13J77**	X

NOTE - Order numbers shown are for ordering field installed accessories.

OX - Configure To Order (Factory Installed) or Field Installed

O = Configure To Order (Factory Installed)

X = Field Installed

OPTIONS / ACCESSORIES

Item Description		Order Number	Size 302
ROOF CURBS			
Hybrid Roof Curbs, Downflow			
14 in. height		**11F62**	X
18 in. height		**11F63**	X
24 in. height		**11F64**	X
Standard Roof Curbs, Horizontal - Requires Horizontal Return Air Panel Kit			
30 in. height - slab applications		**11T90**	X
41 in. height - rooftop applications		**11T97**	X
Horizontal Return Air Panel Kit			
Required for Horizontal Applications with Roof Curb		**38K48**	X
Insulation Kit For Standard Horizontal Roof Curbs			
For 30 in. Curb		**73K33**	X
For 41 in. Curb		**73K35**	X
CEILING DIFFUSERS			
Step-Down - Order one	LARTD30/36S	**45K74**	X
Flush - Order one	LAFD30/36S	**45K75**	X
Transitions (Supply and Return) - Order one	LASRT30/36	**33K80**	X

NOTE - Order numbers shown are for ordering field installed accessories.

OX - Configure To Order (Factory Installed) or Field Installed

O = Configure To Order (Factory Installed)

X = Field Installed

SPECIFICATIONS

Model			LDT302H5M
Nominal Tonnage			25 Ton
Efficiency Type			High
Blower Type			MSAV® Multi-Stage Air Volume
Cooling Performance		Gross Cooling Capacity - Btuh	285,000
		[1] Net Cooling Capacity (Btuh)	274,000
		[1] AHRI Rated Air Flow (cfm)	8500
		Total Unit Power - kW	26.6
		[1] IEER (Btuh/Watt)	14.6
		[1] EER (Btuh/Watt)	10.3
Heating Performance		[1] Total High Heat Capacity - Btuh	270,000
		[1] C.O.P.	3.3
		Total Unit Power - kW	24.3
		[1] Total Low Heat Capacity - Btuh	154,000
		[1] C.O.P.	2.1
		Total Unit Power - kW	22.0
Sound Rating Number		dBA	95
Refrigerant Charge		Refrigerant Type	R-454B
	Without Reheat Option	Circuit 1	25 lbs. 0 oz.
		Circuit 2	23 lbs. 0 oz.
	With Reheat Option	Circuit 1	29 lbs. 0 oz.
		Circuit 2	23 lbs. 8 oz.
Gas Heating Options Available			See page 28
Compressor Type (number)			Two-Stage Scroll (1), Single-Stage Scroll (1)
Outdoor Coils		Net face area - ft.² (total)	55.1
		Number of rows	2
		Fins - in.	20
Outdoor Coil Fans		Motor HP (number and type)	1/2 (6 PSC)
		Rpm	1075
		Watts (total)	3000
		Diameter (Number) - in.	(6) 24
		Blades	3
		Total Air volume - cfm	21,500
Indoor Coils		Net face area - ft.² (total)	26.0
		Tube diameter - in.	3/8
		Rows	4
		Fins - in.	14
		Condensate drain size (NPT) - in.	(1) 1 in.
		Expansion device type	Balanced Port Thermostatic Expansion Valve
[3] Indoor Blower and Kit Selection		Nominal motor HP	5, 7.5, 10
		Maximum usable motor output (US Only)	5.75, 8.63, 11.5
		Motor - Drive kit number	5 HP Kit 5 660-810 rpm Kit 6 770-965 rpm Kit 7 570-720 rpm Kit 8 480-630 rpm Kit 9 410-535 rpm 7.5 HP Kit 3 715-880 rpm Kit 4 770-965 rpm 10 HP Kit 1 740-895 rpm Kit 2 870-1045 rpm
		Wheel (Number) diameter x width - in.	(2) 18 x 15
Filters		Type of filter	Fiberglass, disposable
		Number and size - in.	(12) 20 x 20 x 2
Line voltage data (Volts-Phase-Hz)			208/230-3-60 460-3-60 575-3-60

NOTE - Net capacity includes evaporator blower motor heat deduction. Gross capacity does not include evaporator blower motor heat deduction.

[1] 1 Tested at conditions included in with AHRI Standard 340/360; 95°F outdoor air temperature and 80°F db/67°F wb entering evaporator air; minimum external duct static pressure.
Cooling Ratings - 95°F outdoor air temperature and 80°F db/67°F wb entering indoor coil air.
High Temperature Heating Ratings - 47°F db/43°F wb outdoor air temperature and 70°F entering indoor coil air.
Low Temperature Heating Ratings - 17°F db/15°F wb outdoor air temperature and 70°F entering indoor coil air.

[2] 2 Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

SPECIFICATIONS - GAS HEAT

Model			LDT302		
Heat Input Type			**Standard**	**Medium**	**High**
Gas Heating Performance Two-Stage	Heating Type Character		S	M	H
	Input - Btuh	First Stage	169,000	234,000	312,000
		Second Stage	260,000	360,000	480,000
	Output - Btuh	Maximum	211,000	292,000	389,000
Gas Heating Performance Modulating	Heating Type Character		P	K	R
	Input - Btuh	Minimum (Zone Sensor)	85,000	117,000	156,000
		Minimum (Thermostat)	169,000	234,000	312,000
		Maximum	260,000	360,000	480,000
	Output - Btuh	Maximum	211,000	292,000	389,000
Temperature Rise Range - °F			15-45	30-60	40-70
Minimum Air Volume - cfm			4500	4500	5125
Thermal Efficiency			81%	81%	81%
Gas Supply Connections			1 in. NPT	1 in. NPT	1 in. NPT
Recommended Gas Supply Pressure - in. w.g.		Natural	7	7	7
		LPG/Propane	11	11	11
Gas Supply Pressure Range		Min./Max. (Natural)	4.7 - 10.5 in. w.g.		
		Min./Max. (LPG)	10.8 - 13.5 in.w.g.		

NOTE - Modulating Gas Heat operates between the minimum and maximum gas heat inputs shown.

NOTE - Air volume may modulate below minimum volume if heat input is below maximum.

NOTE - Two-Stage heat models can be operated with four stages of gas heating when controlled with either Zone Sensor Mode, Discharge Air Sensor or Fresh Air Tempering on the Lennox® CORE Unit Controller when using the CS8500 or when connected to a Building Automation System using BACnet or S-Bus protocols. Refer to the Service Manual for more detailed information.

HIGH ALTITUDE DERATE

NOTE - Units may be installed at altitudes up to 2000 feet above sea level without any modification.
At altitudes above 2000 feet, units must be derated to match gas manifold pressures shown in table below.
At altitudes above 4500 feet units must be derated 4% for each 1000 feet above sea level.

NOTE – This is the only permissible derate for these units.

Refer to the Installation Instructions for more detailed information.

Heat Input Type	Altitude Feet	Gas Manifold Pressure - in. w.g.		Input Rate (Btuh)	
		Natural Gas	LPG/Propane Gas	Minimum	Maximum
Standard	2001 - 4500	1.6 / 3.1	4.4 / 8.9	84,000	239,000
Medium	2001 - 4500	1.6 / 3.1	4.4 / 8.9	117,000	331,000
High	2001 - 4500	1.6 / 3.1	4.4 / 8.9	156,000	442,000

RATINGS

NOTE − For Temperatures and Capacities not shown in tables, see bulletin − Cooling Unit Rating Table Correction Factor Data in Miscellaneous Engineering Data section.

25 TON HIGH EFFICIENCY LDT302H5M (1 COMPRESSOR - PART LOAD) - MSAV® MULTI-STAGE AIR VOLUME

Entering Wet Bulb Temperature	Total Air Volume	Outdoor Air Temperature Entering Outdoor Coil																			
		65°F					75°F					85°F					95°F				
		Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb		
	cfm	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F
63°F	4000	111.6	4.6	.84	.99	1.00	104.8	5.3	.86	1.00	1.00	97.5	6.1	.88	1.00	1.00	90.0	7.2	.91	1.00	1.00
	5000	117.5	4.5	.91	1.00	1.00	110.9	5.3	.94	1.00	1.00	104.1	6.1	.97	1.00	1.00	96.3	7.1	.99	1.00	1.00
	6000	123.1	4.5	.98	1.00	1.00	116.6	5.3	.99	1.00	1.00	108.9	6.1	.99	1.00	1.00	101.0	7.1	1.00	1.00	1.00
67°F	4000	117.9	4.5	.61	.81	.99	111.0	5.3	.61	.83	.99	103.6	6.1	.62	.85	1.00	94.8	7.1	.63	.88	1.00
	5000	123.0	4.5	.65	.88	1.00	115.4	5.3	.66	.91	1.00	107.2	6.1	.67	.94	1.00	98.2	7.1	.69	.98	1.00
	6000	126.0	4.6	.69	.96	1.00	118.5	5.3	.71	.98	1.00	110.5	6.1	.72	.99	1.00	101.9	7.1	.75	1.00	1.00
71°F	4000	125.9	4.6	.40	.59	.78	118.7	5.3	.39	.59	.80	110.9	6.1	.38	.60	.82	102.2	7.1	.37	.62	.85
	5000	130.4	4.6	.40	.64	.86	123.0	5.3	.40	.65	.88	114.9	6.1	.40	.66	.91	105.5	7.1	.39	.68	.95
	6000	133.8	4.6	.42	.68	.93	125.8	5.3	.42	.70	.96	117.0	6.1	.42	.72	.98	108.1	7.1	.42	.74	.99

25 TON HIGH EFFICIENCY LDT302H5M (2 COMPRESSORS - PART LOAD / FULL LOAD) - MSAV® MULTI-STAGE AIR VOLUME

Entering Wet Bulb Temperature	Total Air Volume	Outdoor Air Temperature Entering Outdoor Coil																			
		85°F					95°F					105°F					115°F				
		Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb		
	cfm	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F
63°F	6000	227.4	15.6	.72	.86	.98	212.2	17.8	.73	.88	.99	193.5	20.2	.74	.91	1.00	176.2	22.9	.76	.94	1.00
	8000	244.0	15.6	.79	.96	1.00	226.8	17.8	.81	.98	1.00	209.6	20.3	.84	.99	1.00	192.1	23.0	.87	1.00	1.00
	10000	257.6	15.7	.87	1.00	1.00	241.3	17.9	.89	1.00	1.00	224.1	20.4	.92	1.00	1.00	206.2	23.1	.95	1.00	1.00
67°F	6000	243.8	15.6	.56	.69	.83	226.9	17.8	.56	.71	.85	209.1	20.3	.56	.72	.88	190.4	23.0	.56	.74	.91
	8000	260.7	15.7	.60	.77	.93	241.7	17.5	.61	.79	.95	222.7	20.4	.62	.81	.97	201.4	23.1	.63	.85	.99
	10000	270.4	15.7	.65	.84	.99	250.1	17.9	.66	.87	1.00	230.3	20.4	.67	.90	1.00	209.5	23.1	.70	.94	1.00
71°F	6000	260.7	15.7	.42	.54	.67	243.9	17.5	.41	.54	.68	224.5	20.4	.40	.55	.70	205.0	23.1	.39	.56	.72
	8000	276.6	15.7	.43	.59	.75	258.3	17.9	.43	.60	.77	238.8	20.4	.42	.61	.79	217.9	23.1	.42	.62	.82
	10000	287.9	15.8	.46	.64	.82	267.9	18.0	.45	.65	.85	246.9	20.5	.45	.67	.88	224.1	23.2	.45	.69	.91

25 TON HIGH EFFICIENCY LDT302H5M (2 COMPRESSORS - FULL LOAD) - MSAV® MULTI-STAGE AIR VOLUME

Entering Wet Bulb Temperature	Total Air Volume	Outdoor Air Temperature Entering Outdoor Coil																			
		85°F					95°F					105°F					115°F				
		Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb		
	cfm	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F	kBtuh	kW	75°F	80°F	85°F
63°F	8000	280.6	19.0	.74	.90	1.00	261.8	21.3	.76	.92	1.00	242.5	23.9	.77	.95	1.00	221.9	26.7	.80	.98	1.00
	10000	292.8	19.1	.80	.98	1.00	275.5	21.4	.83	.99	1.00	257.0	24.0	.85	1.00	1.00	237.3	26.9	.88	1.00	1.00
	12000	306.5	19.2	.87	1.00	1.00	289.1	21.5	.89	1.00	1.00	270.7	24.1	.92	1.00	1.00	250.7	27.0	.95	1.00	1.00
67°F	8000	298.6	19.1	.57	.72	.86	279.5	21.4	.57	.73	.89	259.5	24.0	.58	.75	.92	238.4	26.9	.59	.77	.95
	10000	311.2	19.2	.61	.78	.94	292.0	21.5	.62	.80	.97	269.4	24.1	.63	.83	.99	247.2	27.0	.64	.86	1.00
	12000	321.1	19.3	.65	.84	1.00	299.0	21.6	.66	.87	1.00	277.5	24.2	.67	.90	1.00	254.4	27.1	.69	.93	1.00
71°F	8000	318.5	19.3	.42	.56	.70	297.4	21.6	.41	.56	.71	276.5	24.2	.41	.57	.73	255.0	27.1	.41	.58	.75
	10000	331.6	19.4	.44	.60	.76	310.7	21.8	.43	.61	.78	288.4	24.3	.43	.62	.81	265.5	27.2	.43	.63	.83
	12000	340.4	19.5	.45	.64	.82	319.4	21.8	.45	.65	.85	294.8	24.4	.45	.67	.88	271.4	27.2	.45	.69	.91

25 TON - HEATING LDT302H5M

Indoor Coil Air Volume 70°F Dry Bulb cfm	Air Temperature Entering Outdoor Coil									
	65°F		45°F		25°F		5°F		-15°F	
	Total Heating Capacity	Comp. Motor Input	Total Heating Capacity	Comp. Motor Input	Total Heating Capacity	Comp. Motor Input	Total Heating Capacity	Comp. Motor Input	Total Heating Capacity	Comp. Motor Input
	kBtuh	kW	kBtuh	kW	kBtuh	kW	kBtuh	kW	kBtuh	kW
8000	362	19	265.4	17.11	185.9	15.2	121.2	13.7	79	11.93
10000	367.4	17.55	269.2	16.09	186.4	14.5	122.8	13.5	79.2	11.82
12000	370.6	16.63	270.1	15.46	187.2	14.16	122.9	13.42	79.3	11.8

HUMIDITROL® DEHUMIDIFICATION SYSTEM RATINGS

25 TON HIGH EFFICIENCY LDT302H5M WITH HUMIDITROL® OPERATING (1ST STAGE)

Entering Wet Bulb Temperature	Total Air Volume	Outdoor Air Temperature Entering Outdoor Coil																			
		65°F					70°F					75°F					80°F				
		Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb		
	cfm	kBtuh	kW	70°F	75°F	80°F	kBtuh	kW	70°F	75°F	80°F	kBtuh	kW	70°F	75°F	80°F	kBtuh	kW	70°F	75°F	80°F
63°F	4000	84.4	7.2	0.3	0.55	0.79	72.4	7.5	0.23	0.52	0.79	60.6	7.8	0.13	0.48	0.81	48.2	8.2	-0.01	0.43	0.83
	5000	88.0	7.2	0.34	0.63	0.86	75.1	7.4	0.27	0.61	0.86	62.0	7.8	0.18	0.59	0.86	49.1	8.1	0.03	0.56	0.86
	6000	91.1	7.1	0.38	0.71	0.86	77.4	7.4	0.32	0.7	0.86	63.6	7.8	0.22	0.69	0.86	50.0	8.1	0.07	0.68	0.86
67°F	4000	99.1	7.2	0.12	0.34	0.55	87.3	7.4	0.04	0.28	0.53	75.4	7.8	-0.06	0.22	0.5	63.1	8.1	-0.21	0.13	0.46
	5000	103.5	7.2	0.12	0.38	0.63	90.2	7.4	0.04	0.33	0.62	77.7	7.8	-0.08	0.27	0.6	64.0	8.1	-0.24	0.17	0.57
	6000	106.5	7.2	0.13	0.42	0.7	92.6	7.4	0.04	0.37	0.7	78.6	7.8	-0.08	0.31	0.69	64.7	8.1	-0.26	0.23	0.68
69°F	4000	107.1	7.2	0.05	0.25	0.45	94.9	7.4	-0.04	0.19	0.42	83.1	7.8	-0.14	0.12	0.38	70.8	8.1	-0.28	0.02	0.32
	5000	111.3	7.2	0.04	0.28	0.51	97.8	7.4	-0.05	0.22	0.48	85.4	7.8	-0.17	0.14	0.45	72.3	8.1	-0.33	0.04	0.4
	6000	114.0	7.2	0.02	0.3	0.57	100.4	7.4	-0.07	0.24	0.55	86.3	7.8	-0.2	0.17	0.52	72.2	8.1	-0.37	0.07	0.48

NOTE - Total Cooling Capacity is calculated at 75°F Dry Bulb.

25 TON HIGH EFFICIENCY LDT302H5M WITH HUMIDITROL® OPERATING (2ND STAGE)

Entering Wet Bulb Temperature	Total Air Volume	Outdoor Air Temperature Entering Outdoor Coil																			
		65°F					70°F					75°F					80°F				
		Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb			Total Cool Cap.	Comp. Motor Input	Sensible To Total Ratio (S/T) Dry Bulb		
	cfm	kBtuh	kW	70°F	75°F	80°F	kBtuh	kW	70°F	75°F	80°F	kBtuh	kW	70°F	75°F	80°F	kBtuh	kW	70°F	75°F	80°F
63°F	8000	228.0	13.1	0.43	0.62	0.79	204.2	13.7	0.42	0.62	0.82	181.8	14.3	0.39	0.62	0.85	158.7	15.0	0.37	0.63	0.88
	10,000	241.6	13.3	0.46	0.67	0.87	215.8	13.9	0.45	0.68	0.9	192.7	14.6	0.43	0.69	0.94	167.5	15.3	0.4	0.71	0.99
	12,000	249.4	13.5	0.49	0.73	0.94	221.7	14.1	0.47	0.74	0.97	197.4	14.7	0.46	0.76	1	171.3	15.4	0.44	0.79	1
67°F	8000	258.9	13.4	0.27	0.44	0.59	234.4	14.0	0.24	0.42	0.6	212.5	14.6	0.2	0.4	0.6	189.0	15.4	0.15	0.38	0.6
	10,000	272.3	13.6	0.27	0.46	0.65	246.0	14.2	0.24	0.45	0.66	220.9	14.9	0.2	0.44	0.67	197.5	15.6	0.15	0.42	0.68
	12,000	279.5	13.7	0.27	0.49	0.71	252.8	14.4	0.24	0.49	0.72	227.5	15.0	0.2	0.47	0.73	201.7	15.7	0.15	0.46	0.75
69°F	8000	273.7	13.5	0.2	0.36	0.51	250.3	14.1	0.17	0.34	0.5	227.0	14.8	0.12	0.32	0.5	204.6	15.5	0.07	0.28	0.49
	10,000	287.8	13.7	0.19	0.38	0.55	261.8	14.3	0.15	0.36	0.55	236.9	15.0	0.11	0.33	0.55	212.0	15.7	0.06	0.31	0.54
	12,000	296.2	13.9	0.18	0.39	0.6	268.8	14.5	0.14	0.37	0.6	241.9	15.2	0.09	0.35	0.6	215.9	15.9	0.03	0.33	0.6

NOTE - Total Cooling Capacity is calculated at 75°F Dry Bulb.

BLOWER DATA

BLOWER TABLE INCLUDES RESISTANCE FOR BASE UNIT ONLY WITH DRY INDOOR COIL & AIR FILTERS IN PLACE
FOR ALL UNITS ADD:

1 - Wet indoor coil air resistance of selected unit.
2 - Any factory installed options air resistance (heat section, economizer, etc.)
3 - Any field installed accessories air resistance (duct resistance, diffuser, etc.)

Then determine from blower table blower motor output and drive required.
See page 32 for wet coil and option/accessory air resistance data.
See page 32 for factory installed drive kit specifications.

Minimum Air Volume Required (At Maximum Input) For Different Gas Heat Sizes:
Low Heat - Standard and Medium Heat - 4500 cfm | High Heat - 5125 cfm

Air Volume cfm	TOTAL STATIC PRESSURE - In. w.g.																									
	0.20		0.40		0.60		0.80		1.00		1.20		1.40		1.60		1.80		2.00		2.20		2.40		2.60	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
4000	372	0.26	433	0.65	497	0.99	565	1.27	630	1.54	687	1.79	738	2.04	784	2.30	824	2.56	861	2.82	897	3.10	932	3.40	- - -	- - -
4500	382	0.41	441	0.79	506	1.12	574	1.41	638	1.69	694	1.95	744	2.22	790	2.50	831	2.77	868	3.05	903	3.35	938	3.66	974	4.01
5000	392	0.56	451	0.93	516	1.25	584	1.55	646	1.85	702	2.12	751	2.41	796	2.70	837	3.00	874	3.30	909	3.61	944	3.93	980	4.30
5500	402	0.73	462	1.08	527	1.40	594	1.72	655	2.02	710	2.31	758	2.61	802	2.92	843	3.24	880	3.56	916	3.88	951	4.22	987	4.60
6000	414	0.89	473	1.24	539	1.56	605	1.90	665	2.21	718	2.51	766	2.83	809	3.16	850	3.51	887	3.84	922	4.18	957	4.52	994	4.91
6500	426	1.07	486	1.41	551	1.74	616	2.10	675	2.42	727	2.73	774	3.07	817	3.43	857	3.80	894	4.15	929	4.49	964	4.85	1001	5.24
7000	439	1.26	499	1.60	565	1.93	628	2.31	685	2.64	737	2.97	782	3.34	825	3.72	864	4.11	901	4.48	937	4.83	971	5.19	1008	5.59
7500	453	1.46	513	1.79	579	2.14	641	2.55	696	2.88	747	3.24	792	3.63	833	4.04	872	4.45	909	4.83	945	5.20	979	5.56	1016	5.97
8000	467	1.66	528	2.00	593	2.38	653	2.81	708	3.15	757	3.53	801	3.95	843	4.39	881	4.82	918	5.22	953	5.59	988	5.96	1025	6.37
8500	483	1.88	544	2.22	608	2.65	667	3.10	720	3.44	768	3.85	812	4.30	852	4.78	890	5.22	927	5.63	962	6.01	997	6.39	1034	6.81
9000	499	2.11	561	2.47	624	2.95	681	3.41	733	3.76	780	4.20	823	4.69	862	5.19	900	5.65	936	6.07	972	6.46	1007	6.85	1044	7.28
9500	516	2.36	578	2.75	640	3.26	696	3.73	746	4.10	792	4.58	834	5.11	873	5.64	910	6.12	946	6.54	982	6.93	1018	7.34	1055	7.78
10,000	534	2.64	596	3.06	657	3.60	711	4.07	760	4.48	805	5.00	845	5.57	884	6.12	921	6.61	957	7.03	992	7.43	1028	7.86	1066	8.32
10,500	553	2.93	615	3.39	674	3.95	727	4.44	775	4.90	817	5.46	857	6.06	895	6.62	932	7.12	967	7.55	1003	7.96	1039	8.40	1077	8.89
11,000	572	3.24	634	3.74	692	4.31	744	4.83	789	5.35	830	5.95	869	6.58	907	7.16	943	7.65	978	8.09	1013	8.51	1050	8.98	1089	9.49
11,500	592	3.58	653	4.12	711	4.70	760	5.27	803	5.85	843	6.49	881	7.13	918	7.71	954	8.21	989	8.65	1025	9.10	1062	9.59	1101	10.12
12,000	613	3.95	674	4.53	729	5.14	776	5.75	818	6.39	857	7.06	894	7.71	930	8.30	965	8.80	1000	9.25	1036	9.71	1073	10.22	- - -	- - -
12,500	635	4.37	695	4.98	748	5.62	792	6.29	832	6.98	870	7.67	906	8.33	941	8.91	976	9.42	1011	9.87	1048	10.35	- - -	- - -	- - -	- - -

BLOWER DATA

DRIVE KIT SPECIFICATIONS

Motor Efficiency	Nominal hp	Maximum hp	Drive Kit Number	RPM Range
Standard	5	5.75	5	660 - 810
Standard	5	5.75	6	770 - 965
Standard	5	5.75	7	570 - 720
Standard	5	5.75	8	480 - 630
Standard	5	5.75	9	410 - 535
Standard	7.5	8.63	3	715 - 880
Standard	7.5	8.63	4	770 - 965
Standard	10	11.50	1	740 - 895
Standard	10	11.50	2	870 - 1045

NOTE - Using total air volume and system static pressure requirements determine from blower performance tables rpm and motor output required. Maximum usable output of motors furnished are shown. In Canada, nominal motor output is also maximum usable motor output. If motors of comparable output are used, be sure to keep within the service factor limitations outlined on the motor nameplate.

For VFD applications, nominal motor output is also maximum usable motor output.

FACTORY INSTALLED OPTIONS/FIELD INSTALLED ACCESSORY AIR RESISTANCE in. w.g.

Air Volume cfm	Wet Indoor Coil	Reheat Coil	Gas Heat Exchanger			Economizer	Filters			Horizontal Roof Curb
			Standard Heat	Medium Heat	High Heat		MERV 8	MERV 13	MERV 16	
4000	0.04	0.04	0.08	0.08	0.11	0.00	0.00	0.00	0.06	0.04
4500	0.04	0.04	0.09	0.10	0.13	0.00	0.00	0.00	0.07	0.05
5000	0.05	0.04	0.10	0.12	0.15	0.00	0.00	0.00	0.08	0.06
5500	0.06	0.06	0.11	0.14	0.17	0.01	0.00	0.01	0.09	0.07
6000	0.07	0.06	0.12	0.16	0.19	0.01	0.00	0.02	0.10	0.08
6500	0.08	0.08	0.13	0.18	0.21	0.01	0.01	0.02	0.11	0.09
7000	0.09	0.08	0.14	0.20	0.24	0.02	0.01	0.03	0.12	0.10
7500	0.10	0.10	0.15	0.21	0.25	0.02	0.01	0.04	0.13	0.11
8000	0.11	0.10	0.17	0.24	0.28	0.02	0.01	0.04	0.14	0.13
8500	0.12	0.10	0.20	0.27	0.31	0.03	0.01	0.04	0.15	0.15
9000	0.13	0.12	0.22	0.29	0.34	0.04	0.01	0.04	0.16	0.17
9500	0.14	0.14	0.24	0.32	0.38	0.04	0.02	0.06	0.17	0.19
10,000	0.15	0.16	0.27	0.36	0.42	0.05	0.02	0.06	0.18	0.21
10,500	0.16	0.17	0.30	0.40	0.46	0.06	0.02	0.06	0.19	0.24
11,000	0.18	0.18	0.33	0.43	0.50	0.07	0.02	0.07	0.20	0.27
11,500	0.19	0.19	0.37	0.48	0.55	0.08	0.02	0.08	0.22	0.30
12,000	0.20	0.20	0.40	0.52	0.60	0.10	0.02	0.08	0.23	0.33
12,500	0.21	0.22	0.44	0.57	0.65	0.11	0.03	0.10	0.24	0.37

BLOWER DATA

POWER EXHAUST PERFORMANCE - STANDARD STATIC

Return Duct Negative Static Pressure	Air Volume Exhausted
in. w.g.	cfm
0.00	12,800
0.05	12,200
0.10	11,500
0.15	10,800
0.20	9900
0.25	9000
0.30	7900
0.35	6750
0.40	5450
0.45	4150
0.50	2900

POWER EXHAUST - HIGH STATIC

Air Volume cfm	Return Duct Negative Static Pressure - In. w.g.																					
	0		0.10		0.20		0.30		0.40		0.50		0.60		0.70		0.80		0.90		1.0	
	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP	RPM	BHP
8500	487	0.43	501	0.44	521	0.46	548	0.49	584	0.53	625	0.58	667	0.64	708	0.70	746	0.75	783	0.81	818	0.87
9000	515	0.51	528	0.52	547	0.54	570	0.57	601	0.61	638	0.66	678	0.71	717	0.77	755	0.83	791	0.90	826	0.96
9500	544	0.60	556	0.61	573	0.63	594	0.66	620	0.69	652	0.74	689	0.80	727	0.86	765	0.93	800	0.99	834	1.05
10,000	572	0.70	584	0.71	599	0.73	618	0.76	641	0.79	669	0.83	702	0.89	738	0.95	774	1.02	810	1.09	843	1.15
10,500	601	0.81	612	0.82	626	0.84	643	0.87	663	0.90	688	0.94	718	0.99	750	1.05	785	1.12	819	1.19	853	1.27
11,000	629	0.93	640	0.95	653	0.97	668	0.99	687	1.02	709	1.06	735	1.11	764	1.16	796	1.23	830	1.31	862	1.38
11,500	658	1.06	668	1.08	680	1.10	694	1.12	711	1.15	731	1.19	754	1.24	780	1.29	810	1.36	841	1.43	872	1.50
12,000	686	1.21	696	1.22	707	1.24	721	1.27	736	1.30	754	1.34	774	1.38	798	1.43	825	1.49	853	1.56	883	1.64

BLOWER DATA

CEILING DIFFUSER AIR RESISTANCE - in. w.g.

Air Volume cfm	Step-Down Diffuser			Flush Diffuser
	LARTD30/36S			LAFD30/36S
	2 Ends Open	1 Side/2 Ends Open	All Ends & Sides Open	
7500	0.37	0.31	0.25	0.29
8000	0.42	0.36	0.29	0.34
8500	0.48	0.41	0.34	0.39
9000	0.55	0.47	0.39	0.44
9500	0.62	0.53	0.45	0.51
10,000	0.70	0.60	0.51	0.57
10,500	0.78	0.68	0.58	0.65
11,000	0.87	0.76	0.65	0.72
11,500	0.97	0.85	0.73	0.81
12,000	1.08	0.94	0.82	0.9

CEILING DIFFUSER AIR THROW DATA - ft.

Air Volume cfm	[1] Effective Throw Range - ft.	
	Step-Down	Flush
9000	40 - 47	29 - 35
9500	43 - 50	33 - 41
10,000	46 - 54	37 - 46
10,500	50 - 58	42 - 51
11,000	53 - 61	46 - 56
11,500	55 - 64	50 - 61
12,000	58 - 67	54 - 66

[1] 1 Throw is the horizontal or vertical distance an airstream travels on leaving the outlet or diffuser before the maximum velocity is reduced to 50 ft. per minute. Four sides open.

ELECTRICAL DATA — 25 TON

	Model No.	LDT302H5M								
[1] **Voltage - 60hz**		**208/230V - 3 Ph**			**460V - 3 Ph**			**575V - 3 Ph**		
Compressor 1 (Non-Inverter)	Rated Load Amps	37.2			19.7			16.9		
	Locked Rotor Amps	270			147			109		
Compressor 2 (Non-Inverter)	Rated Load Amps	33.3			15.4			13		
	Locked Rotor Amps	255			140			107.6		
Outdoor Fan Motors (6)	Full Load Amps (6 Non-ECM)	3			1.5			1.2		
	Total	18			9			7.2		
Standard Power Exhaust (3) 0.33 HP	Full Load Amps	2.4			1.3			1		
	Total	7.2			3.9			3		
High Static Power Exhaust (3) 2 HP	Full Load Amps	7.5			3.4			2.7		
	Total	22.5			10.2			8.1		
Service Outlet 115V GFI (amps)		15			15			20		
Indoor Blower Motor	HP	5	7.5	10	5	7.5	10	5	7.5	10
	Full Load Amps	16.7	24.2	30.8	7.6	11	14	6.1	9	11
[2] Maximum Overcurrent Protection	Unit Only	150	150	150	70	70	80	60	60	60
	With (3) 0.33 HP Standard Power Exhaust	150	150	150	80	80	80	60	70	70
	With High Static Power Exhaust (3) 2 HP	150	175	175	80	80	90	70	70	70
[3] Minimum Circuit Ampacity	Unit Only	115	122	129	57	61	64	48	51	53
	With (3) 0.33 HP Standard Power Exhaust	122	130	136	61	64	67	51	54	56
	With High Static Power Exhaust (3) 2 HP	137	145	152	67	71	74	56	59	61

ELECTRICAL ACCESSORIES

Disconnect	Unit Only	**54W86**	**54W86**	**54W86**	**54W85**	**54W85**	**54W85**	**54W85**	**54W85**	**54W85**
	Unit + Standard Power Exhaust (3) 0.33 HP	**54W86**	**54W86**	**54W86**	**54W85**	**54W85**	**54W85**	**54W85**	**54W85**	**54W85**
	Unit + High Static Power Exhaust (3) 2 HP	**54W86**	**54W87**	**54W87**	**54W85**	**54W85**	**54W85**	**54W85**	**54W85**	**54W85**
Terminal Block		**30K75**	**30K75**	**30K75**	**30K75**	**30K75**	**30K75**	**30K75**	**30K75**	**30K75**

Disconnects - 54W85 - 80A
54W86 - 150A
54W87 - 250A

NOTE - All units have a minimum Short Circuit Current Rating (SCCR) of 5000 amps.


[1] 1 Extremes of operating range are plus and minus 10% of line voltage.

[2] 2 HACR type breaker or fuse.

[3] 3 Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

UNIT CLEARANCES

Unit With Economizer

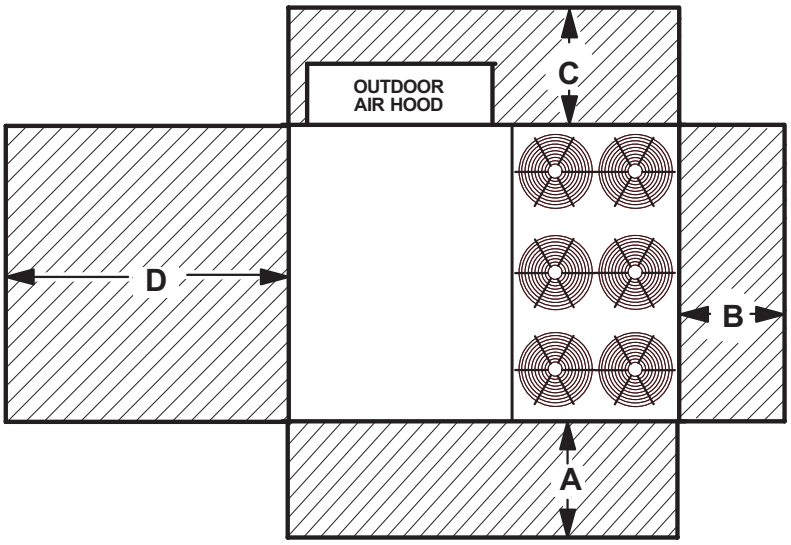


[1] Unit Clearance	A		B		C		D		Top Clearance
	in.	mm	in.	mm	in.	mm	in.	mm	
Service Clearance	60	1524	36	914	36	914	66	1676	Unobstructed
Clearance to Combustibles	36	914	1	25	1	25	1	25	
Minimum Operation Clearance	45	1143	36	914	36	914	41	1041	

NOTE - Entire perimeter of unit base requires support when elevated above the mounting surface.

[1] 1 Service Clearance - Required for removal of serviceable parts.
Clearance to Combustibles - Required clearance to combustible material.
Minimum Operation Clearance - Required clearance for proper unit operation.

Unit With High Static Power Exhaust Fans

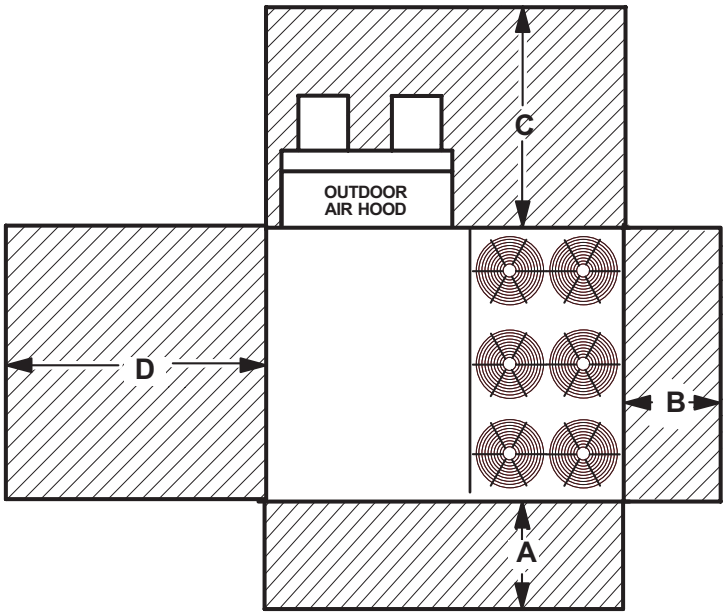

[1] Unit Clearance	A		B		C		D		Top Clearance
	in.	mm	in.	mm	in.	mm	in.	mm	
Service Clearance	60	1524	36	914	80	2032	66	1676	Unobstructed
Clearance to Combustibles	36	914	1	25	1	25	1	25	
Minimum Operation Clearance	45	1143	36	914	80	2032	41	1041	

NOTE - Entire perimeter of unit base requires support when elevated above the mounting surface.


[1] 1 **Service Clearance** - Required for removal of serviceable parts.
Clearance to Combustibles - Required clearance to combustible material.
Minimum Operation Clearance - Required clearance for proper unit operation.

UNIT CLEARANCES

Unit With Horizontal Barometric Relief Dampers

NOTE Allow adequate clearance for duct and barometric relief damper installation.

NOTE Dampers may be installed on each side of return air duct or end to end on one side of return air duct.

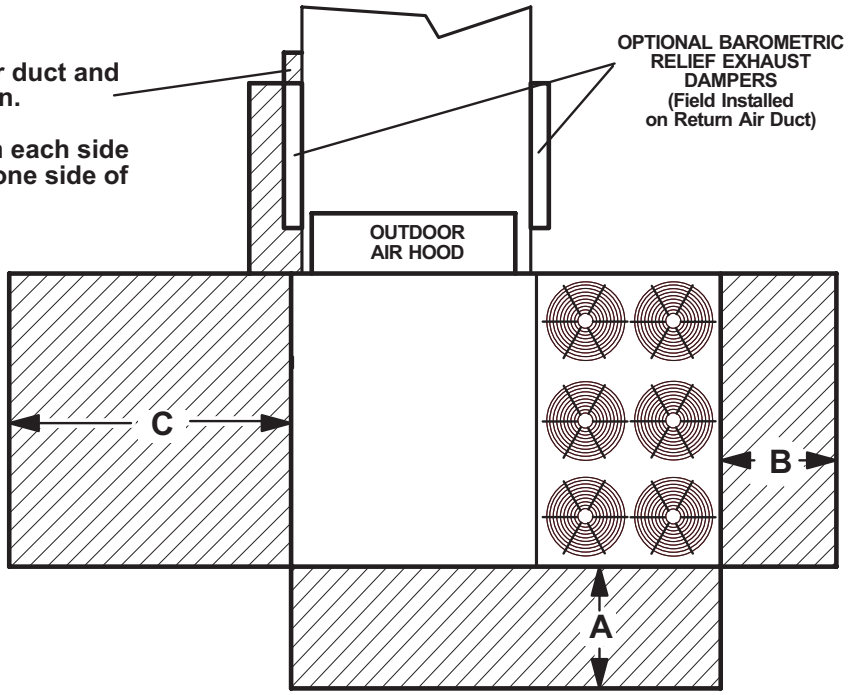

[1] Unit Clearance	A		B		C		Top Clearance
	in.	mm	in.	mm	in.	mm	
Service Clearance	60	1524	36	914	66	1676	Unobstructed
Clearance to Combustibles	36	914	1	25	1	25	
Minimum Operation Clearance	45	1143	36	914	41	1041	

NOTE - Entire perimeter of unit base requires support when elevated above the mounting surface.

[1] 1 **Service Clearance** - Required for removal of serviceable parts.
Clearance to Combustibles - Required clearance to combustible material.
Minimum Operation Clearance - Required clearance for proper unit operation.

OUTDOOR SOUND DATA

Size	Octave Band Sound Power Levels dBA, re 10^{-12} Watts - Center Frequency - Hz							[1] Sound Rating Number (dBA)
	125	250	500	1000	2000	4000	8000	
302	84	85	90	90	85	80	72	95

Note - The octave sound power data does not include tonal corrections.

[1] 1 Sound Rating Number according to ARI Standard 370-2001 (includes pure tone penalty).
The Sound Rating Number is the overall A-Weighted Sound Power Level, (LWA), dB (100 Hz to 10,000 Hz)

WEIGHT DATA

Size	Net		Shipping	
	lbs.	kg	lbs.	kg
302 Base Unit	2888	1310	3098	1405
302 Max. Unit	3466	1572	3676	1667

FACTORY / FIELD INSTALLED OPTIONS AND ACCESSORIES - NET WEIGHTS

Description		lbs.	kg
ECONOMIZER / OUTDOOR AIR / EXHAUST			
Economizer		138	63
Barometric Relief			
Downflow Barometric Relief Dampers		45	20
Horizontal Barometric Relief Dampers		20	9
Outdoor Air Dampers			
Damper Section (downflow)	Motorized	72	33
Damper Section (downflow)	Manual	68	31
Outdoor Air Hood (downflow)		76	34
Power Exhaust			
Standard Static		99	45
High Static with or without VFD		525	238
GAS HEAT EXCHANGER (NET WEIGHT)			
Medium Heat (adder over standard heat)		18	8
High Heat (adder over standard heat)		64	29
COMBINATION COIL/HAIL GUARDS			
All models		63	29
ROOF CURBS			
Hybrid Roof Curbs, Downflow			
14 in. height		205	93
18 in. height		235	107
24 in. height		270	123
Standard Curbs, Horizontal			
30 in. height		495	225
41 in. height		575	261
Insulation Kit for Horizontal Curbs			
30 in. height		45	21
41 in. height		55	25
CEILING DIFFUSERS			
Step-Down	LARTD30/36S	625	283
Flush	LAFD30/36S	625	283
Transitions	LASRT30/36	85	39
HUMIDITROL® DEHUMIDIFICATION SYSTEM			
Humiditrol® Dehumidification Option		100	45


DIMENSIONS — UNIT

CORNER WEIGHTS / CENTER OF GRAVITY


Model No.	AA		BB		CC		DD		EE		FF	
	lbs.	kg	lbs.	kg	lbs.	kg	lbs.	kg	in.	mm	in.	mm
LDT302 Base Unit	596	270	645	293	856	388	791	359	62	1575	39	991
LDT302 Max. Unit	715	324	774	351	1027	466	949	431	62	1575	39	991

Base Unit - The unit with NO INTERNAL OPTIONS.


Max. Unit - The unit with ALL INTERNAL OPTIONS Installed. (Economizer, Standard Static Power Exhaust, Controls, etc.). Does not include accessories external to unit or High Static Power Exhaust.

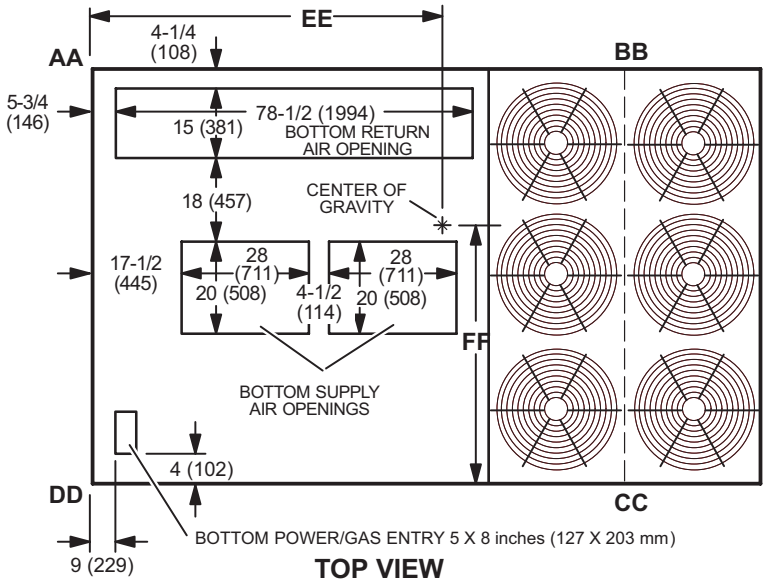

TOP VIEW

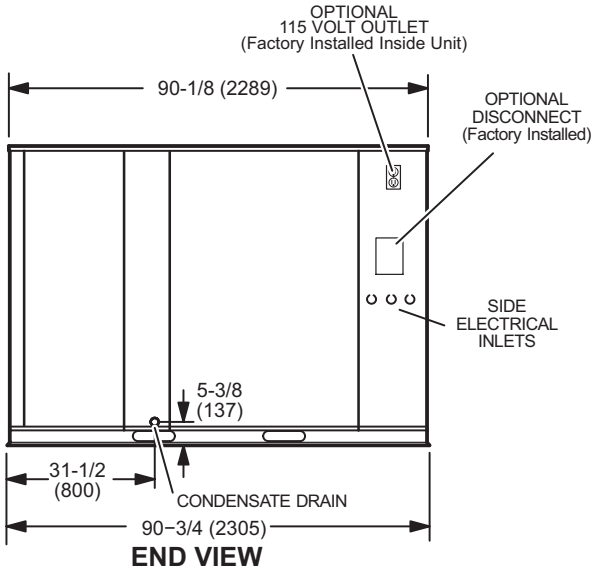


END VIEW

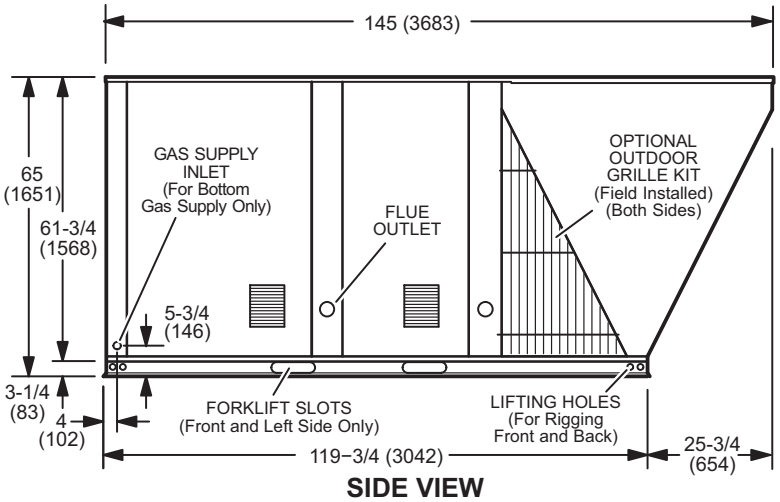


SIDE VIEW

OUTDOOR AIR HOOD DETAIL

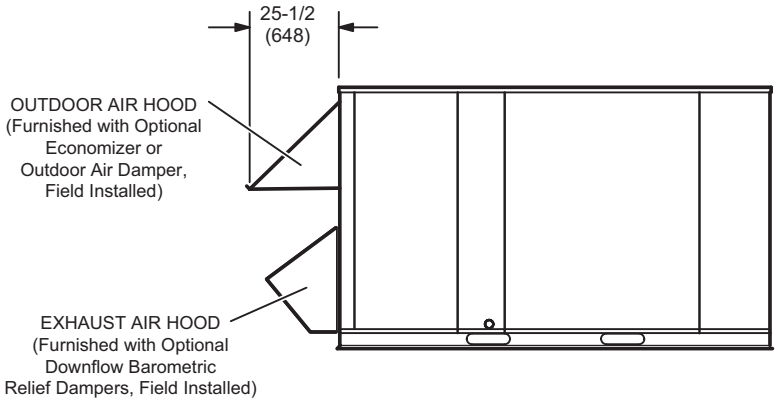


OPTIONAL HIGH STATIC POWER EXHAUST FANS DETAIL

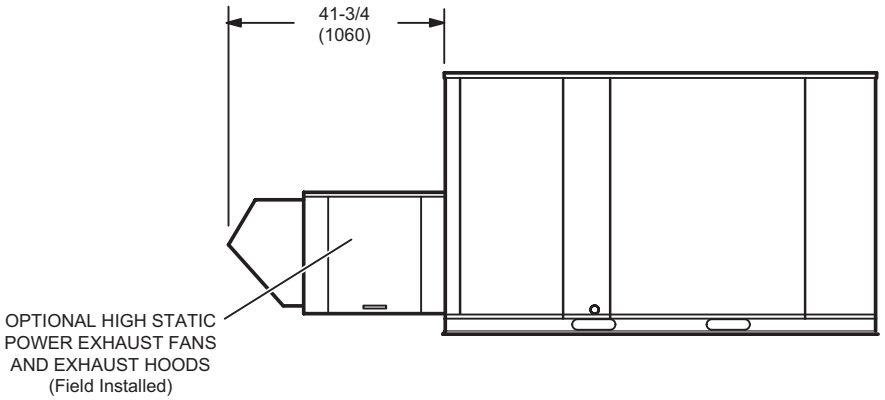

OPTIONAL HORIZONTAL BAROMETRIC RELIEF DAMPERS WITH HOOD


(Field installed in horizontal return air duct adjacent to unit)

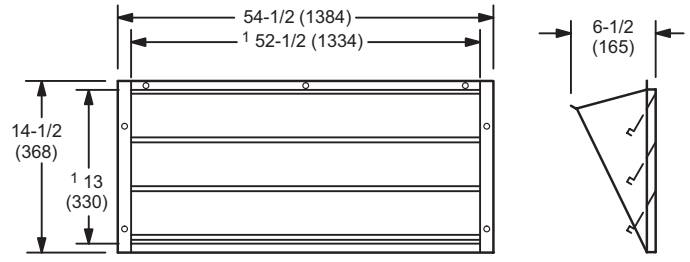

NOTE - Two furnished per order no.


[1] NOTE - Opening size required in return air duct.

HYBRID ROOF CURBS - DOUBLE DUCT OPENING

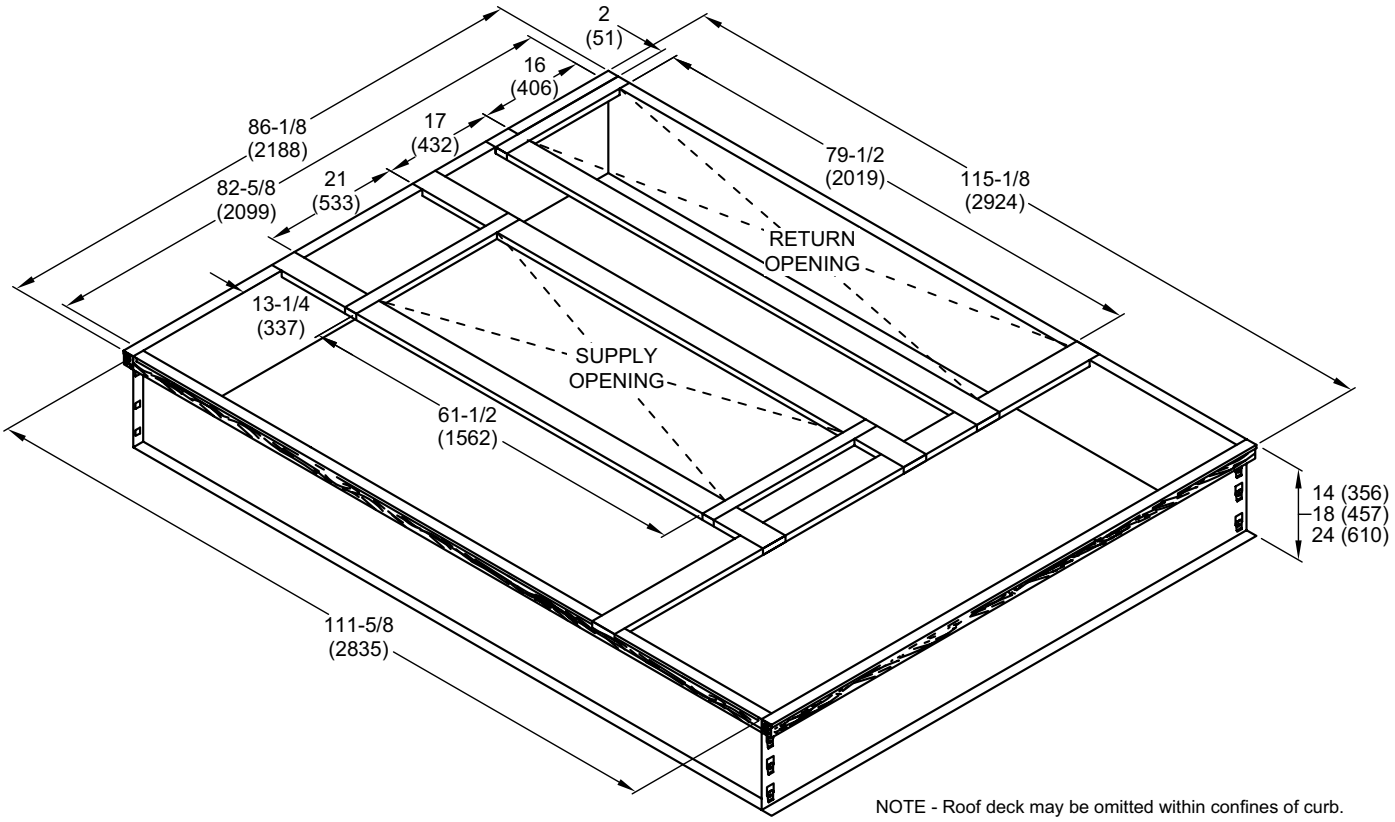


NOTE - Roof deck may be omitted within confines of curb.


TYPICAL FLASHING DETAIL FOR ROOF CURB

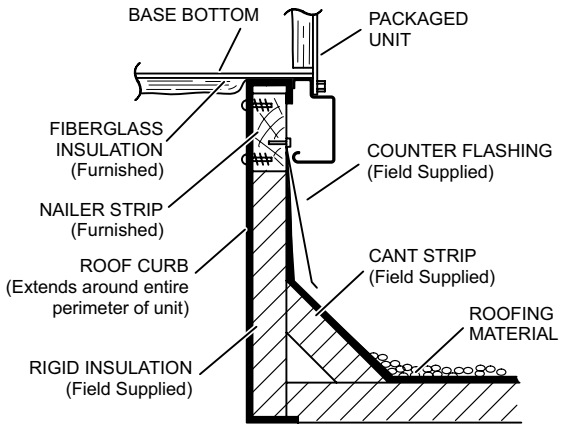

DETAIL ROOF CURB

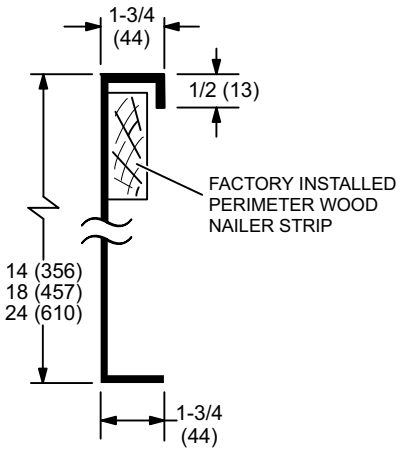


ROOF CURBS WITH SUPPLY & RETURN AIR TRANSITIONS FOR CEILING DIFFUSERS

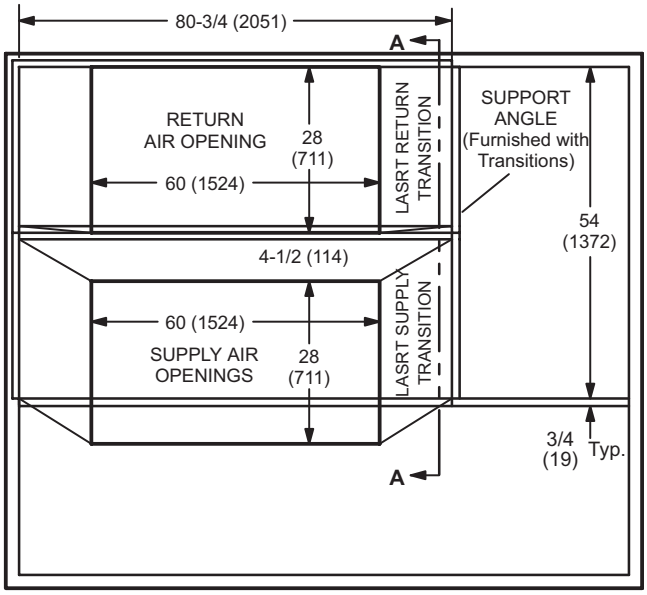


TOP VIEW

TRANSITION DETAIL

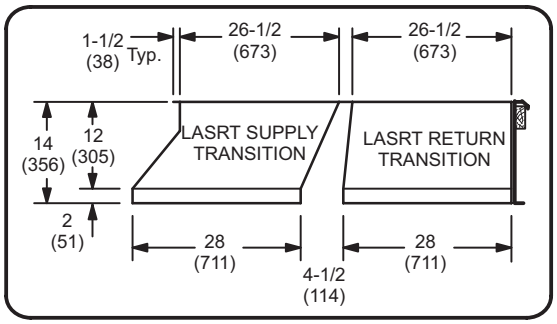

SECTION B-B


HORIZONTAL ROOF CURBS − Requires Optional Horizontal Return Air Panel Kit

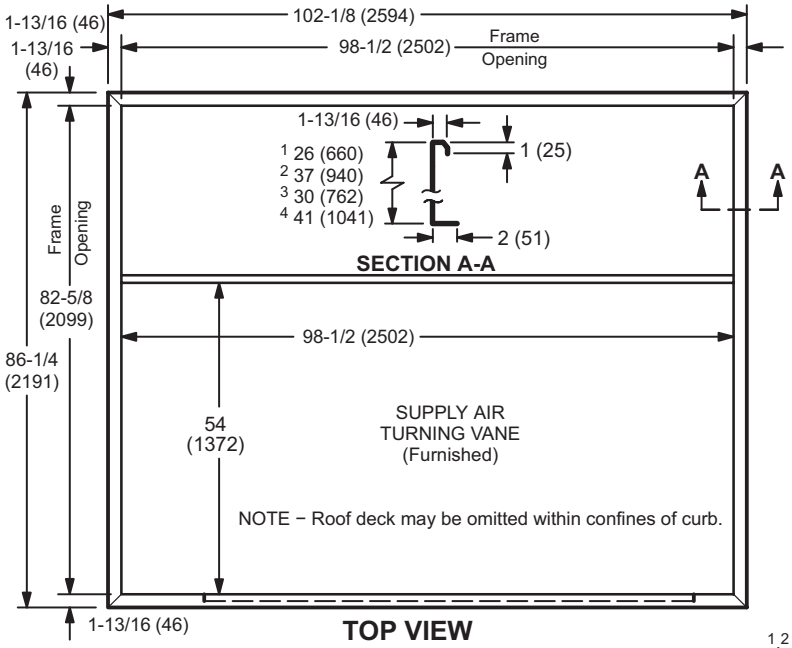


TOP VIEW

NOTE - 30 in. (762 mm) height Curb is designed for horizontal discharge when unit is mounted on a slab.
41 in. (1041 mm) height Curb is designed for horizontal discharge when unit is mounted on a rooftop.

PANEL TO COVER RETURN AIR OPENING IN BOTTOM OF UNIT
(Furnished With Optional Horizontal Return Air Panel Kit)

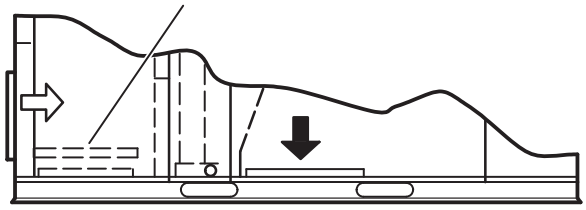

SIDE VIEW
(PACKAGED UNIT)

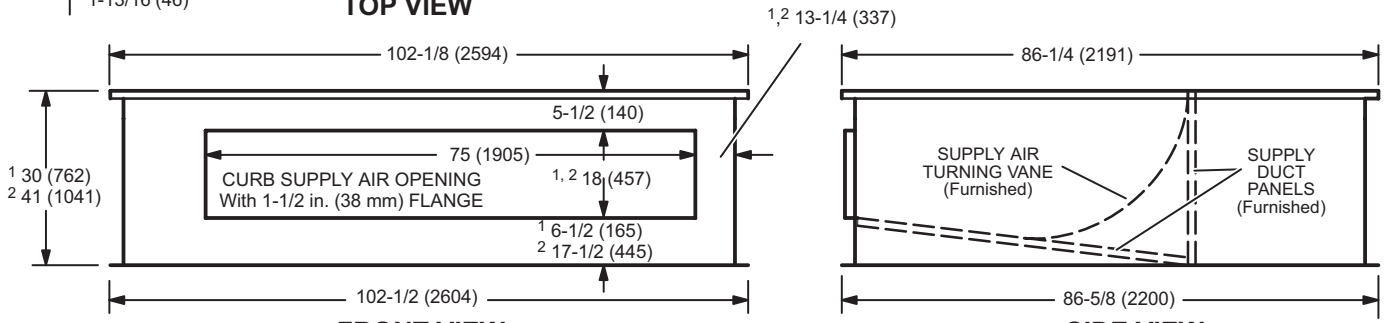


FRONT VIEW

SIDE VIEW

1 Slab Applications 2 Rooftop Applications

HORIZONTAL SUPPLY AND RETURN AIR OPENINGS
ROOFTOP UNIT WITH HORIZONTAL ROOF CURB

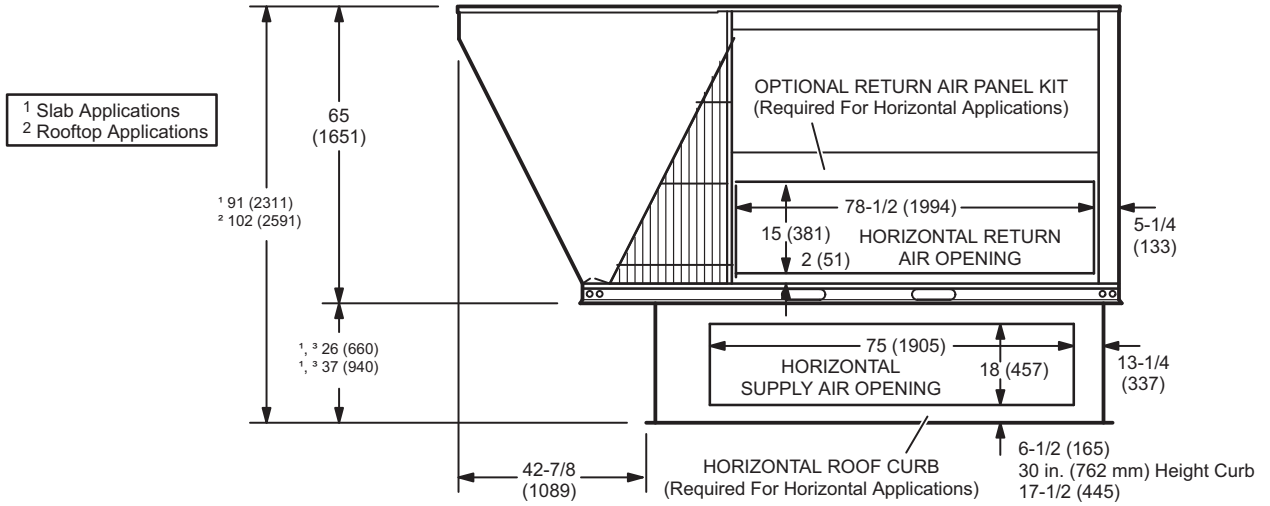


3 NOTE − Top of Curb extends 4 inch (102 mm) inside bottom of unit base. See Typical Flashing Detail.

SIDE VIEW
(Horizontal Openings)


COMBINATION CEILING SUPPLY AND RETURN DIFFUSERS

STEP-DOWN CEILING DIFFUSER

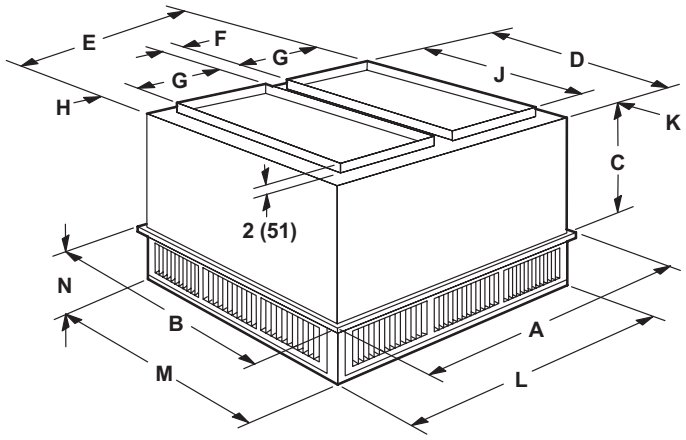

Model		LARTD30/36S
A	in.	65-5/8
	mm	1667
B	in.	65-5/8
	mm	1667
C	in.	40-1/2
	mm	1029
D	in.	63-1/2
	mm	1613
E	in.	63-1/2
	mm	1613
F	in.	4-1/2
	mm	114
G	in.	28
	mm	711
H	in.	1-1/2
	mm	38
J	in.	60
	mm	1524
K	in.	1-3/4
	mm	44
L	in.	63-1/2
	mm	1613
M	in.	63-1/2
	mm	1613
N	in.	12-1/8
	mm	308
Duct Size	in.	28 x 60
	mm	711 x 1524

FLUSH CEILING DIFFUSER

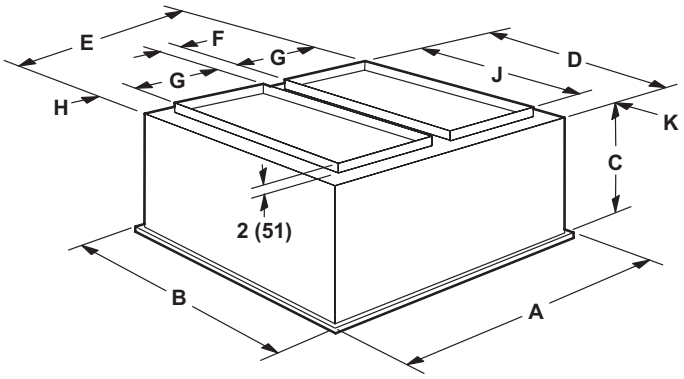

Model		LAFD30/36S
A	in.	65-5/8
	mm	1667
B	in.	65-5/8
	mm	1667
C	in.	40
	mm	1016
D	in.	63-1/2
	mm	1613
E	in.	63-1/2
	mm	1613
F	in.	4-1/4
	mm	108
G	in.	28
	mm	711
H	in.	1-5/8
	mm	32
J	in.	60
	mm	1524
K	in.	1-3/4
	mm	44
Duct Size	in.	28 x 60
	mm	711 x 1524

REVISIONS

Sections	Description of Change
Specifications - Gas Heat	Updated.









Visit us at www.Lennox.com
For the latest technical information, www.LennoxCommercial.com
Contact us at 1-800-4-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability.
Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury.
Installation and service must be performed by a qualified installer and servicing agency.

©2026 Lennox Industries, Inc.