


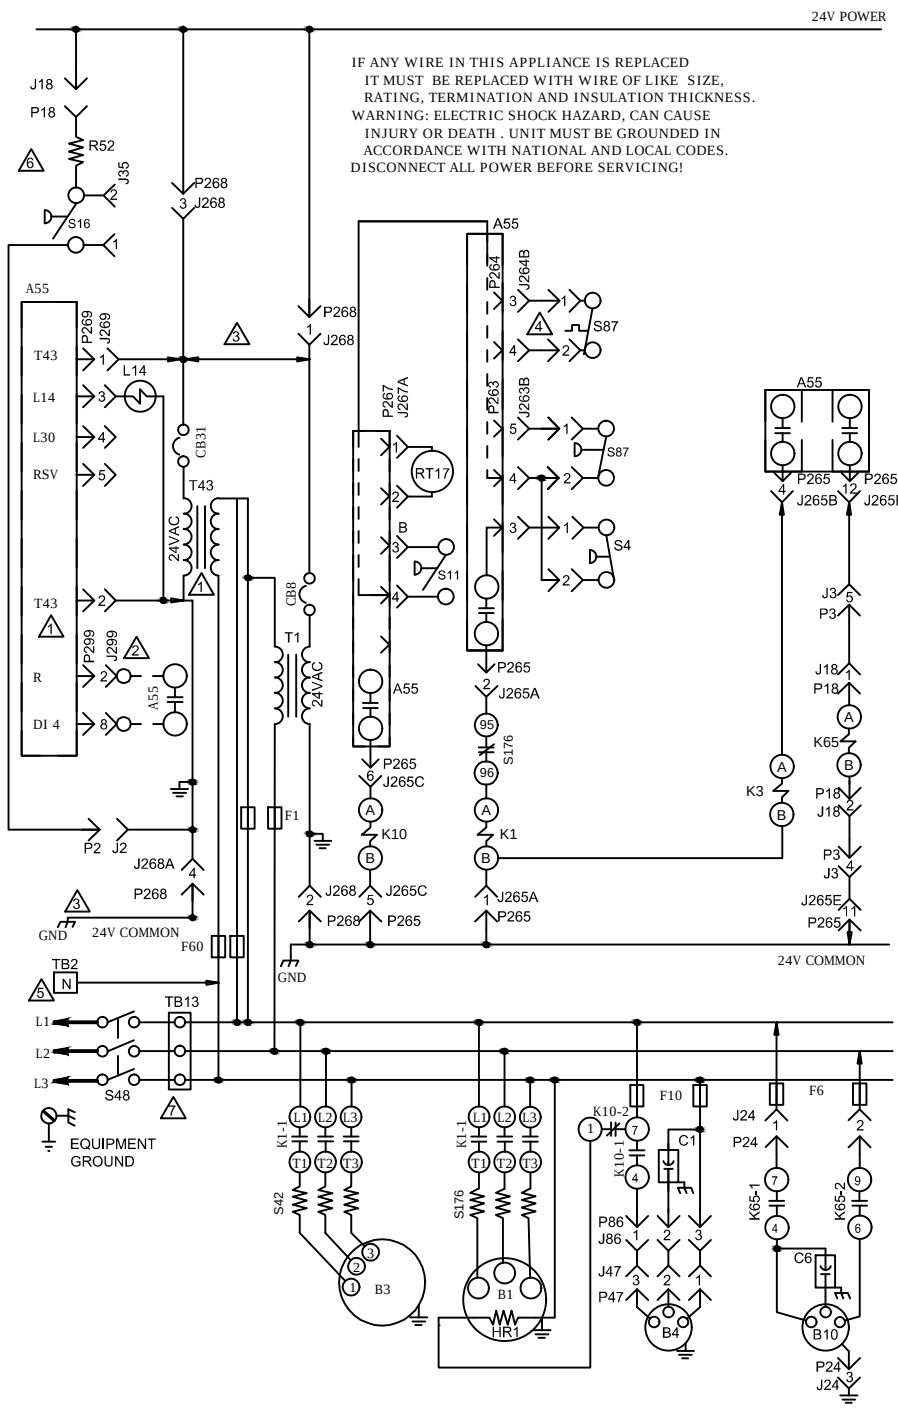

KEY	COMPONENT
A55	CONTROL, MAIN PANEL LENNOX
B1	COMPRESSOR 1
B3	MOTOR, BLOWER
B4	MOTOR, OUTDOOR FAN
B10	MOTOR, EXHAUST FAN
C1	CAPACITOR, OUTDOOR FAN 1
C6	CAPACITOR, EXHAUST FAN
CB8	CIRCUIT, BREAKER
CB10	CIRCUIT BREAKER, MAIN DISCONNECT
CB31	CIRCUIT BREAKER, TRANSFORMER T43
F1	FUSE, TRANSFORMER 1
F6	FUSE, EXHAUST FAN
F10	FUSE, OUTDOOR FAN MOTOR
F60	FUSE, TRANSFORMER, T43
HR1	HEATER, COMPRESSOR
J11	JACK, GFI RECEPTACLE
K3, -1	CONTACTOR, BLOWER
K10,-1	RELAY, OUTDOOR FAN 1
K10,-2	RELAY, CRANKCASE
K65,1,2	RELAY, EXHAUST FAN
L14	VALVE, SOLENOID REHEAT COIL 1
R52	RESISTOR, TXV CONTROL
RT17	SENSOR, OUTDOOR AIR
S4	SWITCH, LIMIT HI PRESS
S11	SWITCH, LOW PRESS, LOW AMBIENT KIT
S16	SWITCH, HIGH PRESS, HIGH AMBIENT KIT
S42	SWITCH,OVERLOAD FOR BLOWER MOTOR
S48	SWITCH, DISCONNECT
S49	SWITCH, FREEZE/STAT
S87	SWITCH, LOW PRESS, COMPRESSOR 1
S176	SWITCH, OVERLOAD COMP #1
T1	TRANSFORMER, CONTROL
T43	TRANSFORMER, REHEAT
TB13	TERMINAL STRIP

J/P #	JACK/PLUG DESCRIPTION
2	HEAT
3	ECONOMIZER BYPASS
18	EXHAUST FAN
24	EXHAUST FAN
35	TEST
47	OUTDOOR FAN
263	HIGH AND LOW PRESSURE SWITCHES
264	BLOWER DECK
265	CONTACTORS AND RELAYS
267	OUTDOOR FAN AREA
268	TRANSFORMER 1 POWER
269	HUMIDITROL
299	HUMIDITROL INTERFACE

- ONLY IN UNITS WITH HUMIDITROL OR PHASE DETECTION OPTION
- EXTERNAL HUMIDITROL CONTACTS
- J268-1, -3 AND J268-2, -4 ARE CONNECTED ON UNITS WITHOUT HUMIDITROL OR PHASE DETECTION OPTIONS
- S49 IS PART OF A 5VDC CIRCUIT
- LGH UNITS ONLY
- USED ON ENVIRON COIL SYSTEM ONLY
- USE 4 POLE ON LGH UNITS ONLY

← DENOTES OPTIONAL COMPONENTS
— LINE VOLTAGE FIELD INSTALLED

11/16



WIRING DIAGRAM

537775-01

11/16

COOLING-CE

LCH, LGH - 072H - M

SECTION B

REV. 1

Supersedes

Form No.
537775-01