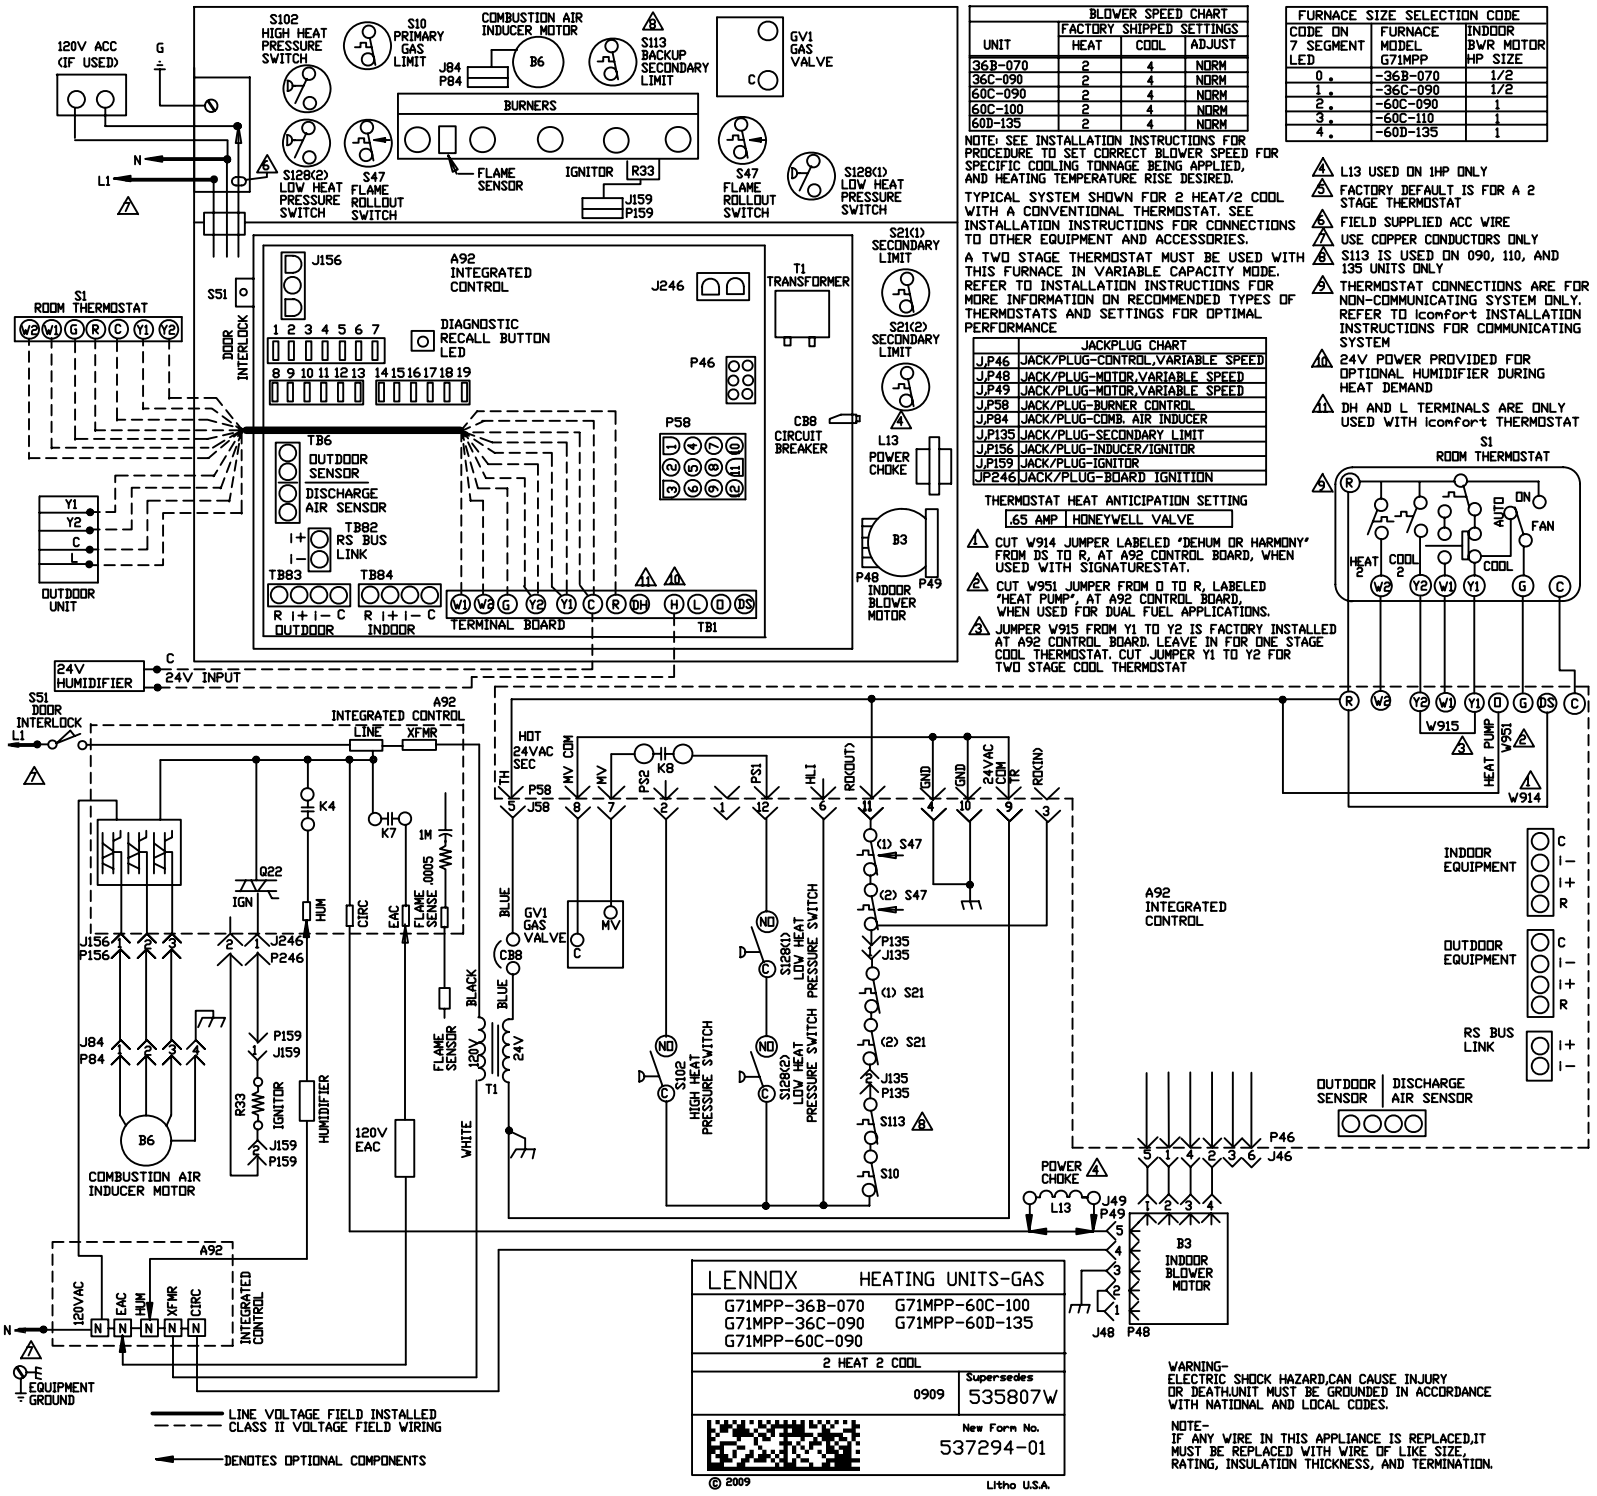

BLOWER SPEED CHART			
	FACTORY SHIPPED SETTINGS		
UNIT	HEAT	COOL	ADJUST
36B-070	2	4	NORM
36C-090	2	4	NORM
60C-090	2	4	NORM
60C-100	2	4	NORM
60D-135	2	4	NORM

NOTE: SEE INSTALLATION INSTRUCTIONS FOR PROCEDURE TO SET CORRECT BLOWER SPEED FOR SPECIFIC COOLING TONNAGE BEING APPLIED, AND HEATING TEMPERATURE RISE DESIRED.

TYPICAL SYSTEM SHOWN FOR 2 HEAT/2 COOL WITH A CONVENTIONAL THERMOSTAT. SEE INSTALLATION INSTRUCTIONS FOR CONNECTIONS TO OTHER EQUIPMENT AND ACCESSORIES.

A TWO STAGE THERMOSTAT MUST BE USED WITH THIS FURNACE IN VARIABLE CAPACITY MODE. REFER TO INSTALLATION INSTRUCTIONS FOR MORE INFORMATION ON RECOMMENDED TYPES OF THERMOSTATS AND SETTINGS FOR OPTIMAL PERFORMANCE

JACKPLUG CHART	
J,P46	JACK/PLUG-CONTROL,VARIABLE SPEED
J,P48	JACK/PLUG-MOTOR,VARIABLE SPEED
J,P49	JACK/PLUG-MOTOR,VARIABLE SPEED
J,P58	JACK/PLUG-BURNER CONTROL
J,P84	JACK/PLUG-COMB. AIR INDUCER
J,P135	JACK/PLUG-SECONDARY LIMIT
J,P156	JACK/PLUG-INDUCER/IGNITOR
J,P159	JACK/PLUG-IGNITOR
JP246	JACK/PLUG-BOARD IGNITION

THERMOSTAT HEAT ANTICIPATION SETTING

.65 AMP	HONEYWELL VALVE

1. CUT W914 JUMPER LABELED "DEHUM OR HARMONY" FROM DS TO R, AT A92 CONTROL BOARD, WHEN USED WITH SIGNATURESTAT.
2. CUT W951 JUMPER FROM D TO R, LABELED "HEAT PUMP", AT A92 CONTROL BOARD, WHEN USED FOR DUAL FUEL APPLICATIONS.
3. JUMPER W915 FROM Y1 TO Y2 IS FACTORY INSTALLED AT A92 CONTROL BOARD. LEAVE IN FOR ONE STAGE COOL THERMOSTAT. CUT JUMPER Y1 TO Y2 FOR TWO STAGE COOL THERMOSTAT

FURNACE SIZE SELECTION CODE		
CODE ON 7 SEGMENT LED	FURNACE MODEL G71MPP	INDOOR BWR MOTOR HP SIZE
0.	-36B-070	1/2
1.	-36C-090	1/2
2.	-60C-090	1
3.	-60C-110	1
4.	-60D-135	1

4. L13 USED ON 1HP ONLY
5. FACTORY DEFAULT IS FOR A 2 STAGE THERMOSTAT
6. FIELD SUPPLIED ACC WIRE
7. USE COPPER CONDUCTORS ONLY
8. S113 IS USED ON 090, 110, AND 135 UNITS ONLY
9. THERMOSTAT CONNECTIONS ARE FOR NON-COMMUNICATING SYSTEM ONLY. REFER TO Icomfort INSTALLATION INSTRUCTIONS FOR COMMUNICATING SYSTEM
10. 24V POWER PROVIDED FOR OPTIONAL HUMIDIFIER DURING HEAT DEMAND
11. DH AND L TERMINALS ARE ONLY USED WITH Icomfort THERMOSTAT

LENNOX	HEATING UNITS-GAS
G71MPP-36B-070	G71MPP-60C-100
G71MPP-36C-090	G71MPP-60D-135
G71MPP-60C-090	
2 HEAT 2 COOL	
0909	Supersedes 535807W
New Form No.	537294-01

© 2009

Litho U.S.A.

WARNING-
ELECTRIC SHOCK HAZARD,CAN CAUSE INJURY OR DEATH.UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.

NOTE-
IF ANY WIRE IN THIS APPLIANCE IS REPLACED,IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS, AND TERMINATION.