


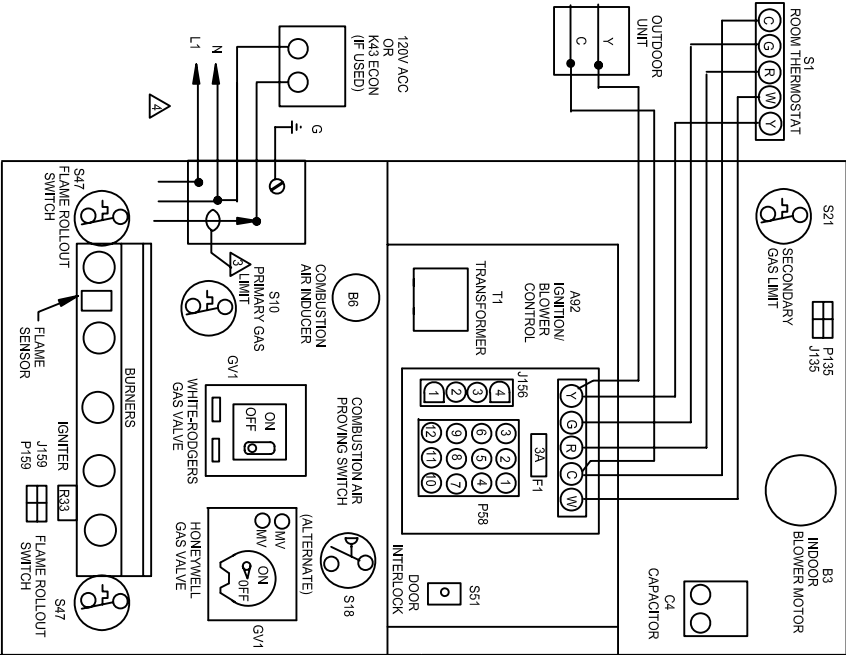

BLOWER SPEED CHART				
UNIT	COOL	HEAT	PARK	MOTOR SPEEDS AVAILABLE
24A-045		YELLOW	RED	3
36A-045		YELLOW	RED	4
36A-070		YELLOW	RED	4
36B-090		YELLOW	RED	4
48B-070	BLACK	YELLOW	RED	4
48C-090		YELLOW	RED	4
48C-110		YELLOW	RED	4
60C-110		YELLOW	RED	4
60D-135		BROWN	YELLOW	4
BLOWER SPEED SELECTION				LO
HI				4
SPEED TAPS	BLACK	BROWN	YELLOW	RED
	BLACK	BROWN	YELLOW	RED

THERMOSTAT HEAT ANTICIPATION SETTINGS		
65 AMP	60 AMP	30 AMP
HONEYWELL VALVE	WHITE-RODGERS VALVE	

JACKPLUG CHART	
J1P58	JACKPLUG-BURNER CONTROL
J1P59	JACKPLUG-OUTDOOR AIR INDUCER
J1P75	JACKPLUG-SECONDARY LIMIT
J1P56	JACKPLUG-INDUCER/IGNITER
J1P59	JACKPLUG-IGNITION


NOTE: IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING-INSULATION THICKNESS AND TERMINATION.

IMPORTANT: TO PREVENT MOTOR BURNOUT NEVER CONNECT MORE THAN ONE MOTOR LEAD TO ANY ONE CONNECTION.

PARK TERMINALS ARE UNPOWERED TERMINALS. EACH UNUSED MOTOR LEAD MUST BE WIRED TO A SEPARATE PARK TERMINAL.

FIELD SUPPLIED ACC. WIRE.

USE COPPER CONDUCTORS ONLY

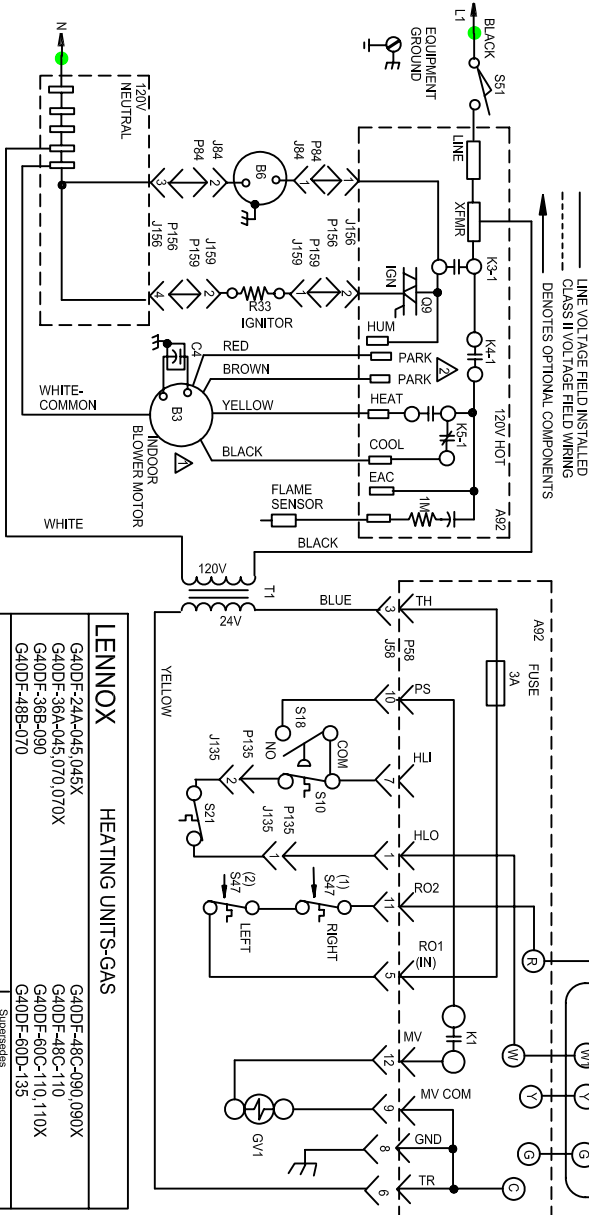

WARNING: ELECTRIC SHOCK HAZARD CAN CAUSE INJURY OR DEATH. UNIT MUST BE GROUNDED IN ACCORDANCE WITH NATIONAL AND LOCAL CODES.

LENNOX

HEATING UNITS-GAS

G40DF-24A-045, 045X	G40DF-48C-090, 090X
G40DF-36A-045, 070, 070X	G40DF-48C-110
G40DF-36B-090	G40DF-60C-110, 110X
G40DF-48B-070	G40DF-60D-135

Supersides

1009

535, 137W

New Form No.

535, 327W