



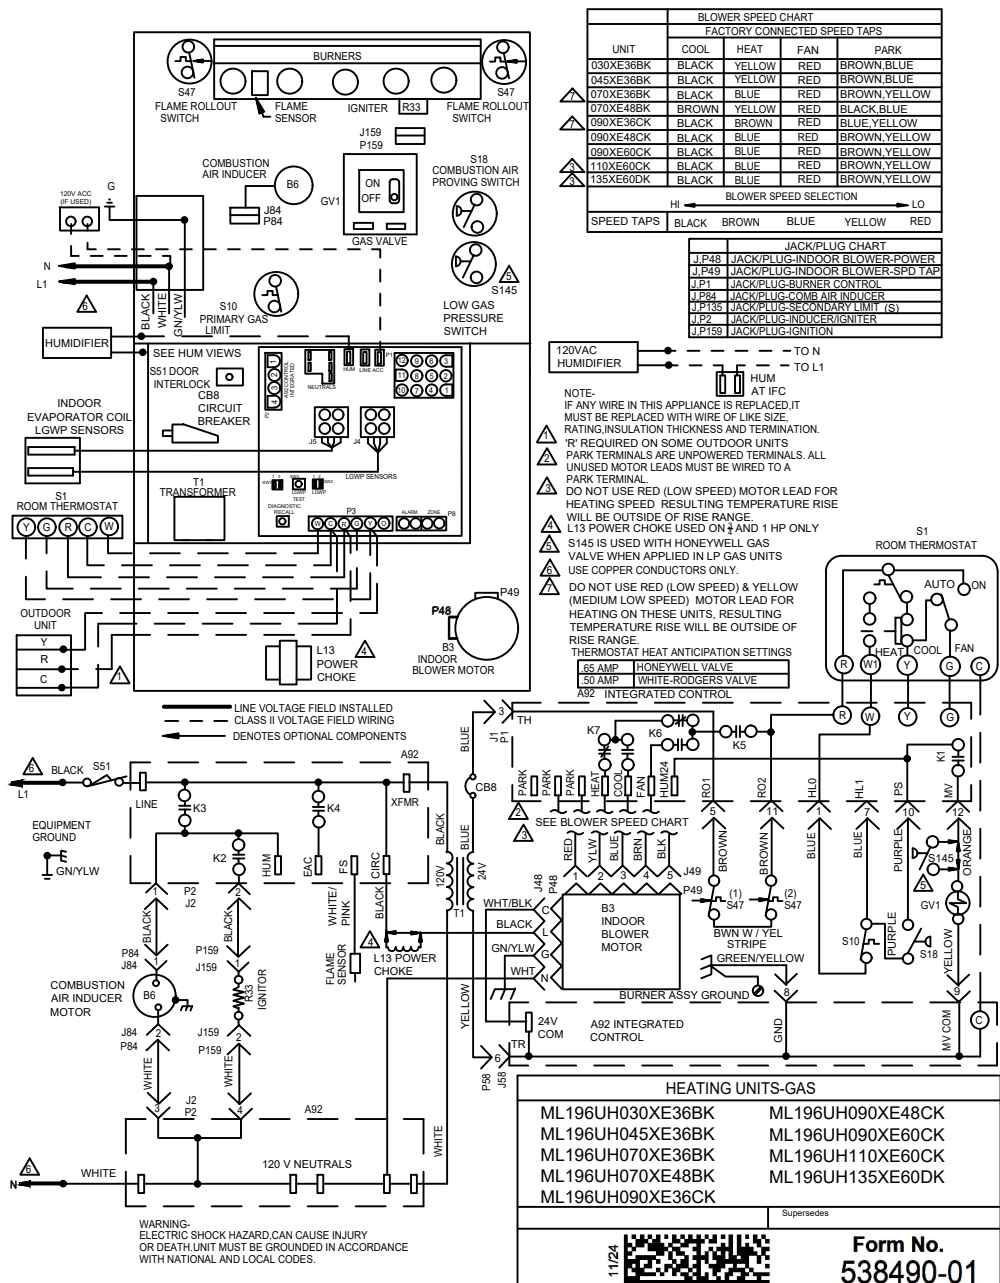

BLOWER SPEED CHART				
FACTORY CONNECTED SPEED TAPS				
UNIT	COOL	HEAT	FAN	PARK
030XE36BK	BLACK	YELLOW	RED	BROWN BLUE
045XE36BK	BLACK	YELLOW	RED	BROWN BLUE
070XE36BK	BLACK	BLUE	RED	BROWN YELLOW
070XE48BK	BROWN	YELLOW	RED	BLACK BLUE
090XE36CK	BLACK	BROWN	RED	BLUE YELLOW
090XE48CK	BLACK	BLUE	RED	BROWN YELLOW
090XE60CK	BLACK	BLUE	RED	BROWN YELLOW
110XE60CK	BLACK	BLUE	RED	BROWN YELLOW
135XE60CK	BLACK	BLUE	RED	BROWN YELLOW


JACK/PLUG CHART				
J.P48	JACK/PLUG-INDOOR BLOWER-POWER			
J.P49	JACK/PLUG-INDOOR BLOWER-SPD TAP			
J.P1	JACK/PLUG-BURNER CONTROL			
J.P84	JACK/PLUG-COMB AIR INDUCER			
J.P135	JACK/PLUG-SECONDARY LIMIT (S)			
J.P2	JACK/PLUG-INDOOR IGNITER			
J.P159	JACK/PLUG-IGNITION			



NOTE:
IF ANY WIRE IN THIS APPLIANCE IS REPLACED, IT MUST BE REPLACED WITH WIRE OF LIKE SIZE, RATING, INSULATION THICKNESS AND TERMINATION.
R' REQUIRED ON SOME OUTDOOR UNITS. ALL UNUSED MOTOR LEADS MUST BE WIRED TO A PARK TERMINAL.
DO NOT USE RED (LOW SPEED) MOTOR LEAD FOR HEATING SPEED. RESULTING TEMPERATURE RISE WILL BE OUTSIDE OF RISE RANGE.
L13 POWER CHOKES USED ON 1/2 AND 1 HP ONLY.
S145 IS USED WITH HONEYWELL GAS VALVE WHEN APPLIED IN LP GAS UNITS. USE COPPER CONDUCTORS ONLY.
DO NOT USE RED (LOW SPEED) & YELLOW (MEDIUM LOW SPEED) MOTOR LEAD FOR HEATING ON THESE UNITS. RESULTING TEMPERATURE RISE WILL BE OUTSIDE OF RISE RANGE.

TERMOSTAT HEAT ANTICIPATION SETTINGS

65 AMP	HONEYWELL VALVE
50 AMP	WHITE-RODGERS VALVE
A92	INTEGRATED CONTROL

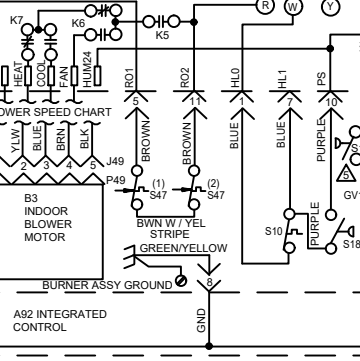

HEATING UNITS-GAS	
ML196UH030XE36BK	ML196UH090XE48CK
ML196UH045XE36BK	ML196UH090XE60CK
ML196UH070XE36BK	ML196UH110XE60CK
ML196UH070XE48BK	ML196UH135XE60DK
ML196UH090XE36CK	

Supersedes

Form No. 538490-01

CUT SIZE: 6" WIDE x 7-1/2" Tall