



Multi Wi-Fi Kit

User & installation manual

VSTAT07P-1

- Thank you for purchasing this Lennox Product.
- Before operating this unit, please read this manual carefully and retain it for future reference.





Contents

Safety precautions	3
Checks before Installation	5
Accessories	5
External Dimensions	5
Installing the Multi Wi-Fi Kit	6
Multi Wi-Fi Kit installation	6
Setting the indoor unit tenants for each user	12
Checking the Multi Wi-Fi Kit	15
Initializing the user data	16
Updating with a Micro SD card	17
Turning off the Wi-Fi	17
Turning on the Wi-Fi	17
SmartThings app	18
Checking the power connections	18
Setting up and connecting to a Wi-Fi access point using your smartphone	18
Downloading the SmartThings app and registering your Samsung account	19
Connecting the SmartThings app to your product	19
Troubleshooting	21
Specifications	23
Open Source Announcement	23
Regulatory Notice	24







Safety precautions

California Proposition 65 Warning (US)

 **WARNING** Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

This installation manual explains how to install a Wi-Fi Kit to an indoor unit of Lennox.
Read the installation manual thoroughly before installing the Wi-Fi Kit.
(Refer to the appropriate manual for installing product or other optional parts.)

 WARNING	Hazards or unsafe practices that may result in severe personal injury or death.
 CAUTION	Hazards or unsafe practices that may result in minor personal injury or property damage.

WARNING

- Contact service center for installation.
 - There is a risk of product malfunction, water leakage, electric shock or fire.
- Install the Wi-Fi Kit securely in a place that can withstand the weight of the product.
 - If the installation location is not strong enough, Wi-Fi Kit may fall and be damaged.
- Connect the power with rated voltage when installing.
 - If not, there is risk of fire or damage to the Wi-Fi Kit.
- Do not attempt to move or re-install the Wi-Fi Kit that is already installed.
 - There is risk of electric shock and fire.
- Do not attempt to modify or repair the Wi-Fi Kit on your own.
 - There is potential risk of product damage, electric shock or fire. When repair is needed, consult service center.
- Check if the installation was done properly according to the installation manual.
 - If the Wi-Fi Kit is installed incorrectly, there is risk of electric shock or fire.
- Make sure that all wiring work is done by a qualified person complying with regional standards and instructions in this manual.
 - If the installation is done by unqualified person, there is risk of product malfunction, electric shock or fire caused by incorrect installation.
- Contact the service center if you need to dispose the Wi-Fi Kit.





Safety precautions

CAUTION







- Do not install the product in a place where it is or might be exposed to inflammable gas leakage.
 - There is risk of fire or explosion.
- Do not install the product in a place where it will be exposed to oil or vapor etc.
 - If the product is used in a place where it is exposed to oil, vapor or sulphur dioxide, parts of the product may get damaged or product may function abnormally.
- Make sure that water does not get into the Wi-Fi Kit.
 - There is risk of electric shock and fire.
- Make sure there is no tension to the cable during installation.
 - Cable may get cut and cause fire.
- Install the product in a place with temperature between 32 ~ 102 °F (0 ~ 39 °C) with no direct sunlight.
 - If not, there is risk of electric shock or abnormal operation.
- Do not install the product in a place where special spray or acid/alkali solution is used.
 - There is risk of electric shock or abnormal operation.
- Do not press the buttons with sharp objects.
 - There is risk of electric shock or damaging the parts.
- Do not connect the power cable to the communication cable terminal.
 - There is risk of fire.
- When installing the product in hospitals or other places, make sure that the product does not interrupt with other products.
 - Abnormal operation may occur.
- This wireless device has a possibility of radio wave interference during operation.





Checks before Installation

Accessories

Multi Wi-Fi Kit	Cable ties (2)	Cable clamps (3)	M4×16 screws (5)
			
User & installation manual	U-type terminals (6)		
			




CAUTION

- The Wi-Fi Kit must be installed by a certified technician.
- Before installation, be sure to cut off power.
- Follow applicable rules for electrical wiring. Make sure that the cables of the Wi-Fi Kit are installed inside a wall or covered to avoid being touched by the occupant.

External Dimensions

[Unit : inch (mm)]

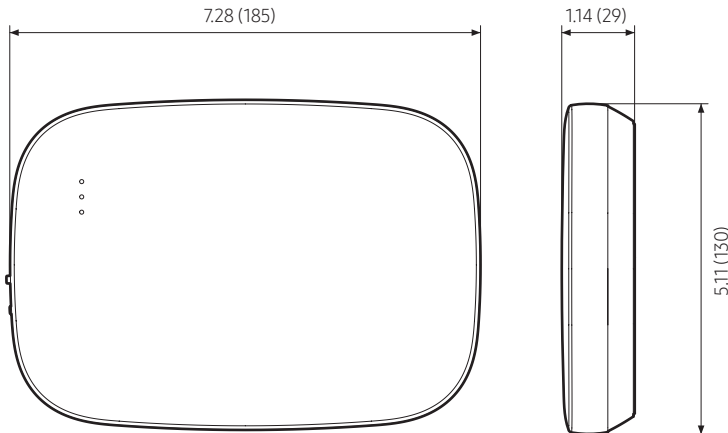





Installing the Multi Wi-Fi Kit

Multi Wi-Fi Kit installation



- To ensure smooth operation, there should be no obstacle between the Wi-Fi Kit and wireless router that may interfere with communication. When the Wi-Fi Kit is too far from a router or there are potentially interfering elements between them, it may cause problems with the performance of the Wi-Fi Kit that cannot be resolved by customer services.
- Place the Wi-Fi Kit in an area where you can easily press the AP button for device verification.
- Do not install the Wi-Fi Kit in an area where it may be exposed to moisture or impact.
- Operating temperature: 32 ~ 104 °F (0 ~ 40 °C), Operating humidity: 30-90 % (relative)


1. Use a flathead screwdriver to turn each of the square holes at the lower part of the Wi-Fi Kit and remove the back cover.

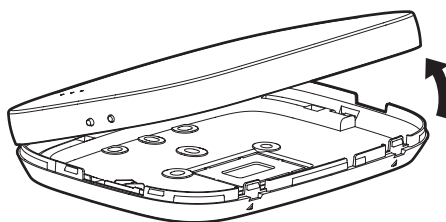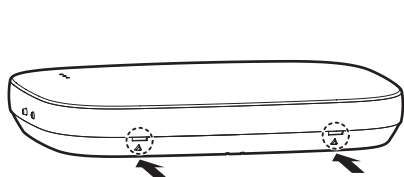



- ※ Push both latches at the same time.



- Use a flathead screwdriver to turn the rectangular hole at the upper part of the fixing hook for easy removal.




2. Arrange the power and communication cables along the back cover.

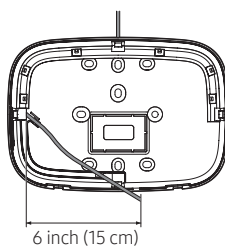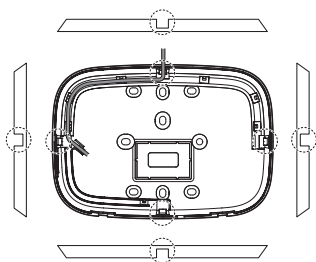

◁Wires installed on the wall▷

If necessary, remove this part to secure more space for wiring.

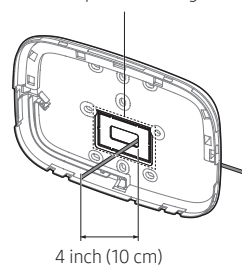

◁Wires installed in the wall▷






- Use two or more screws to fix the back cover to the wall. Connect the power cables (V1, V2) and communication cables (F1, F2) to the terminals on the back of the front cover while adjusting to a suitable length.
- When connecting the power cables to V1 and V2, fasten the PCB terminal screws (CN5) to a torque of 6 N·cm or less.

Screw size: M3 x 6



NOTE

- You can connect up to 16 indoor units to a Wi-Fi Kit.

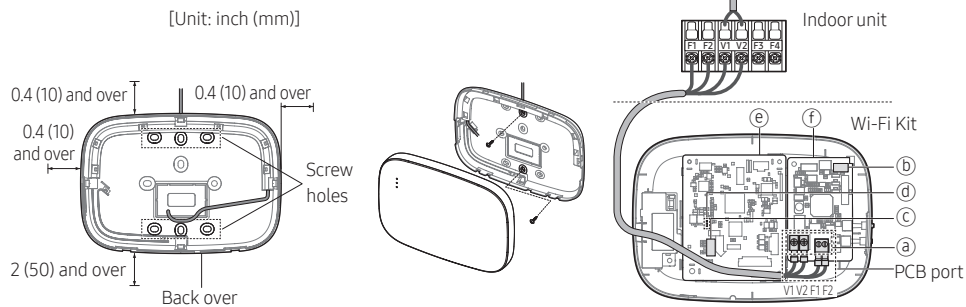

※ Be sure to secure space of at least 0.4 inch (10 mm) (up/right/left) and 2 inch (50 mm) (down) around the back cover before fixing the back cover on the wall.

※ Fix the screws to the screw holes.

※ Do not over-tighten the PCB terminal.


Item	Contents	Item	Contents
(a)	Power/communication terminals	(d)	LED
(b)	Tracking/Reset button	(e)	Network PBA
(c)	Micro SD card slot	(f)	Interface module PBA

- Assemble the Wi-Fi Kit again.



NOTE

- Insert the front cover to the upper grooves as shown in the figure. After assembly, make sure that there is no gap between the covers.







Installing the Multi Wi-Fi Kit


Wi-Fi Kit wiring diagram

1) Connecting to a single outdoor unit (F1-F2)

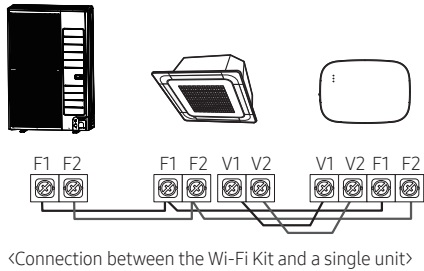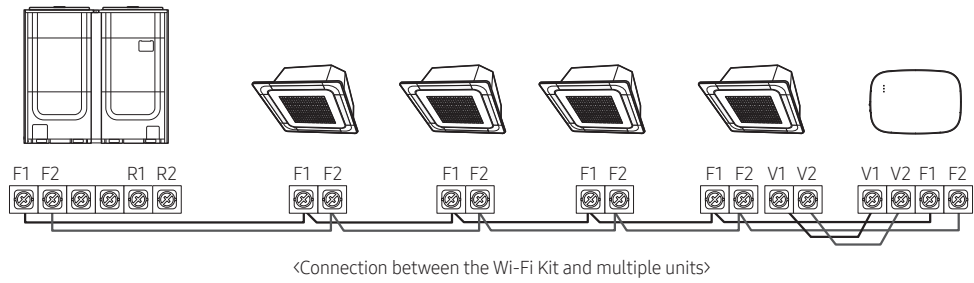



2) Connecting to multiple outdoor units (R1-R2)

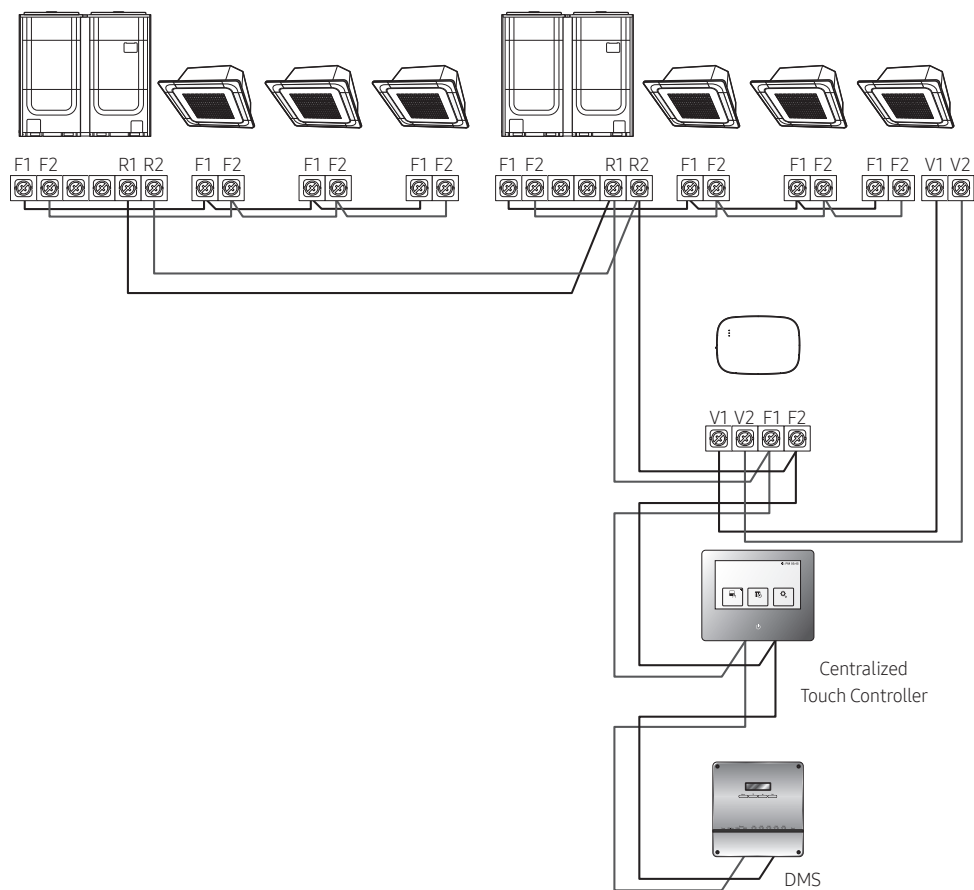

ENGLISH

- Connect R1 and R2 on the outdoor unit to F1 and F2 of the Wi-Fi Kit.
- Connect the power cables to V1 and V2 of the indoor unit.
- Other controllers (e.g. Centralized Touch Controller, DMS) can be installed together.




- You can connect up to 16 indoor and outdoor units.





Installing the Multi Wi-Fi Kit

- ※ For indoor units without V1 and V2 connection terminals, use the external control line 2 for SUB PBA (inside the indoor unit) for 12VDC power supply.

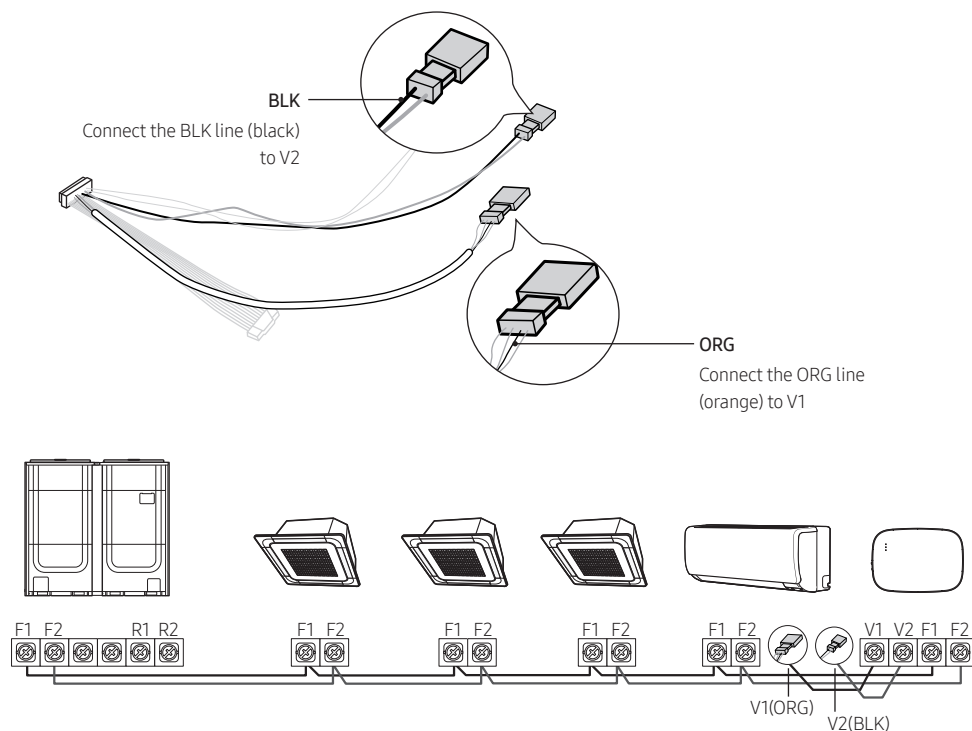


<Connection between the Wi-Fi Kit to a system without V1 and V2>



CAUTION

- When installing the Wi-Fi Kit, use proper electrical cables considering the size of the wiring hole on the wall.
- Upon wiring, use the provided U-type terminals (#16-22). When there are no terminals provided or #24 is used, you can use any U-type terminals that meet the specifications.
- Wi-Fi Kit communication and power cables
 - When installing the Wi-Fi Kit, follow the wiring specifications for the U-type terminal.
 - When installing the Wi-Fi Kit with a 4-wire PVC cable, first peel off the PVC edge (approx. 11.8 inch (30 cm)). (AWG22 recommended)
- U-type terminal specifications for the Wi-Fi Kit PCB

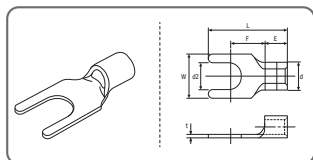

Cable range		Rated size	Stud size	Default size [inch (mm)]					
AWG	inch² (mm²)	inch² (mm²)	inch (mm)	t	d	E	F	W	L
24 - 16	0.0003	0.0023 (15)	0.1181	0.0236	0.0472	0.1574	0.1968	0.1968	0.4724
	- 0.0025 (0.25 - 1.65)		- 0.1259 (3 - 3.2)	- 0.0314 (0.6 - 0.8)	- 0.0984 (1.2 - 2.5)	- 0.2362 (4 - 6)	- 0.3543 (5 - 9)	- 0.2755 (5 - 7)	- 0.8346 (12 - 21.2)

Max. length for communication/power cables: 164 ft (50 m)

- Fasten the PCB terminal with fixing screws to a torque of 0.04 lbf-ft (6 N-cm) or less. When you fasten the screw to a torque over 0.04 lbf-ft (6 N-cm), it may cause damage to the screw thread.






6. Activate the Wi-Fi Kit.

- When power is supplied, all indicators on the Wi-Fi Kit illuminate until the system boots completely.
- After the system operates, tracking is performed automatically.

7. Tracking

- ※ Tracking: The Wi-Fi Kit detects connected indoor unit(s) and the indoor unit(s) detects the connection to the Wi-Fi Kit. Tracking is required to monitor or control the system air conditioner using the Wi-Fi Kit.
- The Wi-Fi Kit automatically performs tracking when activated. The () () indicators on the Wi-Fi Kit blink while in tracking.
- When any change in the installation of indoor and outdoor units occurs, manually run the tracking by pressing the (SW3, ) button inside the Wi-Fi Kit.



NOTE

- To control indoor units by using a mobile phone, wait until the tracking is completed and then connect the Wi-Fi Kit to a wireless router.
- The (AP) indicator does not turn off until the Wi-Fi Kit is connected to a wireless router after tracking.





Installing the Multi Wi-Fi Kit


Setting the indoor unit tenants for each user



NOTE

- The multi-tenants feature allows you to control and monitor the indoor units with the group channel address (RMC1) that is the same as that of the Wi-Fi Kit.

In order to selectively use the indoor units connected to a single outdoor unit by multiple users, you can install multiple Wi-Fi Kits and group the indoor units by setting the group channel address (RMC1) for each Wi-Fi Kit.

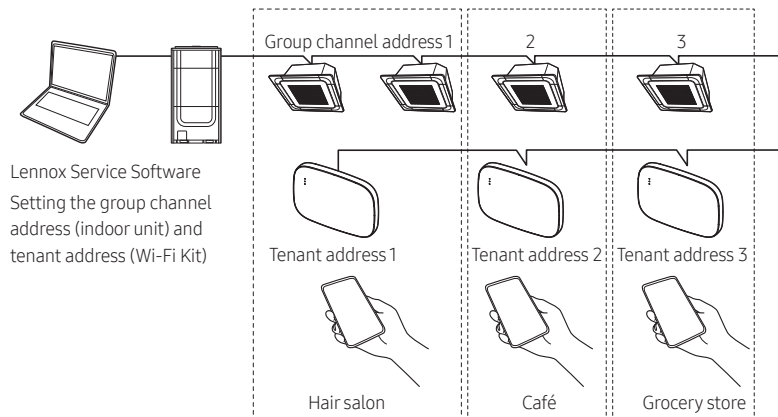

1. Install a separate Wi-Fi kit for each group. Example: if you have 3 separate groups/tenants, you must install 3 Wi-Fi kits.

- You can connect up to 16 Wi-Fi Kits to a single outdoor unit.



CAUTION

- When installing multiple Wi-Fi Kits, connect and perform tracking one by one.
(For example, connect and perform tracking on Wi-Fi Kit #1 → connect and perform tracking on Wi-Fi Kit #2 → ... → connect and perform tracking on Wi-Fi Kit #16.)
- If you connect multiple Wi-Fi Kits and perform tracking on them at the same time, you will not get reliable results.

- A single Wi-Fi Kit can be connected to 16 indoor units at most.




NOTE

- You can rename each Wi-Fi Kit via a smartphone.
However, you cannot change the names for other smart phones connected to the same Wi-Fi adapter.






2. Use the Wi-Fi Kit settings on the dedicated installation program (Lennox Service Software) to set the tenant addresses for each Wi-Fi Kit.

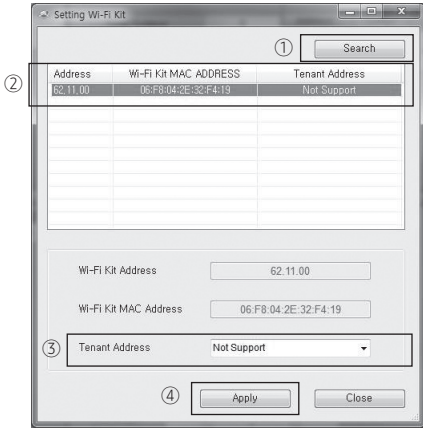

- 1) Press the [Search] button to find the connected Wi-Fi Kits.
- 2) One by one, select the MAC address for each Wi-Fi Kit from the list.
 - You can see the MAC address on the label inside the Wi-Fi Kit.

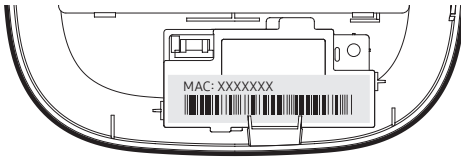



Installing the Multi Wi-Fi Kit

3) Set the tenant address. (Unavailable, 0-F)

- Seeing the table below, enter the tenant address on the Lennox Service Software.

Tenant address	Group channel address for the indoor units controlled by a Wi-Fi Kit
Unavailable	Controls all indoor units connected to the outdoor unit
0	Controls the indoor units with the group channel address "0"
1	Controls the indoor units with the group channel address "1"
2	Controls the indoor units with the group channel address "2"
3	Controls the indoor units with the group channel address "3"
4	Controls the indoor units with the group channel address "4"
5	Controls the indoor units with the group channel address "5"
6	Controls the indoor units with the group channel address "6"
7	Controls the indoor units with the group channel address "7"
8	Controls the indoor units with the group channel address "8"
9	Controls the indoor units with the group channel address "9"
A	Controls the indoor units with the group channel address "A"
B	Controls the indoor units with the group channel address "B"
C	Controls the indoor units with the group channel address "C"
D	Controls the indoor units with the group channel address "D"
E	Controls the indoor units with the group channel address "E"
F	Controls the indoor units with the group channel address "F"

- e.g. When you set the tenant address of a Wi-Fi Kit to 2 through the Lennox Service Software, the Wi-Fi Kit can control and monitor the indoor units with the RMC1 set as 2.

4) Select the [Apply] button to save the specified tenant address for the Wi-Fi Kit.




NOTE

- To set the group channel address for indoor units, see "Setting the indoor unit address" in Installation Manual of the indoor unit.
[SEG9: 1 (for RMC address mode), SEG11: RMC1 address setting]
- To set the tenant address upon request, contact the Lennox service center.
- To control all indoor units with different tenant addresses, make sure that all the Wi-Fi Kits are registered to the smartphone.
- When using the multi-tenants feature for Wi-Fi Kits, the upper-level controllers (Centralized Touch Controller, DMS) other than the OnOff controller can be installed at the same time.





Checking the Multi Wi-Fi Kit

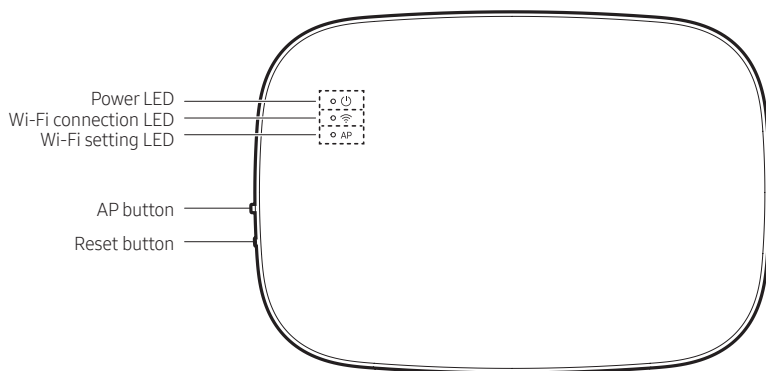

<Front panel of the Wi-Fi Kit>

Items on the LED display

Item	LED indication	Power supply	Wi-Fi connection	Wi-Fi setting
1	Initialized	On	On	On
2	General	On	On	Off
3	AP connected, Internet connection incomplete	On	Blinking	Off
4	Tracking completed, AP connection incomplete	On	Off	Off
5	Wi-Fi modem malfunctioning	Blinking	Blinking	Blinking
6	Searching AP (AP mode)	On	Off	On
7	Tracking units	Blinking	Blinking	Off
8	No unit tracked	Blinking	Off	Off
9	Inspection of the network PBA required	On	Blinking	Blinking
10	User authentication required (AP mode)	On	Off	Blinking
11	Downloading	Off	On	Off
12	Rescue mode	Blinking	On	Blinking
13	Wi-Fi Off	Off	Blinking	Off

* If the "Rescue mode" indication appears on the LED:

- Reset the Wi-Fi Kit using the "Reset" button, and check if "Rescue mode" turns off.
- If "Rescue mode" persists even though you tried resetting the Wi-Fi kit several times, contact a service center.





Installing the Multi Wi-Fi Kit

LED display during tracking

- ▶ If communication is normal but there are only the indoor units with the central control disabled.
 - Reset the central control option on the indoor units. When the central control is disabled, the indoor units cannot be controlled with the Wi-Fi kit.

Power LED	Wi-Fi connection LED	Wi-Fi setting LED	Time	Status
Blinking	Blinking	Off	About 10 seconds	Tracking
Off	On (Green)	Off	Alternating every 10 seconds	Only the units with the central control disabled
On	On (Yellow)	Off		
Blinking	Blinking	Off	About 10 seconds	Tracking

- Setting the option code for the Wi-Fi Kit
 - After installing the Wi-Fi Kit on the indoor unit, be sure to change the central control option (SEG5) as follows.
 - Set the option code to [0D2051] as shown below.

Function	Page		Mode		Option mode to change		Tens position of the option SEG		Units position of the option SEG		New value	
Indicator on the remote control												
Indication and details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
	0		D		Option mode	2	Tens position of SEG	0	Units position of SEG	5	New value	1

- ▶ If no indoor unit is tracked
 - Check whether the communication cables between indoor units and the Wi-Fi Kit are connected properly.

Power LED	Wi-Fi connection LED	Wi-Fi setting LED	Time	Status
Blinking	Blinking	Off	About 10 seconds	Tracking
Blinking	Off	Off	About 10 seconds	No unit tracked. Need to check communication
Blinking	Blinking	Off	About 10 seconds	Tracking

Initializing the user data

- To initialize the user data on a Wi-Fi Kit, press the (SW3) button inside the Wi-Fi Kit for 5 seconds. All the indicators illuminate and the user data is deleted.






Updating with a Micro SD card



- Updating with a Micro SD card is only for installer.

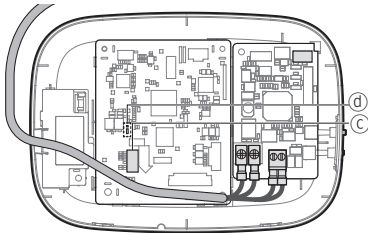

Type	Capacity	File system
Micro SD	Max 4GB	FAT16
Micro SDHC	Max 32GB	FAT32

1. Create a folder named "update" in the Micro SD card. Copy the latest software image and paste it into the folder created in the Micro SD card.



- Be sure to format the Micro SD card using FAT16 or FAT32 before creating the "update" folder.

2. Insert the Micro SD card into the slot of the Wi-Fi Kit.
3. Press the [Reset] button on the side of the Wi-Fi Kit.
4. The indicator (C) on the Wi-Fi Kit blinks every 2 seconds during update.
 - Once the update has been successful, the indicator promptly turns on and then turns off longer. (On: 0.2 second, Off: 2 seconds)
 - The indicator blinks every 0.2 second when the update was not completed.
5. When the update has completed normally, remove the Micro SD card and then press the [Reset] button.
6. Restarting the Wi-Fi Kit after an update failure will restore the software to the previous version. When the update failure persists, follow the instructions below:
 - File checking: Change the update image (file).
 - Micro SD card checking: Replace the Micro SD card.
 - PBA checking: Replace the network PBA.

Turning off the Wi-Fi

- Press the AP button for 10 seconds. The Wi-Fi LED blinks and then the Wi-Fi function turns off.



- When the Wi-Fi function turns off, you cannot use all features of the Wi-Fi kit.

Turning on the Wi-Fi

- Press the AP button for 10 seconds with the Wi-Fi function turned off. All LED indicators light and then all features of the Wi-Fi kit are activated.





SmartThings app


To use the SmartThings app, connect the product to the network in the sequence described below. The images shown may differ depending on your smartphone model, OS version and manufacturer. You need to set up the Wi-Fi access point only when connecting the product to a Wi-Fi network. Once the product is connected, you can use the SmartThings app via Wi-Fi, 3G, LTE or more wireless networks.

Checking the power connections


Check if the power is connected to the product and the access point.

Setting up and connecting to a Wi-Fi access point using your smartphone

1. To connect the product to a Wi-Fi network, turn on Wi-Fi at "Settings > Wi-Fi", and then select the access point to connect to
 - Only alphanumeric characters are supported for wireless access point names (SSIDs). If an SSID has a special character, rename it before connecting to it.

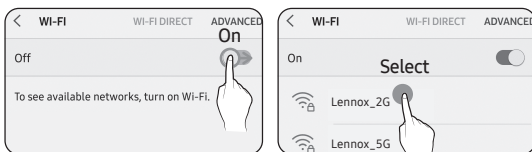

2. Turning off "SMART NETWORK SWITCH" at "Settings > Wi-Fi" on your Smartphone
 - If "SMART NETWORK SWITCH" or "Adaptive Wi-Fi" is turned on, you cannot connect to the network. Be sure to turn off these functions before connecting to the network.

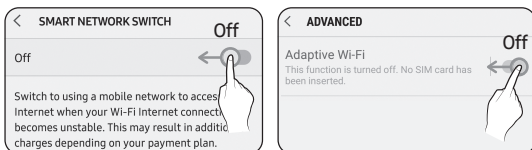

NOTE

- The setup may differ depending on your smartphone model, OS version and manufacturer.

3. Checking the Internet connectivity

- After connecting to Wi-Fi, check that your smartphone is connected to the Internet.



NOTE

- A firewall may prevent your smartphone from connecting to the Internet. In this case, contact your Internet service provider for troubleshooting.





Downloading the SmartThings app and registering your Samsung account

1. Downloading the SmartThings app

- Search for "SmartThings" on the Play Store or App Store, and download the SmartThings app to your smartphone.
- If the SmartThings app is already installed on your smartphone, update it to the latest version.



NOTE

- The supporting software version of the SmartThings app is subject to change according to the OS supporting policy the manufacturer provides.
In addition, as for the SmartThings app or the functions that the app supports, the new application update policy on the existing OS version can be suspended due to usability or security reasons.
- The SmartThings app is subject to change without notice to improve usability or performance.
As the mobile phone OS version is updated every year, SmartThings is also updated continually according to the latest OS.
- If you have inquiries regarding the items mentioned above, please contact us at st.service@samsung.com.

2. Registering your Samsung account

- A Samsung account is required to use the SmartThings app. To create your Samsung account and log in to your account, follow the instructions displayed on the SmartThings app.
You do not need to install an additional app.




NOTE

- If you already have a Samsung account, log in to the account. When your smartphone is a Samsung device and you have a Samsung account, your smartphone is automatically logged in to your account.
- If you log in from a smartphone produced for a different country, you need to log in with its country code when you create your Samsung account, and the SmartThings app may not be used on some smartphones.

Connecting the SmartThings app to your product

1. Selecting the product to connect to


- 1) After the Wi-Fi kit tracking is complete, run the SmartThings app.
- 2) After the SmartThings app is started, select "ADD NOW" when a pop-up window saying that a product to connect to is found appears.

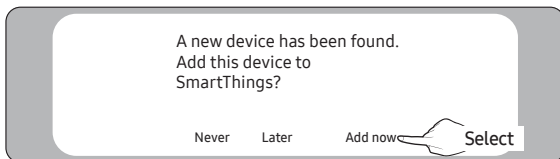




SmartThings app

3) If the pop-up window does not appear, select "+", "Add" and then "Device".

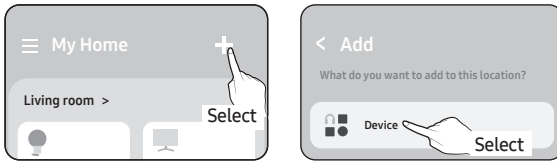

You can add a product you want to connect to by selecting it manually or by selecting "Scan nearby".

- Select manually: Partner devices > Lennox
- Scan nearby: Lennox System A/C

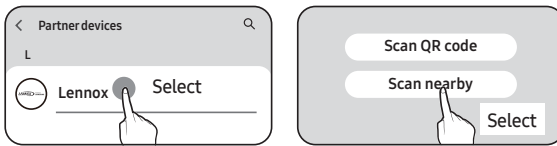

2. Connecting the SmartThings app to your product

- Follow the instructions displayed on the SmartThings app to connect to your product.
- For information on how to use the SmartThings app, select the How To menu on the app.



NOTE




- If any pop-up window appears on the top of the smartphone while connecting to your product, do not select it.
- If a pop-up window saying that the device is already registered appears during connecting to your product, get permission using "REQUEST PERMISSION" from a user already connected to the product, or create a new account using "REGISTER MY ACCOUNT" to independently connect to the product.
- If a Samsung account-related country error occurs while connecting to your product, log out of your current Samsung account, log in to your previous Samsung account, and then delete all devices that have been connected previously. Then, log in to your current Samsung account again, and configure the settings.
- If a failure message appears while adding a device, see "Setting up and connecting to a Wi-Fi access point using your smartphone" on page 18. The connection may fail temporarily due to an installation location problem of the access point or other problems.
- If the number of added indoor units is incorrect after adding devices, run the tracking again and then try adding the devices again.
- For security protocols for wireless/wired access points, WPA-PSK and WPA2-PSK are recommended. For authentication methods, AES is recommended. New Wi-Fi authentication specifications and Wi-Fi non-standard authentication methods are not supported.
- If your Internet service provider has permanently registered the MAC address (a unique identification number) of your PC or modem, you may not be able to connect your product to the Internet. Contact your Internet service provider and ask how to connect devices other than your PC (such as an air conditioner and an air purifier) to the Internet.





Troubleshooting

Check the following before requesting a service from the Service Center.

Symptom		Measure
The installed SmartThings app cannot access the product.		<ul style="list-style-type: none">• Make sure you have connected the product to a wireless router.
I cannot log in with my Samsung account.		<ul style="list-style-type: none">• Try recovering your ID and password from the Samsung account page.
Adding device(s)	A failure message appears while adding devices.	<ul style="list-style-type: none">• This may fail temporarily due to the distance from the router or some interferences. Try again later.
	I found a failure message in 0 to 1 percent of device addition process.	<ul style="list-style-type: none">• You can add device units only in AP search state. Check that both the power LED and Wi-Fi setup LED are turned on. Otherwise, press and hold the AP button for over 5 seconds to activate the AP search.• You cannot add any device without deleting it once the device has already been added to the SmartThings app. To add the connected device again, first remove it and then proceed with the process.
	I found a failure message in 99 percent of device addition process.	<ul style="list-style-type: none">• If you are using a Samsung smartphone, the server may not be connected temporarily. Turn off and on the power of the Wi-Fi Kit, launch the SmartThings app again, and then try adding a device again.• If your phone is not a Samsung product, check that you have entered a wrong Wi-Fi password. Try adding devices again.
	The app displays an authorization failure before pressing the user agreement button.	<ul style="list-style-type: none">• Check whether there are any Wi-Fi Kits already added to the SmartThings app. When there are devices added, first remove them and try again.
	The app displays an authorization failure on the user agreement screen.	<ul style="list-style-type: none">• You must press the AP button within 1 minute. Try adding devices again.
	The screen requests to initialize the user account.	<ul style="list-style-type: none">• This happens when the user has already added devices. Follow the instructions provided in the SmartThings app.
The power LED and Wi-Fi connection LED are blinking.		<ul style="list-style-type: none">• The communication between the Wi-Fi Kit and indoor/outdoor units is unstable. Check the communication cables for indoor and outdoor units or check the central control option for indoor units.
After adding a device, the SmartThings app displays the disconnection event.		<ul style="list-style-type: none">• This happens when a device is being added to the server or it is temporarily disconnected from the router. End the SmartThings app and then launch it again.
The controls of the SmartThings app do not operate.	Are all three LED indicators on the Wi-Fi Kit turned on?	<ul style="list-style-type: none">• Reset the Wi-Fi Kit and then check it again.
	Does only  appear on the display of the Wi-Fi Kit?	<ul style="list-style-type: none">• Make sure you have entered the correct Wi-Fi password when adding a device.• Check the router status.
	Is the  indicator blinking?	<ul style="list-style-type: none">• Check that the wireless router is connected to the Internet.
	Are all LED indicators on the Wi-Fi Kit blinking?	<ul style="list-style-type: none">• This indicates a Wi-Fi Kit malfunction. Contact the Lennox service center.
	Is the  indicator blinking?	<ul style="list-style-type: none">• The Wi-Fi Kit is not connected to the indoor unit(s) normally. Contact the Lennox service center.





Troubleshooting

Symptom	Measure
The SmartThings app displays the error number, 628.	<ul style="list-style-type: none">• The communication error is encountered between the indoor unit and Wi-Fi kit. Check the communication cables (F1/F2).• After installing the Wi-Fi kit, the addresses of the indoor/outdoor units may be changed. If the problem persists after checking the communication cable, keep the following steps:<ol style="list-style-type: none">1. Remove the device from the SmartThings app.2. Initialise the user data. Press and hold the Tracking/Reset button on the Wi-Fi kit for 5 seconds until three LEDs light.3. Register the device again on the SmartThings app.
I have a multi-unit HVAC system, but I can only see either cooling or heating option on the indoor unit.	<ul style="list-style-type: none">• To avoid mixed control, the indoor unit options are automatically restricted to the outdoor unit's settings.※ Mixed control: Different modes are available for each indoor unit.<ol style="list-style-type: none">1. To select a mode other than the current operation mode, turn off the indoor unit to display all operation modes to select.2. When there is a main indoor unit, change the operation mode of the main unit.
The LED indicator remains in its initial state. (The LED state changes within 1 minute.)	<ol style="list-style-type: none">1. Check the connection cable between the network PBA and the Interface module PBA.2. Even though the connection has no problem but a problem persists, replace the Wi-Fi Kit.
For a WindFree indoor unit connected to the Wi-Fi kit, the SmartThings app does not display its WindFree function.	<ul style="list-style-type: none">• When you install the Wi-Fi kit and register the device with the indoor unit's panel not assembled, the WindFree function is not recognized. <p>Keep the following steps:</p> <ol style="list-style-type: none">1. Remove the device from the SmartThings app.2. Initialise the user data. Press and hold the Tracking/Reset button on the Wi-Fi kit for 5 seconds until three LEDs light.3. Register the device again on the SmartThings app.
All indoor units installed do not appear on the SmartThings app.	<ul style="list-style-type: none">• When the central control is disabled, the indoor unit does not appear.• When you install the Wi-Fi kit with indoor units installed partially, the indoor units installed later do not appear. <p>Keep the following steps:</p> <ol style="list-style-type: none">1. Check the central control option on the indoor units.2. Remove the device from the SmartThings app.3. Initialise the user data. Press and hold the Tracking/Reset button on the Wi-Fi kit for 5 seconds until three LEDs light.4. Register the device again on the SmartThings app.





Specifications

Wi-Fi	
Frequency	Transmitter Power (Max)
2.4 GHz	19.5 dBm
5 GHz	17.5 dBm

* The product supports the IEEE802.11 a/b/g/n/ac, Soft-AP communication protocol.
(Lennox recommends IEEE802.11n.)

Open Source Announcement

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by sending an email to <mailto:oss.request@samsung.com>.

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/WIFIKIT_R18_TZ4/seq/0 leads to the download page of the source code made available and open source license information as related to this product. This offer is valid to anyone in receipt of this information.





Regulatory Notice

FCC Notice

FCC CAUTION:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This appliance contains the transmitter module.

This device complies with Part 15 of FCC Rules. Operation is Subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received including interference that cause undesired operation.

For products available in the US and Canadian markets, only channels 1~11 are available.

You cannot select other channels.

FCC STATEMENT:

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet that is on a different circuit than the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and its antennas must not be co-located or operated in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.



FCC Compliance Statement (applicable models only)

Model	VSTAT07P-1
Kind of product	- (The symbol “*” can be any alphanumeric character.)
Responsible Party - U.S. Contact Information	Lennox International 2140 Lake Park Blvd, Richardson, TX 75080 Tel: 800-953-6669

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

IC Notice

This appliance contains the transmitter module.
The term “IC” before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions : (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
This Class B digital apparatus complies with Canadian ICES-003.
For products available in the US and Canadian markets, only channels 1~11 are available.
You cannot select other channels.

IC RADIATION EXPOSURE STATEMENT:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and it’s antennas must not be co-located or operated in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

SAVE THESE INSTRUCTIONS



QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
AMERICA	800-953-6669	www.lennox.com for homeowners, www.lennoxpros.com for dealer/contractor

