

# ML196UHE

**MERIT® SERIES** 

# **Upflow / Horizontal - Constant Torque Blower - 60Hz**

RESIDENTIAL PRODUCT SPECIFICATIONS

MODEL NUMBER IDENTIFICATION

Bulletin No. 210909 July 2024 Supersedes all previous versions



090 = 88,000 Btuh

110 = 110,000 Btuh 135 = 132,000 Btuh






**AFUE - 96%** 

Input - 30,000 to 132,000 Btuh Nominal Add-on Cooling - 1.5 to 5 Tons

X = Units meet California Nitrogen Oxides Standard (40 ng/J)

<sup>1</sup> Indoor coils with the same letter designation physically matches the furnace.

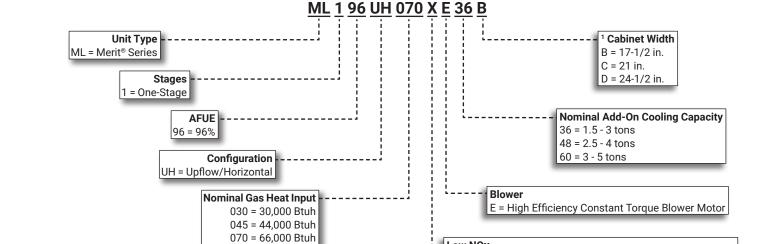

Low NOx

# **FEATURE HIGHLIGHTS**

- 1. Lennox Duralok Plus™ Heat Exchanger
- 2. Secondary Heat Exchanger
- 3. Inshot Burners
- 4. Gas Control Valve
- 5. Combustion Air Inducer
- 6. Flame Rollout Switch
- 7. SureLight® Integrated Furnace Control
- 8. Power Saver™ Constant Torque Blower
- 9. Insulated Cabinet
- 10. Safety Interlock Switch
- 11. Gas Piping And Electrical Inlets



# **CONTENTS**

Blower Data	24
Dimensions	17
- Furnace/Coil Combined	20
- Optional Accessories	19
- Optional Accessories - Venting	21
- Unit - Horizontal Position	18
- Unit - Upflow Position	17
Approvals And Warranty	3
eatures	3
Sas Heat Accessories	11
ligh Altitude Derate	11
nstallation Clearances	11
Model Number Identification	1
Optional Accessories	10
Specifications	9
ent Lengths	13
- Exhaust Or Intake	13
- Exhaust Using Ventilated Attic/Crawlspace Intake Air	15
- Uninsulated Exhaust Pipe In Unconditioned Space	16

#### APPROVALS AND WARRANTY

#### **APPROVALS**

- · AHRI Certified
- Tested and rated according to US DOE test procedures and FTC labeling regulations
- ENERGY STAR® certified units are designed to use less energy, help save money on utility bills, and help protect the
- ISO 9001 Registered Manufacturing Quality System
- · Blower data from unit tests conducted in Lennox Laboratory air test chamber

NOTE - This furnace has not been CSA International design certified for installation in mobile homes, recreational vehicles, or outdoors.

## California Only

- This furnace does not meet the South Coast Air Quality Management District (SCAQMD) Rule 1111 and San Joaquin Valley Air Pollution Control District (SJVAPCD) Rule 4905 NOx emission limit (14 ng/J) and cannot be installed within the SCAQMD, SJVAPCD and Bay Area
- Approved by the California Energy Commission and meets California Nitrogen Oxides Standard (NOx) limits of 40 ng/J

#### WARRANTY

- Duralok Plus™ Aluminized Steel Heat Exchanger:
  - Limited twenty year in residential applications
  - · Limited ten years in non-residential applications
- All other covered components:
  - Limited five years in residential installations
  - Limited one year in non-residential installations


NOTE - Refer to Lennox® Basic Limited Warranty at www.Lennox.com for additional details.

#### **FEATURES**

#### **APPLICATIONS**

- Input capacities of 30,000, 44,000, 66,000, 88,000, 110,000 and 135,000 Btuh
- Energy efficiency (AFUE) 96%
- Compact cabinet for upflow, horizontal-left or horizontalright applications without any modifications
- · Lennox add-on indoor coils, high-efficiency air cleaners and humidifiers can easily be added to furnace
- Shipped factory assembled with all controls installed and wired
- Factory test operated to ensure proper operation

## **HEATING SYSTEM**

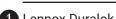

# 1 Lennox Duralok Plus™ Heat Exchanger Assembly

- Lennox developed heat exchanger assembly consists of primary heat exchanger and secondary condenser coil assembly
- Main multi-pass crimped seam design clamshell type
- Constructed of heavy-gauge, aluminized steel
- Designed for normal expansion and contraction with maximum efficiency and minimum resistance to air flow



- 2 · Secondary heat exchanger condenser coil constructed of aluminum fins fitted to stainless steel tubes
  - · Coil is factory tested for leaks
  - Condensate drain header box assembly located on front of coil
  - Compact size permits low overall design of furnace cabinet
  - Laboratory life cycle tested in excess of industry standards

## Lennox Designed Header Box

- Header box on end of condenser coil collects flue condensate for disposal through condensate drains
- · Drains are located on each side of the cabinet for easy field installation of condensate drain trap
- · Only one drain is used, the other drain is sealed
- Condensate drain trap is included with the unit for field installation

## **HEATING SYSTEM (continued)**

# Lennox Designed Flue Condensate Trap Assembly

- Field installed outside the conditioned air stream
- Assembly can be mounted on either side of cabinet in upflow applications
- Assembly is mounted below the cabinet in horizontal applications
- Can also be mounted remotely (up to 5 ft. away) from unit
- See Dimension Drawing and Installation Instructions
- 90° street elbow furnished for ease of drain trap installation
- Drain connection can be made with field provided PVC pipe or PVC coupling
- · Drain cap on trap allows easy cleaning and winterizing

# 3 Inshot Burners

- Aluminized steel inshot burners provide efficient, troublefree operation
- Burner venturi mixes air and gas in correct proportion for proper combustion
- Burner assembly can be removed from the unit as a single component for ease of service

## SureLight® Hot Surface Ignitor

- Tough, reliable, long-life, trouble-free performance
- · Silicon nitride ignitor
- Cemented to steatite block for protection against current leakage
- Ignition leads are constructed of nickel plated copper and are enclosed in high temperature Teflon® insulation for dependable operation

# Gas Control Valve

 24 volt redundant combination gas control valve combines manual shut off switch (On-Off), automatic electric valve (dual) and gas pressure regulation into a compact combination control

# 5 Combustion Air Inducer

- Shaded pole heavy duty blower prepurges heat exchanger and safely vents flue products
- · Operates only during heating cycle

## **Pressure Switch**

 Proves Combustion Air Inducer operation before allowing gas valve to open

#### Limit Control

- Primary limit is accurately located on header box on all units
- Automatic reset

# 6 Flame Rollout Switches (2)

- Factory installed on the front of the burner box
- Switch provides protection from abnormal operating conditions
- Manual reset

# **Optional Accessories**

# High Altitude Orifice Kits

- Required on all units for proper operation at altitudes from 7501 to 10,000 ft.
- Kits are available for natural gas and LPG/propane

## High Altitude Pressure Switch Kit

 Required for proper unit operation on installations above 4500 ft.

## Natural Gas to LPG/Propane Conversion Kit

 Required for field changeover from natural gas to LPG/ Propane

## LPG/Propane to Natural Gas Conversion Kit

 Required for field changeover from LPG/Propane to natural gas

# Muffler (US Only)

- Significantly reduces outdoor operating sound levels
- Two-inch diameter muffler is optional for 030 through 110 input models

**NOTE** - Two-inch muffler is optional for the 110 input model with a <u>maximum</u> vent pipe length of up to 29 ft.

Three-inch diameter muffler is optional for 110 input model.

**NOTE** - Three-inch muffler is optional for the 110 input model with a <u>minimum</u> vent pipe length of 30 ft.

- · Installed vertically in the exhaust piping
- See Optional Accessory Dimension Drawing

# DIRECT VENT / NON-DIRECT VENT SEALED COMBUSTION SYSTEM

- Furnace features a "sealed combustion" system and can be installed in either Direct Vent or Non-Direct applications
- In Direct Vent applications, combustion air is supplied from outdoors and flue gases are discharged outdoors
- In Non-Direct Vent applications, combustion air is supplied from indoors and flue gases are discharged outdoors

NOTE - Lennox has approved the use of DuraVent® PolyPro® and Centrotherm InnoFlue® manufactured vent pipe and terminations as an alternative to PVC vent pipe. Must be ordered separately.

Tested and listed to the ULC S636 standard in Canada

- The polypropylene venting system must follow the uninsulated and unconditioned space vent lengths listed in the table on Page 16
- Refer to the Installation Instructions for additional details

# <u>DIRECT VENT / NON-DIRECT VENT</u> SEALED COMBUSTION SYSTEM (continued)

#### Flue Coupling

- · Assists with exhaust flue piping connection and servicing
- Includes flexible one 2-inch rubber coupling and two adjustable bands
- Approved for all Lennox 90% furnaces

## **Vent Termination Kits**

- Facilitates installation of combustion air intake pipe and flue exhaust pipe
- Refer to venting table in this bulletin to determine pipe size needed and proper termination kit required
- See Optional Accessories table and dimension drawings

# Concentric Termination Kit - Direct Vent Applications

- 2 or 3 inch kit contains concentric termination assembly, reducer bushing and 45° elbow
- 2 inch kit for -030-045-070 models contains an outdoor exhaust accelerator
- Kit requires single hole penetration of roof or wall for installation
- Roof Termination Flashing Kit is available for use with 2 inch Kits
- · CSA certified

#### Flush-Mount Termination Kit

- Kit contains flush-mount termination, accelerator, mounting template and hardware
- Kit may be used with 2, 2-1/2 or 3 in. pipe

# Wall Assembly Termination Kits

#### Close Couple (US Only) - Direct Vent Applications

- 2 or 3 inch kit consists of close-couple, side-by-side PVC piping with galvanized steel wall cover plate
- Seals and isolates intake and exhaust piping penetration of wall
- Piping spacing and length is sized for proper wall installations
- · CSA certified

# Close Couple WTK (Canada Only) - Direct Vent Applications

 2 or 3 inch kit contains one insulated faceplate, one insulated exhaust pipe, elbow and fittings

**NOTE** - Maintain a maximum of 6 inches between the inlet and outlet openings in the installation of the pipes.

# Roof Termination Flashing Kit

- · For vertical venting through a roof
- 2 or 3 inch kit contains two neoprene rubber roof flashings
- Vent pipe and insulation not furnished
- Flashing Kit can also be used with Concentric Vent Termination Kits used in vertical venting rooftop applications

# **CONTROLS**

# 7 SureLight® Integrated Furnace Control

- Contains all necessary controls and relays to operate furnace
- Combustion air inducer is operated by the integrated furnace control
- Prior to ignition, a pre-purge cycle for 15 seconds is initiated
- After the main burners are turned off, a post-purge cycle for 5 seconds is run
- Flame sensor assures safe and reliable operation
- Should loss of flame occur, the integrated furnace control will initiate 4 re-attempts at ignition before locking out unit operation for 60 minutes
- Watchguard type circuit automatically resets ignition controls after one hour of continuous thermostat demand after unit lockout, eliminating nuisance calls for service
- Fan control consists of adjustable blower timed-off delay (60, 90, 120, 180 seconds factory setting 90 seconds) and fixed blower timed-on delay (30 seconds heating, 2 seconds cooling)
- For air-conditioning applications, blower is automatically energized on thermostat demand for cooling
- Two accessory terminals furnished for additional power supply requirements for 120 volt (less than 1 amp) power humidifiers and powered air cleaners
- One additional terminal is furnished for power supply requirements for 24V (less than 0.5 amp) low voltage accessories
- Ignition control has a single red LED to indicate status and as an aid in troubleshooting
- Last ten codes are stored in non-volatile memory (accessible by recall button on control) for servicing

# 24 Volt Transformer (40VA)

- Furnished and factory installed on outside of control box
- · Circuit breaker (furnished) is wired in series

#### Field Wiring Make-Up Box

- Furnished for line voltage wiring
- · Factory installed internally on left side of furnace
- Box may be installed internally on right side of furnace

# **CONTROLS** (continued)

## **Optional Accessories**

#### M30 Smart Wi-Fi Thermostat

- Wi-Fi-enabled, electronic 7-day, universal, multi-stage, programmable, touchscreen thermostat
- · 4 Heat/2 Cool
- · Auto-changeover
- Dual-fuel control with optional outdoor sensor
- Controls dehumidification during cooling mode and humidification during heating mode



- Offers enhanced capabilities including humidification / dehumidification / dewpoint measurement and control, Humiditrol® control, and equipment maintenance reminders
- Easy to read 4.3 in. color touchscreen (measured diagonally)
- LCD display with backlight shows the current and set temperature, time, inside relative humidity, system status (operating mode and schedules) and outside temperature (optional outdoor sensor required)
- Smooth Setback Recovery starts system early to achieve setpoint at start of program period
- Compressor short-cycle protection (5 minutes)
- Up to four separate schedules are available plus Schedule IQ™
- One-Touch Away Mode A quick and easy way to set the cooling and heating setpoints while away
- Smart Away<sup>™</sup> Uses geo-fencing technology to determine when the homeowner is within a predetermined distance from the home to operate the system when leaving, away and arriving
- Wi-Fi remote monitoring and adjustment through a home wireless network for desktop PCs, laptops and apps for smartphones or tablets
- Smart home automation compatible with Amazon Alexa<sup>®</sup>, Google Assistant and IFTTT
- Service Dashboard features online real-time monitoring of installed Lennox<sup>®</sup> thermostats

**NOTE** - See the Lennox® M30 Smart Wi-Fi Thermostat Product Specifications bulletin in the Controls section for more information.

#### Remote Outdoor Temperature Sensor

- Used with the Lennox® M30 Smart Thermostat
- Outdoor sensor allows thermostat to display outdoor temperature

**NOTE** - Sensor is required for the Enhanced Dehumidification Accessory (EDA).



#### Thermostat

- · Thermostat is not furnished with unit
- See Lennox Price Book for selection

## Blower Relay Kit (For Use With Two-Stage Outdoor Units)

 Allows furnace blower speed changes when matched with two-stage air conditioners or heat pumps

# **Furnace Twinning Panel**

- Required to operate two identical furnaces simultaneously from a single thermostat
- For single stage conventional (1 heat/1 cool), multistage conventional (2 heat/2 cool) and heat pump (3 heat/2 cool) equipment
- Can be used with common or separate ducted systems
- Contains PC Control Board with terminal strip connections for thermostat and HVAC equipment
- · LEDs indicate system operating status
- Uses standard 18-gauge thermostat wire
- Power Supply: 24 VAC, 40VA (transformer not furnished)
- · Mounting base with hardware furnished
- Dimensions (H x W x D): 10 x 5 x 2 in.

NOTE - Only identical furnaces should be twinned in order to ensure that both furnace blowers start at the same time. If furnaces are not identical, back draft dampers can be installed in either the supply or return duct.

Up to four identical furnaces can be twinned. Requires two panels that are wired together.

## Furnace Twinning Kit

- Required to operate two furnaces simultaneously
- Kit consists of twinning relays, quick connect terminals and mounting hardware
- Used for single-stage heating/single-stage cooling with a single-stage thermostat

#### Transformer (75VA)

- Recommended when furnace is used with zoning or defrost thermostats and other 24V accessories requiring a higher VA rating
- · Circuit breaker (furnished) is wired in series
- · Replaces the standard 40VA transformer

#### **BLOWER**

- · Direct drive blower
- · Statically and dynamically balanced
- · Resiliently mounted
- · Blower assembly easily removed for servicing
- 8 Power Saver™ Constant Torque Blower Motor
  - DC Brushless Motor
  - · High Efficiency Constant Torque
  - ECM (Electronically Commutated Motor)
  - Motor is programmed to provide constant torque at each of the selectable speeds
  - · Motor is controlled by the Integrated Furnace Control
  - Blower speeds are easily changed on the integrated furnace control
  - · See Blower Data tables

# **CABINET**

- · Low-profile, narrow width allows easy installation
- · Heavy-gauge, cold rolled steel construction
- Pre-painted cabinet finish
- Flanges provided on supply air opening for ease of plenum connection or alignment with indoor coil
- Insulated with foil faced insulation on sides and back of heating compartment
  - Sealed blower compartment
  - · Complete service access
- 10 · Safety interlock switch automatically shuts off power to unit when blower compartment access door is remove
- Gas piping and electrical inlets are provided in both sides of cabinet

## Low Leakage Cabinet

- · All models have less than 2% air leakage
- Meets ANSI/ASHRAE Standard 193-2010 "Method of Test for Determining the Air Tightness of HVAC Equipment"

# Bottom/Side Return Air Entry:

- Upflow/horizontal with bottom return air entry:
- Remove furnished bottom seal panel from cabinet
- Upflow only with side return-air entry:
  - Corners are marked on either side of cabinet for return air cut-out
- See dimension drawings

**NOTE** - 60C and 60D size units that require air volumes over 1800 cfm must have one of the following:

- Single side return air <u>and</u> Optional Return Air Base with transition that must accommodate required 20 x 25 x 1 inch air filter to maintain proper velocity
- · Bottom return air
- · Return air from both sides
- · Bottom and one side return air
- See Blower Performance Tables for additional information

#### Coil Match-Up

- All furnaces exactly match Lennox cased upflow indoor coils and horizontal indoor coils with same letter designation (A, B, C, D) in model number
- · No adaptor required
- · Engaging holes furnished on cabinet for alignment
- Lennox uncased coils match furnaces without any overhang but require an optional adaptor base or field fabricated transition to match furnace opening
- · See coil bulletin for additional information

## **Optional Accessories**

#### Condensate Drain Heat Cable Kits

- Self-limiting wattage heat cable prevents condensate drain from freezing in unconditioned areas
- · Available in 6 or 24 ft. lengths

## Horizontal Suspension Kit

- Provides suspension of unit and indoor coil in horizontal applications
- Allows complete service access
- Consists of corner mounted hanging brackets with vibration isolators, return air end support rail and hardware for assembly
- · Metal hanging straps must be field provided

# Crawl Space Vent Drain Kit

- Allows venting through a crawl space for upflow and horizontal applications
- Includes 2 or 3 in. sanitary tee, 2 in. PVC assembly, PVC boot and clamp
- · Kit for Canada is certified to ULC S636

# Return Air Base

NOTE - On furnaces with side return air and condensate trap on the same side of the cabinet, a field fabricated transition or Return Air Base is required when using an IAQ product higher than 14-3/16 inches installed next to the unit and serviced from the front. IAQ products higher than 20 inches require a field fabricated transition.

**NOTE** - Must be used for 60C size models with air volumes over 1800 cfm in upflow applications when only one side return is required.

- · Cabinet is shipped flat for easy field assembly
- Pre-painted steel to match the furnace
- · See Dimension Drawing

## **CABINET** (continued)

# Optional Accessories (continued)

# High Performance Economizer (Commercial Applications Only)

- Designed for applications requiring outdoor air to be utilized in a commercial HVAC system
- Allows the entry of fresh outdoor air for free cooling, reducing the requirement for mechanical cooling
- Heavy gauge galvanized steel cabinet lined with thick fiberglass insulation
- Mixed air sensor, outdoor air sensor and 24VAC transformer furnished
- Approved for California Title 24 building standards
- ASHRAE 90.1-2010 compliant
- See separate Product Specifications bulletin for additional information and available control and sensor options.

# FILTER (not furnished)

Filter and provisions for external mounting must be field provided

# **Optional Accessories**

# Air Filter and Rack Kit for Horizontal Return Air (End) Applications

- Washable or vacuum cleanable polyurethane frame type filter and external end return air rack
- Rack has filter door for servicing
- Flanges on rack for duct connection
- · Field installed
- See dimension drawing

# Air Filter and Rack Kit for Upflow Side Return Air **NOTE** - Not for use with Return Air Base

- Washable or vacuum cleanable polyurethane frame type filter and external side return air rack available for field installation
- Available in single and ten pack kits
- · Rack has filter door for servicing
- Flanges on rack for duct connection
- · Field installs on either side of unit cabinet
- · See dimension drawing

# **REFRIGERATION DETECTION SYSTEM (RDS)**

#### **Optional Accessories**

# Refrigerant Detection System (RDS) Coil Sensor Kit

- Complies with UL 60335-2-40 approved standard
- Required for field installation for all systems using R-454B refrigerant if sensor is not furnished with coil
- Consists of Refrigerant Detection System (RDS) sensor, lineset sleeves, mounting brackets and A2L labeling
- Sensor ensures safe operation for systems equipped with R-454B refrigerant
- · Sensor will detect any refrigerant leaks if they occur

# Refrigerant Detection System (RDS) Blower Control Board Communicating Blower Control Board (Universal)

 Communicating Blower Control Board and Sensor can be used universally with any Lennox<sup>®</sup> communicating furnace or any non-communicating 24 volt furnace

# Non-Communicating Blower Control Board

 Non-Communicating Blower Control Board and Sensor can be used with any non-communicating 24 volt furnace

#### Standard Features

- Complies with UL 60335-2-40 approved standard
- · Required for all systems using R-454B refrigerant
- Connects to the RDS sensor furnished with the RDS Coil Sensor Kit
- Supports up to two RDS Sensors (factory setting)
- Used as an interface between indoor unit and thermostat to control system in case of a refrigerant leak
- Ensures safe operation for systems equipped with R-454B refrigerant
- If a leak is detected, the refrigerant detection system will stop compressor and/or heating operation and operate the blower to reduce concentrations in the conditioned space
- Once safe levels are reached the HVAC system will resume normal operation
- Multi-color LED for system status and as an aid in troubleshooting
  - Flashing LED codes for system status (Green/Blue) and diagnosing Sensor errors (Red)
- Alarm relay can trigger an external alarm if a leak is detected
- Zone relay opens all zone dampers (if part of a zoning system) if a leak is detected
- Power is disabled to non-communicating thermostats to prevent demand if a leak is detected
- On system start-up blower will run for five minutes and any thermostat demands are disabled
- Dimensions (H x W x D): 7-7/16 x 7-7/16 x 2-1/2 (189 x 189 x 127 mm)

# **NOTE** - See Refrigerant Detection System (RDS) Components Table on page <?>.

See the CK40 Indoor Coil Product Specifications bulletins for more information.

Refer to the Installation Instructions for additional information.

SPECIFICA	TIONS										
Gas Heating	Model No.	ML196UH 030XE36B	ML196UH 045XE36B	ML196UH 070XE36B	ML196UH 070XE48B	ML196UH 090XE36C					
Performance	<sup>1</sup> AFUE	96%	96%	96%	96%	96%					
	Input - Btuh	30,000	44,000	66,000	66,000	88,000					
	Output - Btuh	29,000	43,000	64,000	64,000	86,000					
	Temperature rise range - °F	25 - 55	35 - 65	35 - 65	30 - 60	45 - 75					
Ga	s Manifold Pressure (in. w.g.) Nat. Gas / LPG/Propane	3.5 / 10	3.5 / 10	3.5 / 10	3.5 / 10	3.5 / 10					
	High static - in. w.g.	0.5	0.5	0.5	0.5	0.5					
Energy Star® Co	ertified	Yes	Yes	Yes	Yes	Yes					
Connections	Intake / Exhaust Pipe (PVC)	2/2	2/2	2/2	2/2	2/2					
in.	Gas pipe size IPS	1/2	1/2	1/2	1/2	1/2					
Condensat	e Drain Trap (PVC pipe) - i.d.	3/4	3/4	3/4	3/4	3/4					
W	ith furnished 90° street elbow	3/4 slip x 3/4 Mipt									
with field s	supplied (PVC coupling) - o.d.			3/4 slip x 3/4 MPT	-						
Indoor	Wheel nom. dia. x width - in.	10 x 8	10 x 8	10 x 8	11-1/2 x 10	10 x 8					
Blower	Motor Type	DC Brushless	DC Brushless	DC Brushless	DC Brushless	DC Brushless					
	Motor output - hp	1/2	1/2	1/2	3/4	1/2					
	Tons of add-on cooling	1.5 - 3	1.5 - 3	1.5 - 3	2.5 - 4	1.5 - 3					
	Air Volume Range - cfm	175 - 1435	520 - 1345	550 - 1380	835 - 1855	460 - 1470					
<b>Electrical Data</b>	Voltage		120 v	olts - 60 hertz - 1	phase						
	Blower motor full load amps	6.8	6.8	6.8	8.4	6.8					
Max	ximum overcurrent protection	15 15 15		15	15						
Shipping Data	lbs 1 package	ge 120 124 129 132 142									

NOTE - Filters and provisions for mounting are not furnished and must be field provided.

<sup>&</sup>lt;sup>1</sup> Annual Fuel Utilization Efficiency based on DOE test procedures and according to FTC labeling regulations. Isolated combustion system rating for non-weatherized furnaces.

SPECIFICA	ATIONS										
Gas Heating	Model No.	ML196UH 090XE48C	ML196UH 090XE60C	ML196UH 110XE60C	ML196UH 135XE60D						
Performance	<sup>1</sup> AFUE	96%	96%	96%	96%						
	Input - Btuh	88,000	88,000	110,000	132,000						
	Output - Btuh	86,000	86,000	107,000	127,000						
	Temperature rise range - °F	50 - 80	35 - 65	45 - 75	45 - 75						
Ga	as Manifold Pressure (in. w.g.) Nat. Gas / LPG/Propane	3.5 / 10	3.5 / 10	3.5 / 10	3.5 / 10						
	High static - in. w.g.	0.5	0.5	0.5	0.5						
Energy Star® C	ertified	Yes	Yes	Yes	Yes						
Connections	Intake / Exhaust Pipe (PVC)	2/2	2/2	2/2	2/2						
in.	Gas pipe size IPS	1/2	1/2	1/2	1/2						
Condensa	te Drain Trap (PVC pipe) - i.d.	3/4	3/4	3/4	3/4						
W	vith furnished 90° street elbow	3/4 slip x 3/4 Mipt									
with field	supplied (PVC coupling) - o.d.		3/4 slip x	3/4 MPT							
Indoor	Wheel nom. dia. x width - in.	10 x 10	11-1/2 x 10	11-1/2 x 10	11-1/2 x 10						
Blower	Motor Type	DC Brushless	DC Brushless	DC Brushless	DC Brushless						
	Motor output - hp	3/4	1	1	1						
	Tons of add-on cooling	2.5 - 4	3-5	3 - 5	3-5						
	Air Volume Range - cfm	760 - 1740	1050 - 2105	1055 - 2220	1310 - 2400						
<b>Electrical Data</b>	Voltage		120 volts - 60 l	hertz - 1 phase							
	Blower motor full load amps	8.4	10.9	10.9	10.9						
Ма	ximum overcurrent protection	15	15	15	15						
<b>Shipping Data</b>	lbs 1 package	152	152	164	174						

NOTE - Filters and provisions for mounting are not furnished and must be field provided.

Annual Fuel Utilization Efficiency based on DOE test procedures and according to FTC labeling regulations. Isolated combustion system rating for non-weatherized furnaces.

OPTIONAL	ACCESSORIES				
JITIONAL	AUGUOUNILO		"B" Width Models	"C" Width Models	"D" Width Models
CABINET ACCE	ESSORIES				
Horizontal Sus	pension Kit - Horizontal only		51W10	51W10	51W10
Return Air Base			50W98	50W99	50W99
High Performar	nce Economizer (Commercial	Only)	10U53	10U53	10U53
CONDENSATE	DRAIN KITS			'	
Condensate Dr	ain Heat Cable	6 ft.	26K68	26K68	26K68
		24 ft.	26K69	26K69	26K69
Crawl Space Ve	ent Drain Kit	US	51W18	51W18	51W18
		Canada	15Z70	15Z70	15 <b>Z</b> 70
CONTROLS				'	'
Blower Relay K	(it (for two-stage outdoor units	s)	85W66	85W66	85W66
M30 Smart Wi-F	<u> </u>	-	<b>15Z69</b>	15Z69	15Z69
Remote Outdoo	or Temperature Sensor		X2658	X2658	X2658
Furnace Twinni			Y3653	Y3653	Y3653
Furnace Twinni	ing Kit		16W72	16W72	
Transformer (7	5VA)		27J32	27J32	27J32
FILTER KITS				'	'
<sup>1</sup> Air Filter and	Horizontal (end)		87L96	87L97	87L98
Rack Kit		Size of filter - in.	18 x 25 x 1	20 x 25 x 1	25 x 25 x 1
	Side Return	Single	44J22	44J22	44J22
		Ten Pack	66K63	66K63	66K63
		Size of filter - in.	16 x 25 x 1	16 x 25 x 1	16 x 25 x 1
TERMINATION	KITS				
See Installation	Instructions for specific venting i	nformation.			
Direct Vent	Concentric	US - 2 in.	71M80	69M29	
		3 in.		60L46	60L46
		Canada - 2 in.	44W92	44W92	
		3 in.		44W93	44W93
	Flush-Mount	US - 2, 2-1/2 or 3 in.	51W11	51W11	51W11
		Canada - 2, 2-1/2 or 3 in.	51W12	51W12	51W12
	Wall - Close Couple	US - 2 in.	22G44		
		3 in.	44J40	44J40	44J40
	Wall - Close Couple WTK	Canada - 2 in.	30G28		
		3 in.	81J20	81J20	81J20
	Roof Termination Flashing Kit	2 in.	15F75	15F75	
	(no vent pipe - 2 flashings)	3 in.	44J41	44J41	44J41
VENTING					
Flue Coupling		2 in.	17H92	17H92	17H92

<sup>&</sup>lt;sup>1</sup> Cleanable polyurethane frame type filter.

NOTE - Termination Kits (44W92, 44W93, 30G28, 51W12, 81J20) and Crawl Space Vent Drain Kit (15Z70) are certified to ULC S636 standard for use in Canada only.

GAS	GAS HEAT ACCESSORIES													
Input	_	Altitude Switch Kit	Natural Gas to LPG/Propane Kit	LPG/Propane to Natural Gas Kit	Natural Gas High Altitude Orifice Kit	LPG/Propane High Altitude Orifice Kit	Muffler (US Only)							
	4501 - 7500 ft.	7501 - 10,000 ft.	0 - 7500 ft.	0 - 7500 ft.	7501 - 10,000 ft.	7501 - 10,000 ft.								
030	11U66	11U69	17H63	N/A	14C90	17H66	15Y66 (2-inch)							
045	11U66	11U69	11K49	73W81	73W37	11K44	15Y66 (2-inch)							
070	11U70	11U68	11K49 73W81 73		73W37	11K44	15Y66 (2-inch)							
090	11U70	11U64	4 11K49 7		73W37	11K44	15Y66 (2-inch)							
110	11U70	11U64	11K49	73W81	73W37	11K44	<sup>1</sup> 15Y66 (2-inch) 16A56 (3-inch)							
135	11U70 11U68		11U68 11K49 73W81 73W37		11K44	16A56 (3-inch)								

<sup>&</sup>lt;sup>1</sup> Two-inch diameter muffler (**15Y66**) is optional for 110 input model with a <u>maximum</u> vent pipe length of up to 29 ft. Three-inch diameter muffler (**16A56**) is optional for 110 input model with a <u>minimum</u> vent pipe length of 30 ft.

REFRIGERANT DETECTION SYSTEM (RDS) COMPONENTS										
Description C										
Refrigerant Detection System (RDS) Coil Sensor Kit		26Z69								
Refrigerant Detection System (RDS) Blower Control Board	Any Lennox® Communicating Furnace or any Non-Communicating 24V Furnace (Universal)	27A03								
	Any Non-Communicating 24V Furnace	27A02								

NOTE - Communicating Blower Control Board and Sensor can be used universally with Lennox® communicating furnace or any non-communicating 24 volt furnace. Non-Communicating Blower Control Board and Sensor can be used with any non-communicating 24 volt furnace.

#### HIGH ALTITUDE DERATE

NOTE - Units may be installed at altitudes up to 10,000 ft.

At altitudes above 4501 ft. the unit must be derated to match the manifold pressure information shown below.

Units installed at altitudes of 4501 to 10,000 ft. require a pressure switch change.

Units installed at altitudes of 7501 to 10,000 ft. require an orifice change.

See the Gas Heat Accessories table for ordering information.

NOTE - This is the only permissible derate for these units.

NOTE - In Canada, certification for installations at elevations over 4500 feet is the jurisdiction of local authorities.

				Suppl	y Line			
Input	Gas	0 - 4500 ft.	4501 - 5500 ft.	Manifold Pressure in. w.g. - 5500 ft.   5501 - 6500 ft.   6501 - 7500 ft.   7501		7501 - 10,000 ft.	Pressure in. w.g. 0 - 10,000 ft.	
All Cizos	Natural	3.5	3.3	3.2	3.1	3.5	4.5	13.0
All Sizes	LPG/Propane	10.0	9.4	9.1	8.9	10.0	11.0	13.0

INSTALLATION CLEARANCES	
Sides	<sup>1</sup> 0 inches (0 mm)
Rear	0 inches (0 mm)
Top/Plenum	1 inch (25 mm)
Front	0 inches (0 mm)
Front (service/alcove)	24 inches (610 mm)
Floor	<sup>2</sup> Combustible

NOTE – Air for combustion must conform to the methods outlined in the National Fuel Gas Code (NFPA 54/ANSI–Z223.1) or the National Standard of Canada CAN/CSA–B149.1 Natural Gas and Propane Installation Code".

NOTE – In the U.S. flue sizing must conform to the methods outlined in the current National Fuel Gas Code (NFPA 54/ANSI-Z223.1) or applicable provisions of local building codes. In Canada flue sizing must conform to the methods outlined in National Standard of Canada CAN/CSA-B149.1.

<sup>&</sup>lt;sup>1</sup> Allow proper clearances to accommodate condensate trap and vent pipe installation.

<sup>&</sup>lt;sup>2</sup> Do not install the furnace directly on carpeting, tile, or other combustible materials other than wood flooring.

## **OUTDOOR TERMINATION KIT USAGE**

			Standard To	erminations		Concentric Terminations					
Innut	Vent Pipe	Flush Mount	Wal	l Kit	Field Fabricated	Concentric Kit					
Input Size	Diameter	Kit	2 inch	3 inch	Exhaust Accelerator	1-1/2 inch	2 inch	3 inch			
	(in.)	51W11 (US) 5 51W12 (CA)	22G44 (US) 5 30G28 (CA)	44J40 (US) 5 81J20 (CA)	Size Required	71M80 (US) 5 44W92 (CA)	69M29 (US) 5 44W92 (CA)	60L46 (US) 5 44W93 (CA)			
	¹ 1-1/2	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	<sup>3</sup> YES					
030/	2	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	³ YES					
045	2-1/2	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	<sup>3</sup> YES					
	3	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	<sup>3</sup> YES					
	1 1-1/2	4 YES	YES	<sup>2</sup> YES	1-1/2 in.	³ YES					
070	2	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	<sup>3</sup> YES					
070	2-1/2	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	<sup>3</sup> YES					
	3	<sup>4</sup> YES	YES	<sup>2</sup> YES	1-1/2 in.	<sup>3</sup> YES					
	2	<sup>4</sup> YES		YES	2 in.		YES	YES			
090	2-1/2	<sup>4</sup> YES		YES	2 in.		YES	YES			
	3	<sup>4</sup> YES		YES	2 in.		YES	YES			
	2	YES		YES	2 in.		YES	YES			
110	2-1/2	YES		YES	2 in.		YES	YES			
	3	YES		YES	2 in.		YES	YES			
135	3	YES		YES	2 in.			YES			

NOTE - Standard Terminations do not include any vent pipe or elbows external to the structure.

Any vent pipe or elbows external to the structure must be included in total vent length calculations. See Vent Length Tables.

<sup>&</sup>lt;sup>1</sup> 2 inch to 1-1/2 inch reducer required, must be field provided.

<sup>&</sup>lt;sup>2</sup> Requires field provided 1-1/2 in. outdoor exhaust accelerator.

<sup>&</sup>lt;sup>3</sup> Concentric Kits **71M80** and **44W92** include 1-1/2 in. outdoor exhaust accelerator, required when used with 030, 045 and 070 input models. Accelerator is not used with 090 or 110 input models. When using 1-1/2 in. piping, the pipe must be transitioned to 2 in. pipe when used with the Concentric Kit.

<sup>&</sup>lt;sup>4</sup> Flush Mount Kit **51W11** and **51W12** includes 1-1/2 in. outdoor exhaust accelerator, required when used with 030, 045, 070 and 090 input models. Accelerator is not used with 110 input models. When using 1-1/2 in. piping, the pipe must be transitioned to 2 in. pipe when used with the Flush Mount Kit.

<sup>&</sup>lt;sup>5</sup> Termination Kits 30G28, 44W92, 44W93, 51W12 and 81J20 are certified to ULC S636 standard for use in Canada only.

# VENT LENGTHS EXHAUST OR INTAKE

#### STANDARD TERMINATION AT 0 - 2000 ft. ELEVATION

Pip	Pipe Size 1-1/2 in.							2 in.				2-1/2 in.				3 in.						
	Input	030	045	070	090	110	135	030/ 045	070	090	110	135	030/ 045	070	090	110	135	030/ 045	070	090	110	135
	1	25	20	15	N/A	N/A	N/A	81	66	44	24	N/A	115	115	93	58	N/A	138	137	118	118	80
	2	20	15	10	N/A	N/A	N/A	76	61	39	19	N/A	110	110	88	53	N/A	133	132	113	113	75
	3	15	10	N/A	N/A	N/A	N/A	71	56	34	14	N/A	105	105	83	48	N/A	128	127	108	108	70
	4	10	N/A	N/A	N/A	N/A	N/A	66	51	29	N/A	N/A	100	100	78	43	N/A	123	122	103	103	65
No. of	5	N/A	N/A	N/A	N/A	N/A	N/A	61	46	24	N/A	N/A	95	95	73	38	N/A	118	117	98	98	60
90 ELL	6	N/A	N/A	N/A	N/A	N/A	N/A	56	41	19	N/A	N/A	90	90	68	33	N/A	113	112	93	93	55
	7	N/A	N/A	N/A	N/A	N/A	N/A	51	36	14	N/A	N/A	85	85	63	28	N/A	108	107	88	88	50
	8	N/A	N/A	N/A	N/A	N/A	N/A	46	31	N/A	N/A	N/A	80	80	58	23	N/A	103	102	83	83	45
	9	N/A	N/A	N/A	N/A	N/A	N/A	41	26	N/A	N/A	N/A	75	75	53	18	N/A	98	97	78	78	40
	10	N/A	N/A	N/A	N/A	N/A	N/A	36	21	N/A	N/A	N/A	70	70	48	13	N/A	93	92	73	73	35

NOTES - Additional vent pipe and long radius elbows (required) used to terminate vent pipe outside the structure must be included in the total vent length calculation. Intake and exhaust pipes are sized separately.

# STANDARD TERMINATION AT 2001 - 10,000 ft. ELEVATION

Pip	e Size	1-1/2 in.					2 in.					
	Input	030	030/045		070			090		110	135	
Ele	vation		2001- 10,000 ft.	2001- 3000 ft.	3001- 4000 ft.	4001- 10,000 ft.	2001- 3000 ft.	3001- 4000 ft.	4001- 10,000 ft.	200 10,00		
	1		81	55	45	35	30	25	20	N/A	N/A	
	2		76	50	40	30	25	20	15	N/A	N/A	
	3		71	45	35	25	20	15	10	N/A	N/A	
	4		66	40	30	20	15	10	N/A	N/A	N/A	
No. of	5	N/A	61	35	25	15	10	N/A	N/A	N/A	N/A	
90 ELL	6	IN/A	56	30	20	10	N/A	N/A	N/A	N/A	N/A	
	7		51	25	15	N/A	N/A	N/A	N/A	N/A	N/A	
	8	-		46	20	10	N/A	N/A	N/A	N/A	N/A	N/A
	9		41	15	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
	10		36	10	N/A	N/A	N/A	N/A	N/A	N/A	N/A	
Pip	e Size			2-1/2 in.					3 in.			
	Input	030/045	070	090	110	135	030/045	070	090	110	135	
Ele	vation		20	001-10,000	ft.			2	001-10,000	ft.		
	1	115	110	67	53	N/A	138	137	118	118	80	
	2	110	105	62	48	N/A	133	132	113	113	75	
	3	105	100	57	43	N/A	128	127	108	108	70	
	4	100	95	52	38	N/A	123	122	103	103	65	
No. of	5	95	90	47	33	N/A	118	117	98	98	60	
90 ELL	6	90	85	42	28	N/A	113	112	93	93	55	
	7	85	80	37	23	N/A	108	107	88	88	50	
	8	80	75	32	18	N/A	103	102	83	83	45	
	9	75	70	27	13	N/A	98	97	78	78	40	
	10	70	65	22	N/A	N/A	93	92	73	73	35	

NOTES - Additional vent pipe and long radius elbows (required) used to terminate vent pipe outside the structure must be included in the total vent length calculation. Intake and exhaust pipes are sized separately.

Values in table are for separate intake or exhaust pipe lengths.

Both intake and exhaust pipe must be the same size diameter.

Values in table are for separate intake or exhaust pipe lengths.

Both intake and exhaust pipe must be the same size diameter.

# VENT LENGTHS EXHAUST OR INTAKE

# **CONCENTRIC TERMINATION AT 0 - 2000 ft. ELEVATION**

Pip	e Size			1-1/2	2 in.					2 in.				2-	-1/2 ir	۱.		3 in.				
	Input	030	045	070	090	110	135	030/ 045	070	090	110	135	030/ 045	070	090	110	135	030/ 045	070	090	110	135
	1	20	15	10	N/A	N/A	N/A	73	58	42	22	N/A	105	105	89	54	N/A	121	121	114	114	70
	2	15	10	N/A	N/A	N/A	N/A	68	53	37	17	N/A	100	100	84	49	N/A	116	116	109	109	65
	3	10	N/A	N/A	N/A	N/A	N/A	63	48	32	12	N/A	95	95	79	44	N/A	111	111	104	104	60
	4	N/A	N/A	N/A	N/A	N/A	N/A	58	43	27	N/A	N/A	90	90	74	39	N/A	106	106	99	99	55
No. of	5	N/A	N/A	N/A	N/A	N/A	N/A	53	38	22	N/A	N/A	85	85	69	34	N/A	101	101	94	94	50
90 ELL	6	N/A	N/A	N/A	N/A	N/A	N/A	48	33	17	N/A	N/A	80	80	64	29	N/A	96	96	89	89	45
	7	N/A	N/A	N/A	N/A	N/A	N/A	43	28	12	N/A	N/A	75	75	59	24	N/A	91	91	84	84	40
-	8	N/A	N/A	N/A	N/A	N/A	N/A	38	23	N/A	N/A	N/A	70	70	54	19	N/A	86	86	79	79	35
	9	N/A	N/A	N/A	N/A	N/A	N/A	33	18	N/A	N/A	N/A	65	65	49	14	N/A	81	81	74	74	30
	10	N/A	N/A	N/A	N/A	N/A	N/A	28	13	N/A	N/A	N/A	60	60	44	N/A	N/A	76	76	69	69	25

NOTES - Additional vent pipe and long radius elbows (required) used to terminate vent pipe outside the structure must be included in the total vent length calculation. Intake and exhaust pipes are sized separately.

Both intake and exhaust pipe must be the same size diameter.

# **CONCENTRIC TERMINATION AT 2001 - 10,000 ft. ELEVATION**

Pip	e Size	1-1/2 in.					2 in.				
	Input	030	030/045		070			090		110	135
Elev	vation		2001- 10,000 ft.	2001- 3000 ft.	3001- 4000 ft.	4001- 10,000 ft.	2001- 3000 ft.	3001- 4000 ft.	4001- 10,000 ft.		01- 00 ft.
	1		73	50	40	30	25	20	15	N/A	N/A
	2		68	45	35	25	20	15	10	N/A	N/A
	3		63	40	30	20	15	10	N/A	N/A	N/A
	4		58	35	25	15	10	N/A	N/A	N/A	N/A
No. of	5	N1/A	53	30	20	10	N/A	N/A	N/A	N/A	N/A
90 ELL	6	N/A	48	25	15	5	N/A	N/A	N/A	N/A	N/A
	7		43	20	10	N/A	N/A	N/A	N/A	N/A	N/A
	8		38	15	5	N/A	N/A	N/A	N/A	N/A	N/A
	9		33	10	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	10		28	5	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Pip	e Size			2-1/2 in.					3 in.		
	Input	030/045	070	090	110	135	030/045	070	090	110	135
Elev	vation		20	001-10,000	ft.			2	001-10,000	ft.	
	1	105	96	53	38	N/A	121	121	114	114	70
	2	100	91	48	33	N/A	116	116	109	109	65
	3	95	86	43	28	N/A	111	111	104	104	60
	4	90	81	38	23	N/A	106	106	99	99	55
No. of	5	85	76	33	18	N/A	101	101	94	94	50
90 ELL	6	80	71	28	13	N/A	96	96	89	89	45
	7	75	66	23	N/A	N/A	91	91	84	84	40
	8	70	61	18	N/A	N/A	86	86	79	79	35
	9	65	56	13	N/A	N/A	81	81	74	74	30
	10	60	51	N/A	N/A	N/A	76	76	69	69	25

NOTES - Additional vent pipe and long radius elbows (required) used to terminate vent pipe outside the structure must be included in the total vent length calculation. Intake and exhaust pipes are sized separately.

Both intake and exhaust pipe must be the same size diameter.

Values in table are for separate intake or exhaust pipe lengths.

Values in table are for separate intake or exhaust pipe lengths.

# VENT LENGTH EXHAUST USING VENTILATED ATTIC/CRAWLSPACE INTAKE AIR

# STANDARD TERMINATION AT 0 - 2000 ft. ELEVATION

Pip	e Size			1-1/2	2 in.					2 in.				2.	-1/2 ir	۱.				3 in.		
	Input	030	045	070	090	110	135	030/ 045	070	090	110	135	030/ 045	070	090	110	135	030/ 045	070	090	110	135
	1	20	15	10	N/A	N/A	N/A	71	56	34	14	N/A	100	100	78	43	N/A	118	117	98	98	60
	2	15	10	N/A	N/A	N/A	N/A	66	51	29	9	N/A	95	95	73	38	N/A	113	112	93	93	55
	3	10	N/A	N/A	N/A	N/A	N/A	61	46	24	N/A	N/A	90	90	68	33	N/A	108	107	88	88	50
	4	N/A	N/A	N/A	N/A	N/A	N/A	56	41	19	N/A	N/A	85	85	63	28	N/A	103	102	83	83	45
No. of	5	N/A	N/A	N/A	N/A	N/A	N/A	51	36	14	N/A	N/A	80	80	58	23	N/A	98	97	78	78	40
90 ELL	6	N/A	N/A	N/A	N/A	N/A	N/A	46	31	9	N/A	N/A	75	75	53	18	N/A	93	92	73	73	35
	7	N/A	N/A	N/A	N/A	N/A	N/A	41	26	N/A	N/A	N/A	70	70	48	13	N/A	88	87	68	68	30
	8	N/A	N/A	N/A	N/A	N/A	N/A	36	21	N/A	N/A	N/A	65	65	43	N/A	N/A	83	82	63	63	25
	9	N/A	N/A	N/A	N/A	N/A	N/A	31	16	N/A	N/A	N/A	60	60	38	N/A	N/A	78	77	58	58	20
	10	N/A	N/A	N/A	N/A	N/A	N/A	26	11	N/A	N/A	N/A	55	55	33	N/A	N/A	73	72	53	53	15

NOTE - Additional vent pipe and long radius elbows (required) used to terminate vent pipe outside the structure must be included in the total vent length calculation.

# STANDARD TERMINATION AT 2001 - 10,000 ft. ELEVATION

Pip	e Size	1-1/2 in.					2 in.				
	Input	030	030/045		070			090		110	135
Elev	vation		2001- 10,000 ft.	2001- 3000 ft.	3001- 4000 ft.	4001- 10,000 ft.	2001- 3000 ft.	3001- 4000 ft.	4001- 10,000 ft.		01- 00 ft.
,	1		71	50	40	30	25	20	15	N/A	N/A
	2		66	45	35	25	20	15	10	N/A	N/A
	3		61	40	30	20	15	10	N/A	N/A	N/A
	4		56	35	25	15	10	N/A	N/A	N/A	N/A
No. of	5	N/A	51	30	20	10	N/A	N/A	N/A	N/A	N/A
90 ELL	6	IN/A	46	25	15	5	N/A	N/A	N/A	N/A	N/A
	7		41	20	10	N/A	N/A	N/A	N/A	N/A	N/A
	8		36	15	5	N/A	N/A	N/A	N/A	N/A	N/A
	9		31	10	N/A	N/A	N/A	N/A	N/A	N/A	N/A
	10		26	5	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Pip	e Size			2-1/2 in.					3 in.		
	Input	030/045	070	090	110	135	030/045	070	090	110	135
Elev	vation		20	001-10,000	ft.			2	001-10,000	ft.	
	1	100	96	53	38	N/A	118	117	98	98	60
	2	95	91	48	33	N/A	113	112	93	93	55
	3	90	86	43	28	N/A	108	107	88	88	50
	4	85	81	38	23	N/A	103	102	83	83	45
No. of	5	80	76	33	18	N/A	98	97	78	78	40
90 ELL	6	75	71	28	13	N/A	93	92	73	73	35
	7	70	66	23	N/A	N/A	88	87	68	68	30
	8	65	61	18	N/A	N/A	83	82	63	63	25
	9	60	56	13	N/A	N/A	78	77	58	58	20
	10	55	51	N/A	N/A	N/A	73	72	53	53	15

NOTE - Additional vent pipe and long radius elbows (required) used to terminate vent pipe outside the structure must be included in the total vent length calculation.

VENT LENGT	ГНЅ		U	NIN	SULATE	D E	KHAUST	r Pif	PE IN UI	NCO	NDITIO	NED	<b>SPACE</b>
							Unit Inp	out Siz	ze e				
1 Winter Decign	Vent Pipe		030		045		070		090		110		135
<sup>1</sup> Winter Design Temperatures	Diameter			² Ma	ximum Eq	uivale	nt Uninsu	lated I	Exhaust Vo	ent Le	ngth (ft.)		
		PVC	PolyPro InnoFlue	PVC	PolyPro InnoFlue	PVC	PolyPro InnoFlue	PVC	PolyPro InnoFlue	PVC	PolyPro InnoFlue	PVC	PolyPro InnoFlue
	1-1/2 in.	N/A	N/A	25	N/A	25	N/A	N/A	N/A	N/A	N/A	N/A	N/A
32 to 21°F	2 in.	N/A	N/A	18	16	31	28	50	48	30	30	N/A	N/A
32 t0 21 F	2-1/2 in.	N/A	N/A	13	N/A	24	N/A	42	N/A	56	N/A	N/A	N/A
	3 in.	N/A	N/A	9	9	18	18	35	35	47	47	47	47
	1-1/2 in.	N/A	N/A	15	N/A	20	N/A	N/A	N/A	N/A	N/A	N/A	N/A
20 to 1°F	2 in.	N/A	N/A	9	8	18	16	32	29	30	30	N/A	N/A
20 10 1 F	2-1/2 in.	N/A	N/A	5	N/A	13	N/A	24	N/A	34	N/A	N/A	N/A
	3 in.	N/A	N/A	N/A	N/A	8	8	19	19	26	26	26	26
	1-1/2 in.	N/A	N/A	10	N/A	15	N/A	N/A	N/A	N/A	N/A	N/A	N/A
0 to -20°F	2 in.	N/A	N/A	5	N/A	12	10	22	19	30	27	N/A	N/A
0 to -20 F	2-1/2 in.	N/A	N/A	N/A	N/A	7	N/A	15	N/A	22	N/A	N/A	N/A

<sup>&</sup>lt;sup>1</sup> Refer to 99% Minimum Design Temperature table provided in the current edition of the ASHRAE Handbook-Fundamentals.

N/A

N/A

N/A

N/A

10

10

16

16

13

13

N/A

One 90° elbow is equivalent to 5 feet of straight vent pipe.

N/A

Two 45° elbows are equal to one 90° elbow.

One 45° elbow is equivalent to 2.5 feet of straight vent pipe.

PolyPro® poly-propylene vent pipe is a registered trademark of DuraVent®.

Innoflue® is a registered trademark of Centrotherm Eco Systems.

3 in.

<sup>&</sup>lt;sup>2</sup> Maximum Equivalent Vent Length permitted is defined as Total Length (linear feet) of vent pipe, plus equivalent length (ft.) of fittings, plus equivalent length (ft.) of termination.


VENTING NOTES - Concentric Terminations are equivalent to 5 ft. of straight pipe and should be included when measuring total pipe length.


#### **DIMENSIONS**


- <sup>1</sup> NOTE 60C and 60D size units that require air volumes over 1800 cfm must have one of the following:
- Single side return air <u>and</u> Optional Return Air Base with transition that must accommodate required 20 x 25 x 1 inch (508 x 635 x 25 mm) air filter to maintain proper velocity.
- 2. Bottom return air.
- 3. Return air from both sides.
- 4. Bottom and one side return air.


See Blower Performance Tables for additional information.

Optional Side Return Air Filter Kit is not for use with the Optional Return Air Base.

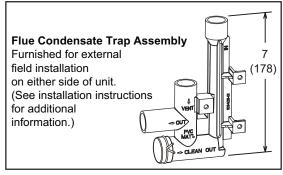

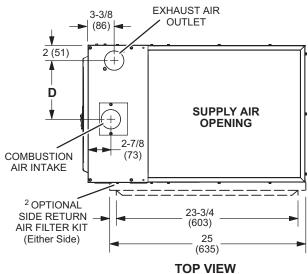

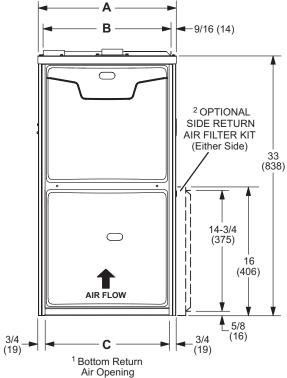

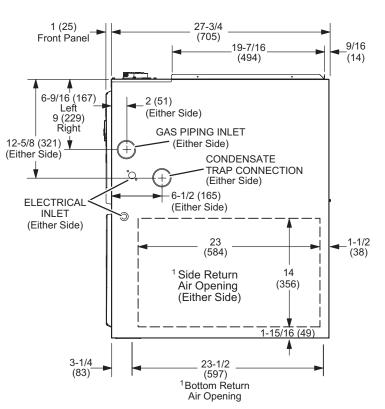


#### **FRONT VIEW**


SIDE VIEW


Model No.	A	A	E	3	(		in. 7-5/8	)	
woder no.	in.	mm	in.	mm	in.	mm	in.	mm	
ML196UH030XE36B ML196UH045XE36B ML196UH070XE36B ML196UH070XE48B	17-1/2	446	16-3/8	416	16	406	7-5/8	194	
ML196UH090XE36C ML196UH090XE48C ML196UH090XE60C ML196UH110XE60C	21	533	19-7/8	505	19-1/2	495	9-3/8	238	
ML196UH135XE60D	24-1/2	622	23-3/8	594	23	584	11-1/8	283	


#### LEFT-HAND AIR DISCHARGE

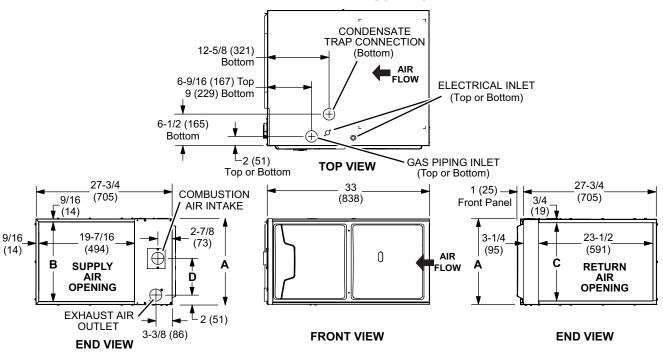


#### **RIGHT-HAND AIR DISCHARGE**

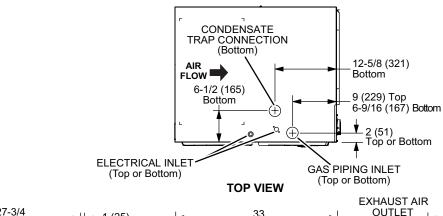

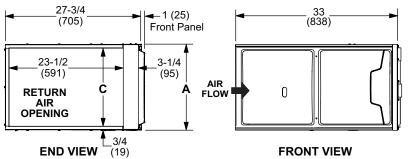


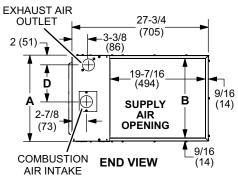

Model No.	-	A	E	3	(		D		
Model No.	in.	mm	in.	mm	in.	mm	in.	mm	
ML196UH030XE36B ML196UH045XE36B ML196UH070XE36B ML196UH070XE48B	17-1/2	446	16-3/8	416	16	406	7-5/8	194	
ML196UH090XE36C ML196UH090XE48C ML196UH090XE60C ML196UH110XE60C	21	533	19-7/8	505	19-1/2	495	9-3/8	238	
ML196UH135XE60D	24-1/2	622	23-3/8	594	23	584	11-1/8	283	

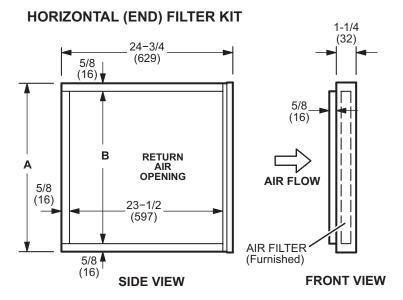


Furnace	Catalog		4	В			
Cabinet Width	Number	in.	mm	in.	mm		
В	87L96	18	457	16-3/4	425		
С	87L97	21	533	18-3/4	476		
D	87L98	25	635	23-3/4	603		

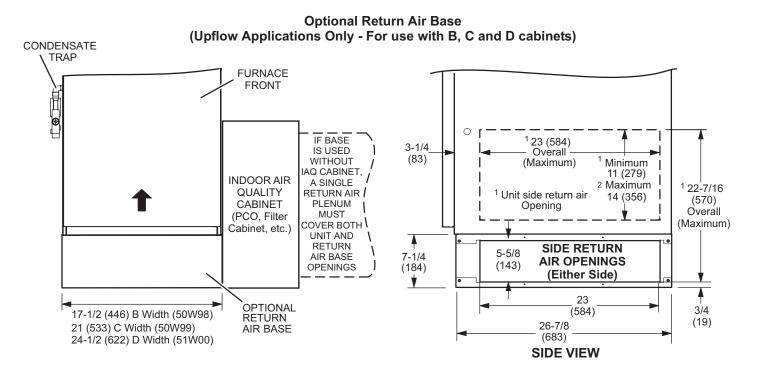

NOTE- Optional Side Return Air Filter Kits are not for use with Optional Return Air Base.

<sup>2</sup> To minimize pressure drop, the largest opening height possible, up to 14 in. (356 mm), is preferred.

<sup>&</sup>lt;sup>1</sup> Both the unit return air opening and the base return air opening must be covered by a single plenum or IAQ cabinet. Minimum unit side return air opening dimensions for units requiring 1800 cfm or more of air (W x H): 23 x 11 in. (584 x 279 mm). The opening can be cut as needed to accommodate plenum or IAQ cabinet while maintaining dimensions shown. Side return air openings must be cut in the field. There are cutting guides stenciled on the cabinet for the side return air opening. The size of the opening must not extend beyond the markings on the furnace cabinet.

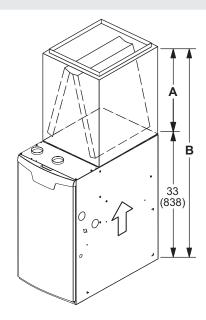


# **UPFLOW POSITION - CASED**

0112011100111	0.1 0,1022				
Model		Α		В	
CK40CT	C35/CX35	in.	mm	in.	mm
CK40CT-18/24B	C35/CX35-18/24B	16-1/2	419	49-1/2	1257
CK40CT-24B	C35/CX35-24B	18-1/2	470	51-1/2	1308
CK40CT-30B	C35/CX35-30B	22-1/2	572	55-1/2	1410
CK40CT-30/36B CK40CT-30/36C	C35/CX35-30/36B C35/CX35-30/36C	24-1/2	622	57-1/2	1461
CK40CT-36B	C35/CX35-36B	24-1/2	622	57-1/2	1461
CK40CT-48B CK40CT-48C	C35/CX35-48B C35/CX35-48C	27-1/2	699	60-1/2	1537
CK40CT-49C	C35/CX35-49C	29-1/2	749	62-1/2	1588
CK40CT-50/60C	C35/CX35-50/60C	27-1/2	699	60-1/2	1537
CK40CT-60C	CX35-60C	31-1/2	800	64-1/2	1638
CK40CT-60D	CX35-60D	29-1/2	749	62-1/2	1588


# **UPFLOW POSITION - UNCASED**


Model		Α		В	
CK40UT	C35	in.	mm	in.	mm
CK40UT-18/24B	C35-18/24B	14-1/8	359	47-1/8	1197
CK40UT-24B	C35-24B	16-3/8	416	49-3/8	1254
CK40UT-30B	C35-30B	20-3/4	527	53-3/4	1365
CK40UT-30/36B CK40UT-30/36C	C35-30/36B C35-30/36C	22-1/4	565	55-1/4	1403
CK40UT-36B	C35-36B	22-3/8	568	55-3/8	1407
CK40UT-48B CK40UT-48C	C35-48B C35-48C	26-1/4	667	59-1/4	1505
CK40UT-49C	C35-49C	28-1/2	724	61-1/2	1562
CK40UT-50/60C	C35-50/60C	25-7/8	657	58-7/8	1495
CK40UT-60C	C35-60C	30-5/8	778	63-5/8	1616
CK40UT-60D	C35-60D	28	711	61	1549

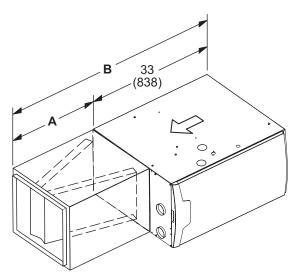


# **HORIZONTAL POSITION**


Model		Α		В	
CK40HT	CHX35	in.	mm	in.	mm
CK40HT-24B	CHX35-24B				
CK40HT-30B	CHX35-30B				
CK40HT-36B	CHX35-36B	26 1/2	672	59-1/2	1511
CK40HT-36C	CHX35-36C	20-1/2	073	39-1/2	1311
CK40HT-42C	CHX35-42C				
CK40HT-48C	CHX35-48C				
CK40CT-42B	CHX35-42B				
CK40CT-48B	CHX35-48B	21 1/2	880 64-1/2		1639
CK40CT-51/61C	CHX35-51/61C	31-1/2	000	04-1/2	1036
CK40CT-60D	CHX35-60D				

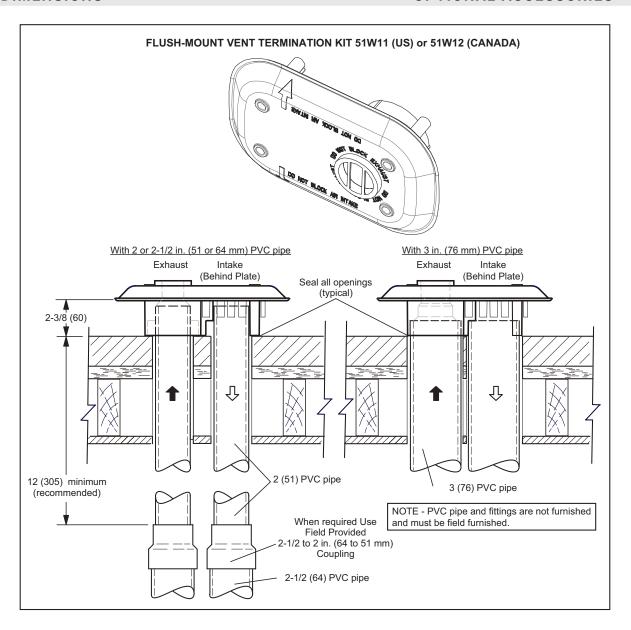

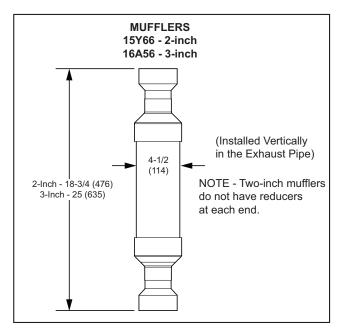

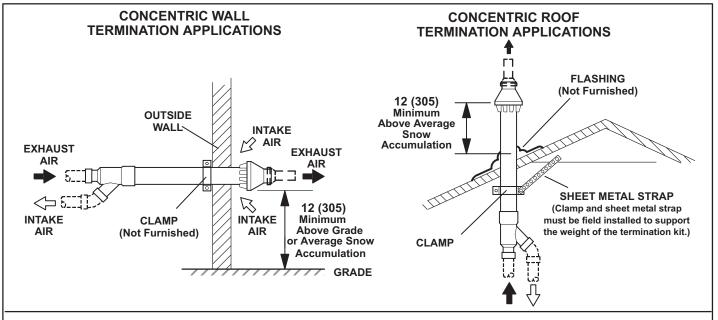


# 71M80 / 69M29 / 44W92 - 2 inch kits 60L46 / 44W93 - 3 inch kits See Installation Instructions for additional information.

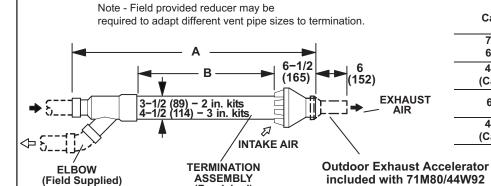


Cat. No.	A		В	
Cat. No.	in.	mm	in.	mm
71M80 69M29	33-3/8	848	16-3/4	425
44W92 (Canada)	29	737	15-1/2	394
60L46	38-7/8	987	21-3/16	538
44W93 (Canada)	36-1/8	918	19-1/2	495

(Furnished)

NOTE - Typical illustration for dimensions only. Design may vary depending on kit ordered.

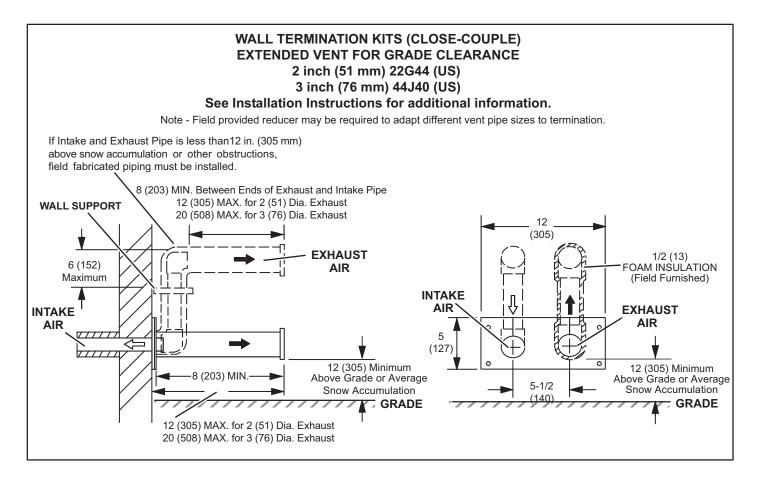

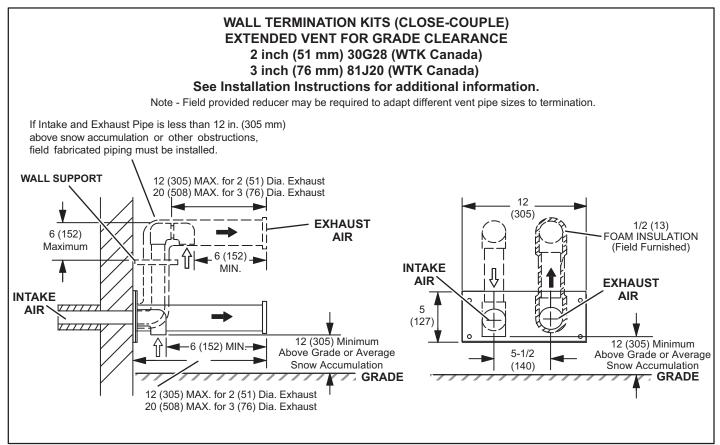

# ML196UH030XE36B PERFORMANCE (Less Filter)

External				Air Volume	/ Watts at \	/arious Blo	wer Speeds	3		
Static Pressure		High (Black)		<b>Medium-High</b> (Brown)		<b>lium</b> ue)		<b>m-Low</b> low)	Low (Red)	
in. w.g.	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.00	1402	332	1138	190	979	121	801	68	904	94
0.10	1374	346	1109	198	940	130	743	75	725	75
0.20	1346	360	1080	206	902	138	684	82	546	56
0.30	1321	370	1047	217	866	149	633	90	465	60
0.40	1295	384	1012	228	834	155	589	96	408	67
0.50	1265	395	985	235	794	165	540	107	351	72
0.60	1224	396	956	247	760	175	500	110	306	79
0.70	1152	379	929	256	730	180	453	120	266	84
0.80	1088	353	894	267	673	192	413	125	224	89
0.90	914	304	855	273	644	200	374	132		
1.00	755	262	694	243	607	208				

# ML196UH045XE36B PERFORMANCE (Less Filter)

External		Air Volume / Watts at Various Blower Speeds														
Static Pressure		<b>gh</b> ack)		<b>m-High</b> own)		<b>lium</b> ue)		<b>m-Low</b> low)	Low (Red)							
in. w.g.	cfm	Watts	cfm	Watts	cfm Watts		cfm	Watts	cfm	Watts						
0.00	1420	351	1267	245	1177	187	958	107	904	90						
0.10	1393	360	1231	257	1140	201	910	115	857	99						
0.20	1365	369	1195	268	1104	215	861	122	810	109						
0.30	1333	383	1166	281	1070	224	826	132	760	118						
0.40	1304	396	1140	293	1039	231	784	141	722	125						
0.50	1254	392	1116	302	1002	246	728	149	673	131						
0.60	1191	380	1089	311	969	255	687	157	625	141						
0.70	1115	354	1047	324	941	265	651	165	582	147						
0.80	987	318	976	311	906	273	601	170	537	155						
0.90	858	282	859	283	835	268	555	181	489	161						
1.00	713	251	703	248	713	243	497	189	444	168						

# ML196UH070XE36B PERFORMANCE (Less Filter)

External				Air Volume	/ Watts at \	/arious Blo	wer Speeds	•			
Static Pressure		<b>gh</b> ack)		<b>m-High</b> own)		<b>lium</b> ue)		<b>m-Low</b> low)	<b>Low</b> (Red)		
in. w.g.	cfm	Watts	cfm	Watts	cfm Watts		cfm	Watts	cfm	Watts	
0.00	1433	334	1295	247	1187	187	956	110	917	93	
0.10	1404	347	1256	256	1145	196	913	114	864	98	
0.20	1374	361	1218	266	1102	206	870	119	811	103	
0.30	1350	370	1192	278	1081	216	821	131	766	114	
0.40	1319	384	1157	290	1043	225	780	136	721	123	
0.50	1286	399	1133	300	1008	241	744	145	680	133	
0.60	1241	393	1104	312	982	249	702	153	637	138	
0.70	1169	373	1066	321	946	261	658	163	601	148	
0.80	1064	341	1013	315	914	269	616	172	552	152	
0.90	925	310	857	279	860	272	581	178	514	160	
1.00	753	261	705	244	754	253	515	191	478	167	

# ML196UH070XE48B PERFORMANCE (Less Filter)

External		Air Volume / Watts at Various Blower Speeds													
Static Pressure		<b>gh</b> ack)		<b>m-High</b> own)		<b>lium</b> ue)		<b>m-Low</b> low)	Low (Red)						
in. w.g.	cfm	Watts	cfm	Watts	cfm Watts		cfm	Watts	cfm	Watts					
0.00	1907	623	1751	468	1526	314	1364	225	1279	179					
0.10	1876	637	1708	480	1489	329	1320	234	1227	189					
0.20	1845	652	1665	492	1452	344	1275	243	1175	199					
0.30	1810	665	1640	508	1414	357	1245	254	1130	210					
0.40	1755	663	1601	520	1381	369	1186	268	1078	220					
0.50	1691	651	1570	536	1336	381	1154	280	1031	232					
0.60	1632	631	1528	550	1292	394	1106	290	979	246					
0.70	1537	600	1490	555	1249	408	1059	303	928	252					
0.80	1433	567	1400	537	1216	421	1011	313	890	263					
0.90	1321	527	1296	511	1169	433	969	325	833	273					
1.00	1204	493	1184	481	1118	435	919	336	781	283					

# ML196UH090XE36C PERFORMANCE (Less Filter)

External				Air Volume	/ Watts at \	/arious Blo	wer Speeds	3			
Static Pressure		<b>gh</b> ack)		<b>m-High</b> own)		<b>lium</b> ue)		<b>m-Low</b> low)	Low (Red)		
in. w.g.	cfm Watts		cfm	Watts	cfm Watts		cfm	Watts	cfm	Watts	
0.00	1508	334	1377	253	1211	174	948	89	939	87	
0.10	1478	345	1343	265	1181	186	920	99	824	79	
0.20	1448	356	1310	278	1152	197	892	109	709	72	
0.30	1418	369	1282	288	1123	210	847	115	661	76	
0.40	1353	380	1256	299	1095	219	812	125	627	85	
0.50	1362	392	1233	311	1064	227	782	131	575	91	
0.60	1340	403	1203	317	1040	237	744	140	540	99	
0.70	1308	413	1180	327	1004	244	717	150	487	103	
0.80	1266	412	1151	336	969	255	668	156	444	113	
0.90	1202	393	1116	345	948	264	639	165	406	116	
1.00	1087	354	1058	341	911	270	581	170	361	124	

# ML196UH090XE48C PERFORMANCE (Less Filter)

External				Air Volume	/ Watts at \	arious Blo	wer Speeds	<b>;</b>			
Static Pressure	Static High			<b>m-High</b> own)		<b>lium</b> ue)		<b>m-Low</b> low)	Low (Red)		
in. w.g.	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	
0.00	1723	379	1511	248	1389	191	1302	169	1194	136	
0.10	1684	395	1480	264	1356	209	1269	180	1147	142	
0.20	1645	410	1448	281	1323	226	1236	191	1101	149	
0.30	1626	422	1414	295	1294	238	1195	204	1070	162	
0.40	1593	435	1381	307	1245	253	1158	213	1022	172	
0.50	1564	451	1347	322	1210	261	1120	225	983	182	
0.60	1529	465	1308	335	1175	274	1084	237	943	193	
0.70	1481	463	1288	346	1143	288	1039	250	897	204	
0.80	1395	442	1247	359	1103	297	1003	262	860	214	
0.90	1290	412	1211	369	1067	309	960	272	813	225	
1.00	1123	361	1097	351	1011	319	917	281	772	230	

# ML196UH090XE60C PERFORMANCE (Less Filter)

External		Air Volume / Watts at Various Blower Speeds														
Static Pressure		<b>gh</b> ack)		<b>m-High</b> own)	Med (BI	<b>lium</b> ue)		<b>m-Low</b> low)	Low (Red)							
in. w.g.	cfm	Watts	cfm Watts		cfm Watts		cfm Watts		cfm	Watts						
0.00	2107	618	1849	416	1699	321	1608	262	1433	196						
0.10	2067	631	1820	430	1663	333	1566	276	1390	206						
0.20	2027	644	1791	444	1627	345	1524	291	1347	216						
0.30	1992	660	1741	460	1583	355	1485	302	1306	223						
0.40	1965	673	1703	473	1546	369	1439	313	1254	235						
0.50	1938	691	1681	483	1503	383	1395	326	1210	245						
0.60	1901	706	1635	500	1462	395	1359	337	1158	257						
0.70	1871	719	1607	512	1428	405	1315	349	1112	264						
0.80	1815	708	1559	527	1387	417	1273	358	1071	275						
0.90	1711	679	1536	538	1349	429	1229	371	1018	285						
1.00	1629	649	1485	551	1309	441	1188	380	963	293						

# ML196UH110XE60C PERFORMANCE (Less Filter)

	Air Volume / Watts at Different Blower Speeds																				
											Singl	e Side	Retu	rn Air	– Air v	volume	s in <b>b</b>	old (ov	/er 18	00	
External	Botto	m Ret	urn A	ir, Sid	e Reti	urn Air	with	Retur	n Air i	from	cfm) require Optional Return Air Base and field fabricated										
Static	Both Sides or Return Air from Bottom and One Side.											transition to accommodate 20 x 25 x 1 in. air filter in order to									
Pressure												maintain proper air velocity.									
in. w.g.	High		Medium-		Med	dium		lium-	L	w	Hi	igh		lium-	Med	dium		lium-	Le	w	
		ack)		<b>gh</b> own)	(Bl	lue)		ow llow)	(R	ed)		ack)	<b>High</b> (Brown)		(Blue)		Low (Yellow)		(Red)		
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	
0.00	2197	640	1964	429	1791	330	1658	277	1488	210	2122	634	1892	424	1722	333	1635	266	1452	194	
0.10	2160	658	1911	446	1742	346	1620	291	1438	220	2093	644	1858	438	1688	341	1590	281	1410	205	
0.20	2124	676	1858	464	1693	361	1582	306	1388	230	2064	655	1824	451	1653	349	1546	296	1367	216	
0.30	2084	688	1822	477	1658	373	1536	314	1336	239	2033	669	1788	467	1619	363	1511	306	1321	228	
0.40	2051	703	1797	492	1615	386	1497	328	1288	250	1996	686	1749	482	1580	376	1473	322	1275	239	
0.50	2024	718	1754	508	1581	397	1452	342	1247	261	1971	704	1709	498	1543	392	1436	330	1230	251	
0.60	1993	734	1716	519	1537	413	1414	353	1203	270	1941	720	1676	512	1503	403	1387	347	1184	262	
0.70	1942	742	1680	535	1500	423	1381	361	1157	277	1903	734	1644	524	1468	419	1351	356	1140	271	
0.80	1877	721	1644	547	1465	434	1342	372	1121	288	1855	732	1606	542	1424	430	1313	369	1105	282	
0.90	1789	693	1614	563	1423	450	1294	386	1061	300	1780	707	1571	554	1386	443	1273	380	1061	293	
1.00	1696	654	1580	573	1395	461	1267	396	1014	310	1675	670	1535	569	1352	456	1238	392	1019	302	

# ML196UH135XE60D PERFORMANCE (Less Filter)

	Air Volume / Watts at Different Blower Speeds																				
											Singl	e Side	Retu	rn Air	– Air	volume	s in <b>b</b>	old (ov	/er 18	00	
External	Botto	m Ret	urn A	ir, Sid	e Reti	u <mark>rn Ai</mark> ı	with	Retur	n Air i	from	cfm) require Optional Return Air Base and field fabricated										
Static	Both	Sides	eturn A	m Bot	nd On	e Sid	е.	transition to accommodate 20 x 25 x 1 in. air filter in order to									der to				
Pressure													maintain proper air velocity.								
in. w.g.	Hi	gh	Medium-		Medium		_	lium-	L	ow	Hi	gh		lium-	Med	dium	-	lium-	Le	ow	
•	ı	ack)		i <b>gh</b> own)	(Bl	lue)		ow llow)	(R	ed)	I	ack)		<b>gh</b> own)		lue)		<b>ow</b> llow)	(R	ed)	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	
0.00	2458	883	2280	697	2069	539	1856	391	1667	296	2377	865	2210	674	2033	518	1808	381	1661	275	
0.10	2425	901	2247	714	2033	556	1821	406	1633	306	2340	883	2167	694	1995	534	1780	392	1611	291	
0.20	2392	919	2214	730	1998	572	1787	420	1598	316	2303	901	2125	715	1956	551	1752	402	1560	306	
0.30	2361	933	2179	752	1954	588	1745	436	1549	331	2277	912	2095	733	1920	566	1711	417	1527	316	
0.40	2326	956	2151	771	1931	599	1694	450	1508	343	2253	933	2067	748	1882	581	1670	433	1479	329	
0.50	2291	971	2120	785	1885	617	1666	462	1465	356	2215	951	2037	762	1850	595	1634	444	1444	342	
0.60	2249	990	2078	802	1852	633	1622	476	1420	366	2188	967	2007	781	1816	608	1601	460	1404	355	
0.70	2223	1006	2049	819	1815	646	1583	489	1376	378	2159	989	1973	797	1779	627	1565	474	1363	368	
0.80	2181	1001	2002	832	1782	660	1548	501	1340	388	2127	1004	1938	815	1742	638	1525	487	1315	380	
0.90	2061	928	1974	846	1743	678	1507	515	1298	401	2096	1023	1906	828	1716	655	1487	501	1276	390	
1.00	1937	869	1933	857	1680	703	1478	527	1263	414	1997	936	1870	840	1670	670	1441	513	1237	399	

REVISIONS								
Sections	Description of Change							
Dimensions	Updated Furnace/Coil Combined Dimension data for new CK40 coils.							
Override Accessories	Added Refrigerant Detection System (RDS) Components.							











Visit us at <a href="https://www.Lennox.com">www.Lennox.com</a>
For the latest technical information, <a href="https://www.LennoxPros.com">www.LennoxPros.com</a>
Contact us at 1-800-9-LENNOX