

LENNOX POWERED BY SAMSUNG WIND/HAIL GUARD (BACK)

INSTALLATION MANUAL

M1GARD01-1P

M1GARD02-1P

M1GARD03-1P

M1GARD04-1P

M1GARD05-1P

M1GARD06-1P

M1GARD13-1P

M1GARD14-1P

WIND/HAIL GUARD INSTALLATION INSTRUCTIONS (BACK)

WIND/HAIL GUARD MODELS: M1GARD01-1P, M1GARD02-1P, M1GARD03-1P, M1GARD04-1P, M1GARD05-1P, M1GARD06-1P, M1GARD13-1P, M1GARD14-1P

CAUTION: This product has sharp edges. To prevent injury, wear protective clothing, safety glasses or goggles, and gloves during assembly and installation.

NOTICE: Use extreme care during installation to avoid damaging the outdoor unit coil.


The back hail guard is designed to be placed on the intake side (back exposed coil) of the condensing unit. Due to model changes, visit www.lennox.com for the latest version of the hail guard submittal with compatibility tables.

PARTS INCLUDED


Back Wind/Hail Guard
Installation Screws

WIND/HAIL GUARD INSTALLATION INSTRUCTIONS

1. This guard is compatible with various condensing unit models. Before attaching the hail guard, inspect the condensing unit to verify the proximity of the condenser coil and wires to the sheet metal cabinet. **CARE MUST BE TAKEN TO AVOID PUNCTURING THE COIL OR DAMAGING WIRES WITH HAIL GUARD SCREWS. INSTALLATION REQUIRES TWO PEOPLE.** Take care not to penetrate internal chassis partitions.
2. Remove the outdoor air temperature sensor from the coil guard mounting clip. Remove the factory coil guard from the back of the unit and discard it. Save the screws for later use.
3. Align the guard to the exposed coil at the back of the condensing unit. Carefully place the guard against the outdoor unit, aligning its screw holes with those from the coil guard removed in Step 2.

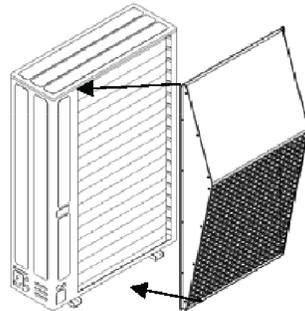

4. Carefully reinstall the saved screws from Step 2 on the left and right sides of the guard.

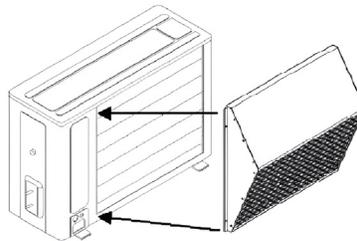

5. After inspecting inside the unit for condenser coil and wire locations, install provided installation screws as needed into the extra mounting holes to better secure the hail guard to the condensing unit. Take extra care on the left side of the guard.
6. Route the outdoor air temperature sensor through the sensor hole noted below. Make sure the sensor tube is pointing downward to prevent water entry into the tube.

