

**THIS MANUAL MUST BE LEFT WITH THE
HOMEOWNER FOR FUTURE REFERENCE**

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier.

⚠ IMPORTANT

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFCs, HCFCs and HFCs) as of July 1, 1992. Approved methods of recovery, recycling or reclaiming must be followed. Fines and/or incarceration may be levied for noncompliance.

⚠ CAUTION

As with any mechanical equipment, contact with sharp sheet metal edges can result in personal injury. Take care while handling this equipment and wear gloves and protective clothing.

IMPORTANT: Special procedures are required for cleaning the aluminum coil in this unit. See page 8 in this instruction for information.

⚠ WARNING

Maximum Altitude of application is 3200m above sea level.

⚠ WARNING

Every working procedure that affects safety means shall only be carried out by competent persons. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

INSTALLATION INSTRUCTIONS

CRX35 Series Coils – R410A

EVAPORATOR COILS

Service Coil for Indoor Coil Replacement Only

(US applications)

For Servicing Existing Equipment Only

(US Applications)

508355-02 67898200

01/2025

Table of Contents

Model Number Identification	2
Dimensions	3
Plenum Installation	4
Refrigerant Line Connections	4
Brazing Coil Connections	4
Metering Device Installation	5
Condensate Drain Installation	5
Blower Speed Adjustment	7
Maintenance	8
Air Resistance	9
Decommissioning	9

NOTE – This unit CRX35 is a *PARTIAL UNIT AIR CONDITIONER*, complying with *PARTIAL UNIT* requirements of this Standard, and must only be connected to other units that have been confirmed as complying to corresponding *PARTIAL UNIT* requirements of this Standard, UL 60335-2-40/CSA C22.2 No. 60335-2-40, or UL 1995/CSA C22.2 No 236.

Partial units shall only be connected to an appliance suitable for the same refrigerant.

Shipping and Packing List

Package 1 of 1 contains the following:

- 1 - evaporator coil

Check equipment for shipping damage. If you find any damage, immediately contact the last carrier.

General Information


The CRX35 coil includes an externally equalized factory-installed HFC-410A check/expansion valve.

The coil drain pan has a maximum service temperature of 500°F. The drain pan must be at least 2" away from a standard gas-fired furnace heat exchanger and at least 4" away from any drum-type or oil-fired furnace heat exchanger.

Closer spacing may damage the drain pan and cause a leak. Refer to the Product Specification bulletin (EHB) for the proper use of these coils with specific furnaces, air handlers and line sets.

These instructions are intended as a general guide and do not supersede local or national codes in any way. Authorities who have jurisdiction should be consulted before installation.

Model Number Identification

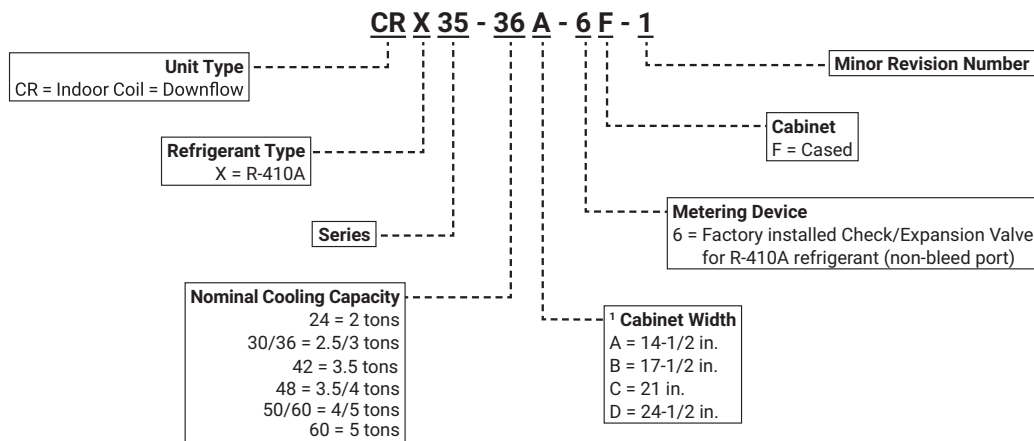

SPECIFICATIONS

2 TO 3 TON


Size	24A	24B	30/36B	30/36C
Nominal size - Tons	2	2	2.5 / 3	2.5 / 3
Furnace Cabinet Matching Letter Width	A	B	B	C
Coil & Furnace Cabinet Width - in.	14-1/2	17-1/2	17-1/2	21
Connections	Liquid line (OD) sweat - in.	3/8	3/8	3/8
	Suction line (OD) sweat - in.	7/8	7/8	7/8
	Condensate drain (FPT) - in.	(2) 3/4	(2) 3/4	(2) 3/4
Indoor Coil	Net face area sq. ft.	4.08	4.08	4.67
	Tube diameter - in.	3/8	3/8	3/8
	Rows	3	3	3
	Fins - in.	14	14	14
Shipping Data - lbs.	44	51	52	60

SPECIFICATIONS

3.5 TO 5 TON


Size	42B	48C	50/60C	60D
Nominal size - Tons	3.5	4	4 / 5	5
Furnace Cabinet Matching Letter Width	B	C	C	D
Coil & Furnace Cabinet Width - in.	17-1/2	21	21	24-1/2
Connections	Liquid line (OD) sweat - in.	3/8	3/8	3/8
	Suction line (OD) sweat - in.	7/8	7/8	7/8
	Condensate drain (FPT) - in.	(2) 3/4	(2) 3/4	(2) 3/4
Indoor Coil	Net face area sq. ft.	5.83	6.42	7.00
	Tube diameter - in.	3/8	3/8	3/8
	Rows	3	3	3
	Fins - in.	14	14	14
Shipping Data - lbs.	65	69	71	75

Dimensions

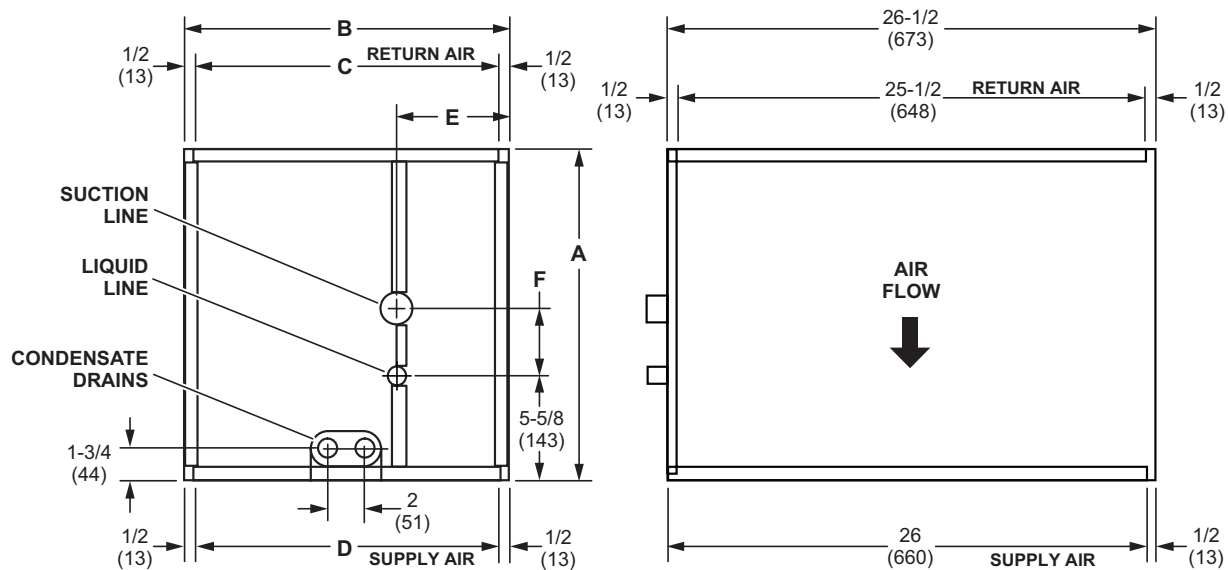

Size	A (Height)		B (Width)		C		D		E		F	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
24A	18	457	14 -1/2	368	13-1/2	343	13-1/2	343	4-5/8	117	3-5/8	92
24B	18	457	17-1/2	445	16-1/2	419	16-1/2	419	6-1/8	155	3-5/8	92
30/36B	23-1/2	597	17-1/2	445	16-1/2	419	16-1/2	419	6-1/8	155	4-3/4	121
30/36C	23-1/2	597	21	533	20	508	20	508	7-7/8	200	4-3/4	121
42B	23-1/2	597	17-1/2	445	16-1/2	419	16-1/2	419	6-1/8	155	6-3/8	162
48C	27-1/2	699	21	533	20	508	20	508	7-7/8	200	8-5/8	219
50/60C	27-1/2	699	21	533	20	508	20	508	7-7/8	200	10	254
60D	27-1/2	699	24-1/2	622	23-1/2	597	23-1/2	597	9-5/8	244	10-1/2	267

DIMENSIONS - FURNACE/COIL COMBINED DIMENSIONS

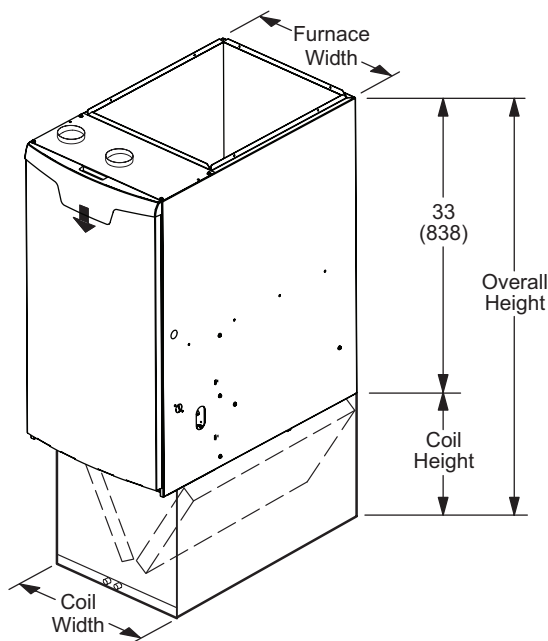

Size	Coil Width		Furnace Width		Coil Height		Overall Height	
	in.	mm	in.	mm	in.	mm	in.	mm
24A	14-1/2	368	14-1/2	368	18	457	51	1295
24B	17-1/2	445	17-1/2	445	18	457	51	1295
30/36B	17-1/2	445	17-1/2	445	23-1/2	597	56-1/2	1435
30/36C	21	533	21	533	23-1/2	597	56-1/2	1435
42B	17-1/2	445	17-1/2	445	23-1/2	597	56-1/2	1435
48C	21	533	21	533	27-1/2	699	60-1/2	1537
50/60C	21	533	21	533	27-1/2	699	60-1/2	1537
60D	24-1/2	622	24-1/2	622	27-1/2	699	60-1/2	1537

Dry Air Charge Release

The CRX35 coils are shipped with a 10 psi dry air holding charge. Puncture the suction line rubber plug to release the charge. Remove the rubber plug.

NOTE - If there is no pressure when the rubber plug is punctured, check the coil for leaks before installing the coil.

Loosen and remove the liquid line compression fitting. Remove and discard the plug which is in the distributor body.

Plenum Installation

See table 1 for the dimensions of the floor opening required to accommodate the supply air opening and the plenum. If the unit is installed against a wall, the rear edge of the opening must be at least 1" (25 mm) from the wall. Cut an appropriately sized opening.

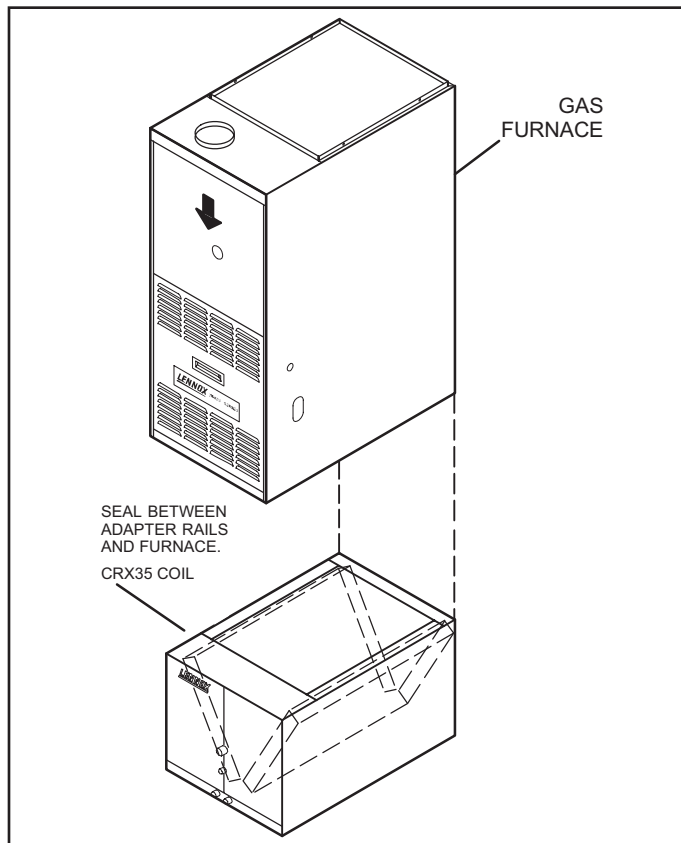


FIGURE 1. Gas Furnace and Coil

- 1 - Lower plenum through floor opening – Align the base of the unit with the matching plenum, then lower the unit over the plenum. The coil cabinet must be either level or sloped slightly toward the drain outlet and secured and sealed to the plenum.

If the furnace and coil cabinet are the same size, skip to step 3.

TABLE 1. Floor Opening Dimensions

CRX35 Unit	Side to Side	Front to Rear
-24A, -24B, -30/36B	14-1/4" (394mm)	23" (584mm)
-30/36C, -42B, -48C	19" (483mm)	
-50/60C, -60D	22-1/2" (571mm)	

CAUTION

Do not install screws through the drain pan.

CAUTION

If the furnace flange height is greater than 5/8" (16 mm), damage may occur to coil. Notch flange so that it does not contact coil slabs.

WARNING

There must be an airtight seal between the top of the furnace and the return air plenum. Use fiberglass sealing strips, caulking, or equivalent sealing method between the plenum and the furnace cabinet to ensure a tight seal. Return air must not be drawn from a room where this furnace or any gas-fueled appliance (i.e., water heater), or carbon monoxide-producing device (i.e., wood fireplace) is installed.

- 2 - **Sealing** – Seal between the furnace cabinet and the coil cabinet to prevent air leaks.
- 3 - As you lower the furnace onto the coil, align the flanges of the furnace and the the coil cabinet.

Air Leakage

All indoor cabinets **MUST** be taped after installation to seal against any air leaks. System performance and efficiency will be reduced if air leakage exists.

Refrigerant Line Connections

The refrigerant line sets should be sized according to the recommendations given in the condensing unit or heat pump installation instructions (see table 2 for sweat connection sizes). A field-provided adapter may be required to match line set connections.

TABLE 2. Refrigerant Line Connection Sizes - in (mm)

Model	Suction (Vapor) Line Sweat Size	Liquid Line Sweat Size
All Sizes	7/8 (22.0)	3/8 (9.5)
NOTE – Some applications may require a field-provided 7/8" to 1-1/8" adapter		

NOTE - When installing refrigerant lines longer than 50 feet, see the *Lennox Refrigerant Piping Design and Fabrication Guidelines, CORP. 9351-L9*, or contact Lennox Technical Support Product Applications for assistance.

Brazing Coil Connections

- 1 - Place a field-provided heat shield, such as a wet rag, against the piping plate and around the piping stubs, and sweat in the suction line. The heat shield must be in place to guard against heat damage to the paint.
- 2 - Slide the liquid line compression nut onto the provided liquid line stub. Insert the field-supplied liquid line into the liquid line stub for brazing.

- 3 - Braze liquid line and coil connections. Use a silver alloy brazing rod (5 or 6 percent silver alloy for copper-to-copper connections or 45 percent silver alloy for copper-to-brass or copper-to-steel connections).
- 4 - Remove the heat shield after brazing and allow the connections to cool.

Refrigerant system installations shall be installed and tested per ASHRAE Standard 15.2, Section 10.0 (latest edition).

Metering Device Installation

CRX35 coils include a factory-installed HFC-410A check/expansion valve metering device.

Connect the properly sized field-provided liquid line to the liquid line stub as shown in figure 2 using one of the following procedures:

- 1 - Position the properly sized refrigerant piping and make the brazed connection following the brazing guidelines.
- 2 - Do not remove the water-saturated rags from the cabinet and piping until the piping has cooled completely.

OR

- 1 - Cut the copper liquid line on a vertical or horizontal section. Use a field-provided coupling to join the properly sized field-provided refrigerant piping and the liquid line stub on the coil. Follow the brazing guidelines.
- 2 - Do not remove the water-saturated rags from the cabinet and piping until the piping has cooled completely.

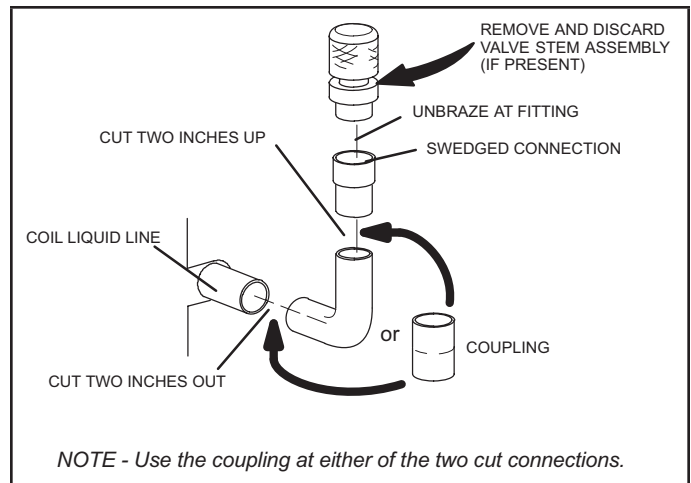


FIGURE 2. CRX35 Liquid Line Connections

Condensate Drain Installation

! IMPORTANT

After removal of drain pan plug(s), check drain hole(s) to verify that drain opening is fully open and free of any debris. Also check to make sure that no debris has fallen into the drain pan during installation that may plug up the drain opening.

PLEASE READ IMPORTANT ISSUES CONCERNING BRAZING OPERATIONS ON PREVIOUS PAGE BEFORE PROCEEDING.

NOTE - REFER TO OUTDOOR UNIT INSTALLATION INSTRUCTIONS FOR REFRIGERANT PIPING SIZE REQUIREMENTS.

NOTE - Use silver alloy brazing rods with five or six percent minimum silver alloy for copper-to-copper brazing, 45 percent alloy for copper-to-brass and copper-to-steel brazing.

A REMOVE ACCESS PANEL


B REMOVE RUBBER PLUG FROM BOTH LIQUID AND SUCTION LINES

NOTE - CRX35 SERIES UNITS USE NITROGEN OR DRY AIR AS A HOLDING CHARGE. IF THERE IS NO PRESSURE WHEN THE RUBBER PLUGS ARE REMOVED, CHECK THE COIL FOR LEAKS BEFORE INSTALLING.

C EITHER REMOVE OR PUSH PIPE WRAPPING BACK THROUGH HOLE IN PIPING PLATE BEFORE LINE SET CONNECTION AND BRAZING.

D CONNECT PIPES

NOTE - REFRIGERANT LINE SETS SHOULD BE ROUTED TO ALLOW FILTER ACCESSIBILITY.


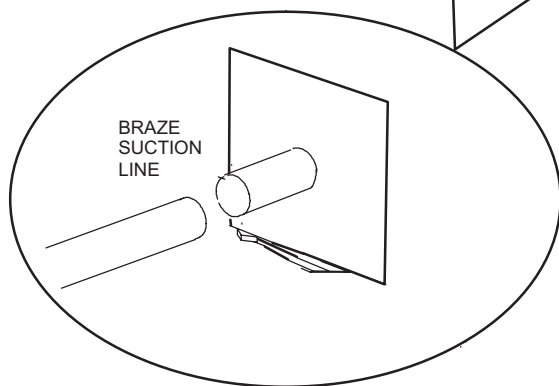


F PLACE A WET RAG AGAINST PIPING PLATE AND AROUND THE SUCTION LINE CONNECTION.

G BRAZE CONNECTION. ALLOW PIPE TO COOL BEFORE REMOVING WET RAG FROM CTXV SENSING BULB AND PIPING PANEL AREA.

E CONNECT GAUGES AND START NITROGEN FLOW

FLOW REGULATED NITROGEN (AT 1 TO 2 PSIG) THROUGH THE REFRIGERATION GAUGE SET INTO THE VALVE STEM PORT CONNECTION ON THE OUTDOOR UNIT LIQUID LINE SERVICE VALVE AND OUT OF THE VALVE STEM PORT CONNECTION ON THE SUCTION SERVICE VALVE.

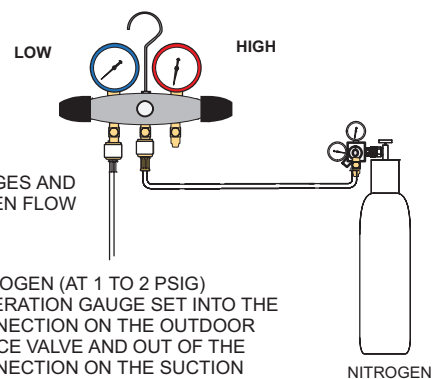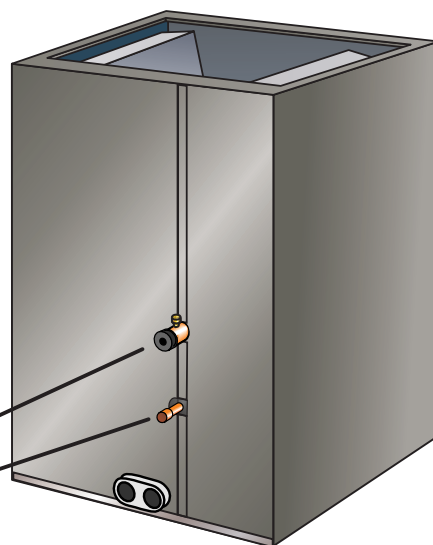

REFER TO INSTRUCTIONS PROVIDED WITH OUTDOOR UNIT FOR LEAK TESTING, EVACUATING AND CHARGING PROCEDURES

FIGURE 3. Brazing Connections

MAIN DRAIN

Connect the main drain and route downward to drain line or sump. Do not connect drain to a closed waste system. See figure 4 for typical drain trap configuration.

OVERFLOW DRAIN

The overflow drain **MUST** be connected and routed to a overflow drain line

If the overflow drain is not connected, it must be plugged with field-provided cap or plug.

BEST PRACTICES

The following practices are recommended to ensure better condensate removal:

- Main and overflow drain lines should NOT be smaller than drain connections at drain pan.
- Overflow drain line should run to an area where homeowner will notice drainage.
- It is recommended that the overflow drain line be vented and a trap installed. Refer to local codes.

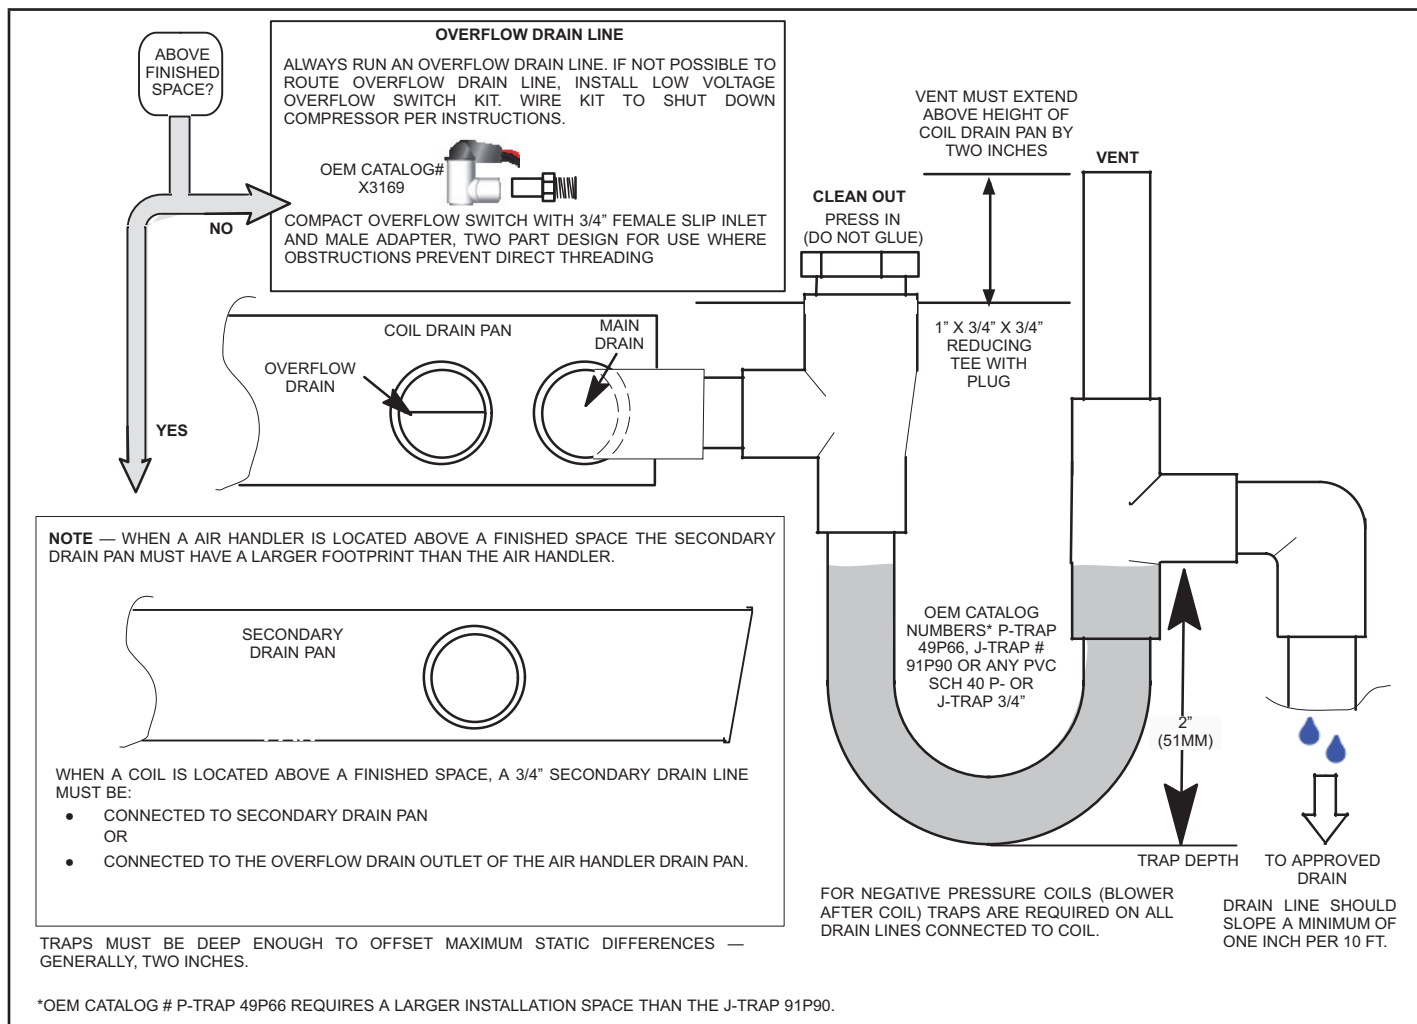


FIGURE 4. Typical Main and Overflow Drain Installations

Blower Speed Adjustment

Proper air volume **MUST** be provided over the evaporator coil. To ensure that the static pressure is within the proper range, take a draft gauge reading as follows:

⚠ CAUTION

Access panel must be removed before drilling air test holes.

- 1 - Remove access panel.
- 2 - Drill two 5/16" (8 mm) air test holes in the right front access panel; hole locations are shown in figure 5. Replace the panel.
- 3 - Connect draft gauge. Zero end of draft gauge scale connects to air entering hole of the coil. Insert gauge hoses into test holes about 5/16" (8 mm). Seal around holes with permagum.
- 4 - Turn off power to the outdoor unit, then set the thermostat for high stage cooling.

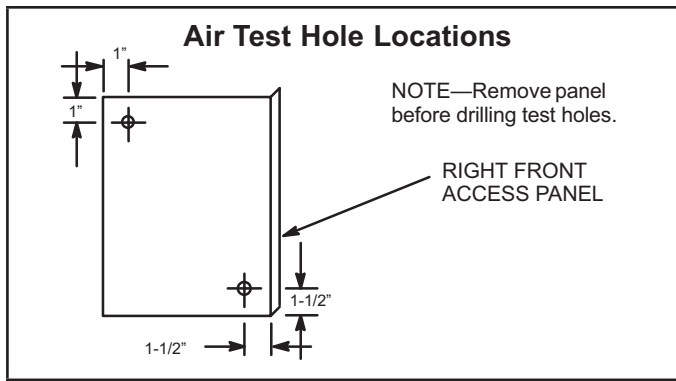


FIGURE 5. Air Test Hole Locations

- 5 - Table 3 lists the range of air volumes and equivalent draft gauge readings for this unit. Observe draft gauge reading. If reading is above required air volume, decrease blower speed. Refer to furnace wiring diagram for changing direct drive blower speed. Do not exceed maximum air volume as indicated in diagram blower speed table.
- 6 - After required draft gauge readings are obtained, remove draft lines and seal air test holes.
- 7 - Set the room thermostat to desired temperature.

Maintenance

NOTICE !

Failure to follow instructions will cause damage to the unit.

This unit is equipped with an aluminum coil. Aluminum coils may be damaged by exposure to solutions with a pH below 5 or above 9. The aluminum coil should be cleaned using potable water at a moderate pressure (less than 50psi). If the coil cannot be cleaned using water alone, Lennox recommends use of a coil cleaner with a pH in the range of 5 to 9. The coil must be rinsed thoroughly after cleaning.

A trained technician or service agency must perform maintenance and service on equipment. At the beginning of each heating or cooling season, indoor coils should be inspected to determine whether the coil requires cleaning.

CLEANING THE COIL

- 1 - Remove the coil from the cabinet or plenum, and take the coil to an appropriate place to clean it.
- 2 - Vacuum or brush the coil to remove matted and surface debris from the fins. Use vacuum attachments and/or brushes that are non-destructive to fins.

- 3 - If oil deposits are present, spray the coil with a mild coil cleaner with a pH in the range of 5 to 9 to soften deposits. Do not leave the coil cleaner on the coil for more than 10 minutes. Flush the coil thoroughly with potable water.
- 4 - Spray the coil at a vertical angle of 30 to 45 degrees with a constant stream of water at moderate pressure. A pressure washer with a fan nozzle will work best. Do not spray the coil from a horizontal direction.
- 5 - Direct the spray so that any debris is washed out of the coil. For most residential units, hot water is not necessary.

NOTE - Attempting to back flush from the inside of the coil will require removing parts from the unit, and it may be very difficult to flush the whole coil surface. Attempting to blow water through a coil will slow the water stream and reduce the flushing action of the outer fin surface.

- 6 - Replace the coil into the cabinet or plenum. Ensure that you have followed the proper procedure for routing and securing the refrigerant tubing.

Use of Coil-Furnace System During Construction

Lennox does not recommend the use of its coil-furnace system during any phase of construction. Very low return air temperatures, harmful vapors and operation of the unit with clogged or misplaced filters will damage the unit.

Coils may be used for heating (heat pumps) or cooling of buildings under construction, if the following conditions are met:

- A room thermostat must control the air handler. The use of fixed jumpers is not allowed.
- Air filter must be installed in the system and must be maintained during construction.
- Air filter must be replaced upon construction completion.
- The evaporator coil, furnace supply fan assembly and duct system must be thoroughly cleaned following final construction clean-up.
- All coil and furnace operating conditions must be verified according to these installation instructions.

TABLE 3. Air Resistance

Size	Air Volume	Total Resistance	
		Dry Coil	Wet Coil
	cfm	in. w.g.	in. w.g.
24A	400	0.08	0.09
	600	0.16	0.18
	800	0.29	0.33
	1000	0.45	0.49
24B	600	0.11	0.13
	800	0.18	0.19
	1000	0.27	0.29
	1200	0.35	0.39
	1400	0.47	0.51
30/36B	600	0.1	0.12
	800	0.15	0.18
	1000	0.24	0.27
	1200	0.32	0.36
	1400	0.43	0.47
30/36C	600	0.05	0.08
	800	0.09	0.12
	1000	0.13	0.17
	1200	0.17	0.23
	1400	0.24	0.30
42B	600	0.08	0.10
	800	0.12	0.14
	1000	0.18	0.22
	1200	0.25	0.30
	1400	0.34	0.39
	1600	0.43	0.49

Size	Air Volume	Total Resistance	
		Dry Coil	Wet Coil
	cfm	in. w.g.	in. w.g.
48C	800	0.09	0.10
	1000	0.11	0.13
	1200	0.15	0.18
	1400	0.21	0.23
	1600	0.26	0.30
	1800	0.34	0.37
	2000	0.4	0.44
50/60C	800	0.09	0.11
	1000	0.12	0.14
	1200	0.16	0.20
	1400	0.22	0.24
	1600	0.27	0.32
	1800	0.33	0.38
	2000	0.4	0.46
60D	800	0.09	0.08
	1000	0.13	0.13
	1200	0.18	0.16
	1400	0.16	0.21
	1600	0.2	0.26
	1800	0.24	0.32
	2000	0.29	0.39

Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely.

Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before starting decommissioning.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.

- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not overfill cylinders (no more than 80% volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.